 
 



Ref No	Part No	Description
1	11401-42830	Gasket Set
2	11141-18A00	. Gasket, Cylinder Head
3	11241-42A01	. Gasket, Cylinder
3	11241-42A10	. Gasket, Cylinder
4	11482-05211	. Gasket, Clutch Cover
5	11483-05312	. Gasket, Magneto Cover
6	12837-19B10	. Gasket, Tensioner Adjuster
7	14181-42A00	. Gasket, Exhaust Pipe
8	37941-33D00	. O Ring, Fail Safe Switch
9	09168-06023	. Gasket (5.8x13x1.2)
10	09168-08016	. Gasket (8.2x14x1.6)
11	09168-08021	. Gasket (8.5x17x2.3)
12	09168-14004	. Gasket (14.1x18x1.5)
12	09168-14002	. Gasket (13.8x18.8x4.8)
13	09280-09005	. O Ring (d:1.9,id:8.6)
14	09280-13004	. O Ring (d:1.9,id:13.0)
15	09280-17003	. O Ring (d:3.1,id:16.8)
16	09280-21008	. O Ring (d:2.5,id:21.0)
17	09280-22008	. O Ring (d:3.1,id:22.7)
18	09280-30001	. O Ring (d:3.0,id:29.5)
19	09280-35001	. O Ring (d:1.9,id:34.6)
20	09280-54001	. O Ring (d:2.4,id:52.6)
21	09280-60005	. O Ring (d:2.4,id:60.5)


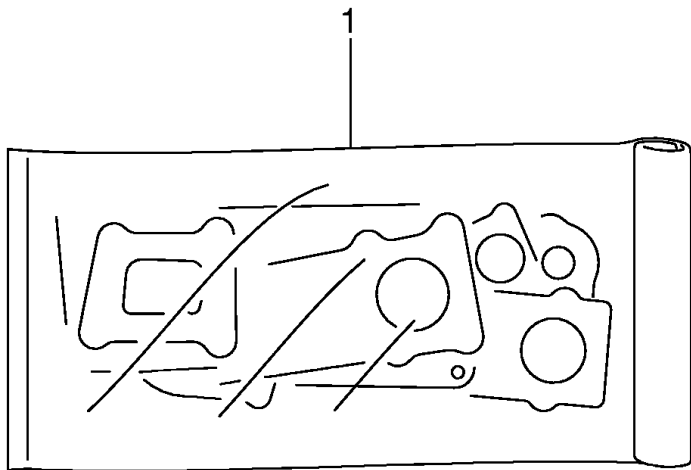


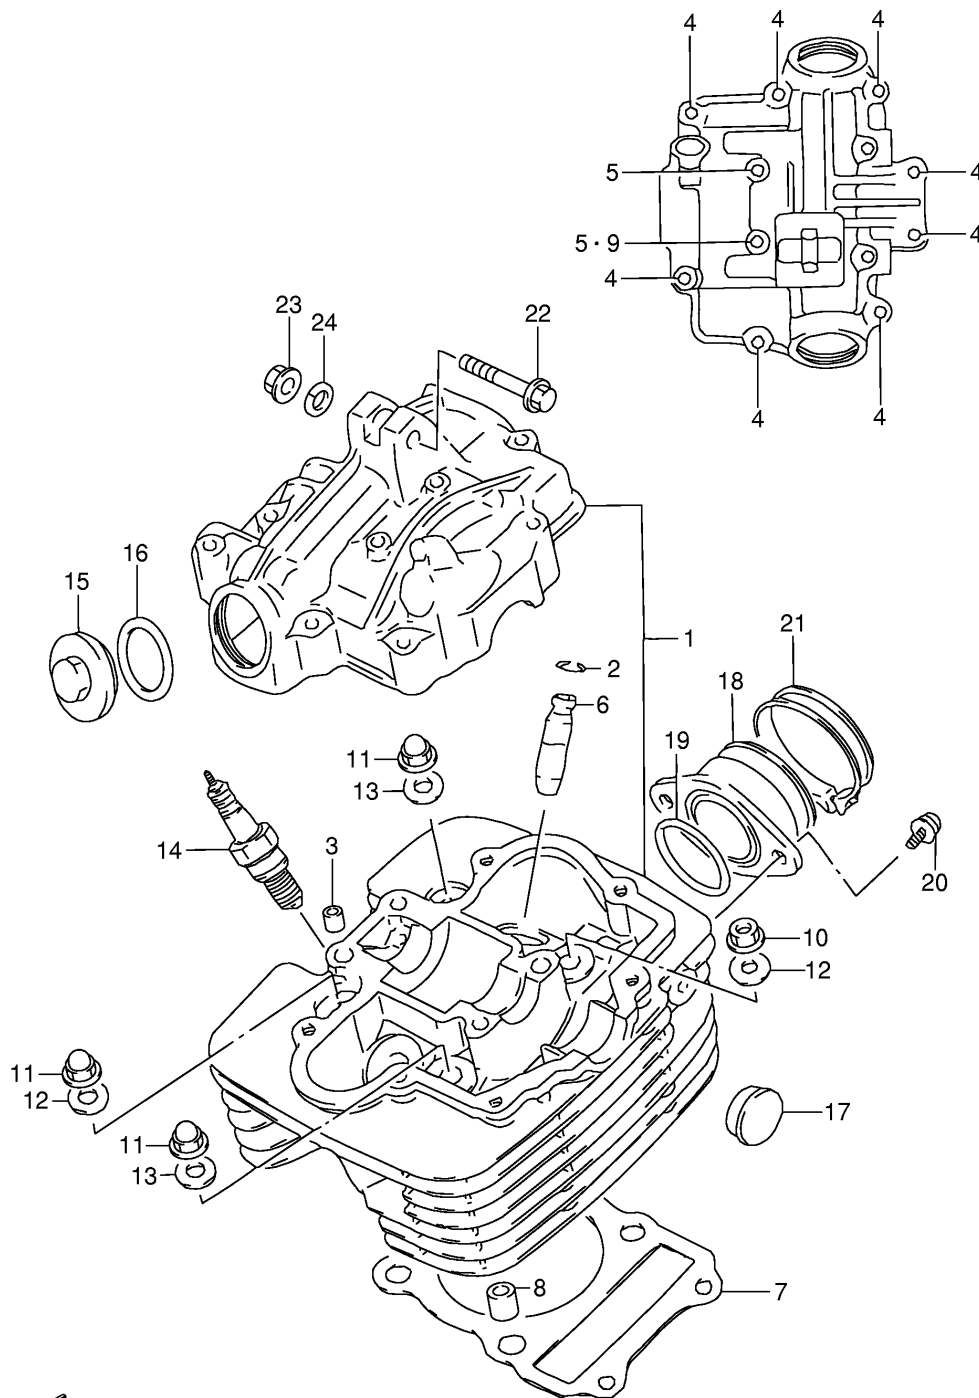

Ref No	Part No	Description
1	11100-42A50	Head Assy, Cylinder
2	09381-10004	• . Snap Ring
3	09206-08001	• . Pin (8x11)
4	01550-06353	• . Bolt
5	01550-06603	• . Bolt
6	11115-05270	Guide, Valve (os:0.3)
7	11141-18A00	Gasket, Cylinder Head
8	04211-11169	Knock Pin
9	09168-06023	Gasket (5.8x13x1.2)
10	08316-10083	Nut
11	09159-08049	Nut
12	09160-08053	Washer (8.5x19x2.3)
13	09168-08021	Gasket (8.5x17x2.3)
14	09482-00223	Spark Plug (nd,x24esr-u)
14	09482-00399	Spark Plug (ngk,dr8ea)
15	11175-18900	Cap, Inspection
16	09280-30001	O Ring (d:3,id:29.5)
17	09241-22002	Plug
18	13110-42A12	Pipe, Intake
19	09280-35001	O Ring
20	02112-36163	Screw
21	09402-48208	Clamp
22	09103-08332	Bolt (8x53)
23	08319-31083	Nut
24	08321-01083	Lock Washer


Ref No	Part No	Description
1	11211-42A50-0F0	Cylinder
2	09108-08195	Stud Bolt (l:160)
3	09108-08184	Stud Bolt (l:167)
4	01421-06253	Stud Bolt
5	08316-10063	Nut
6	11241-42A10	Gasket, Cylinder
7	04211-11149	Knock Pin

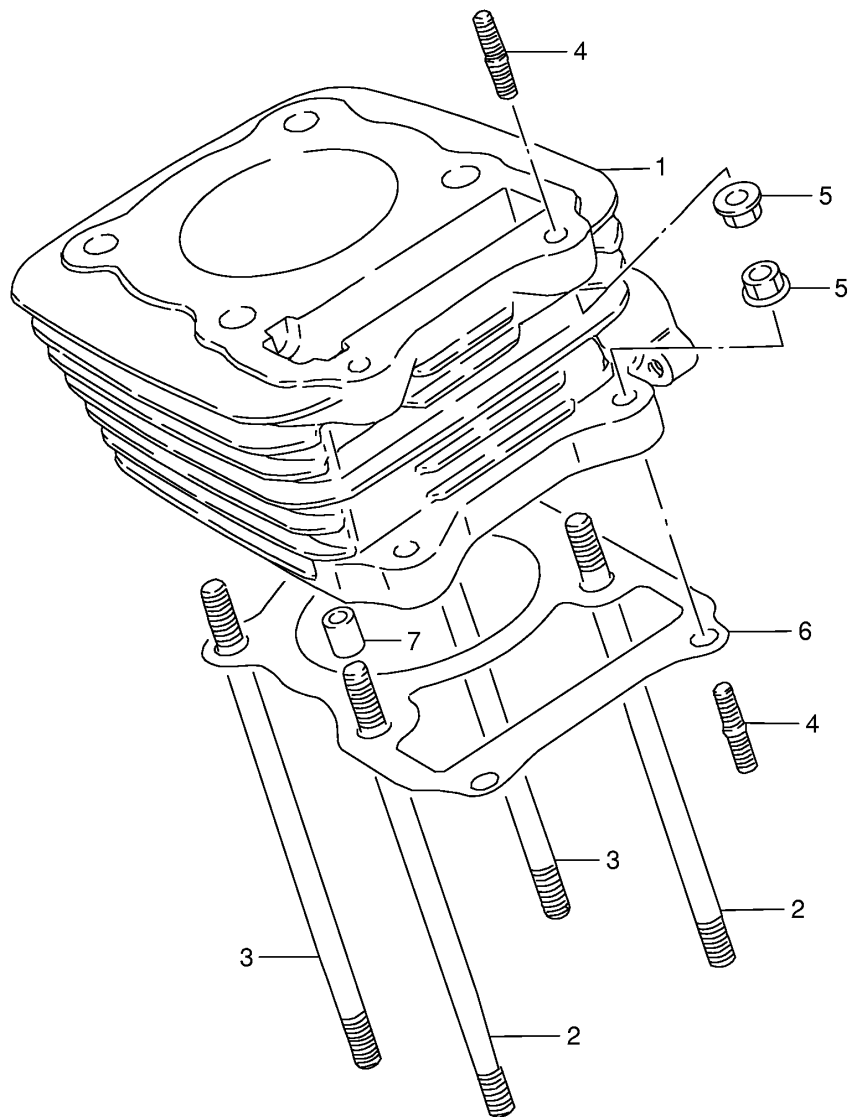 


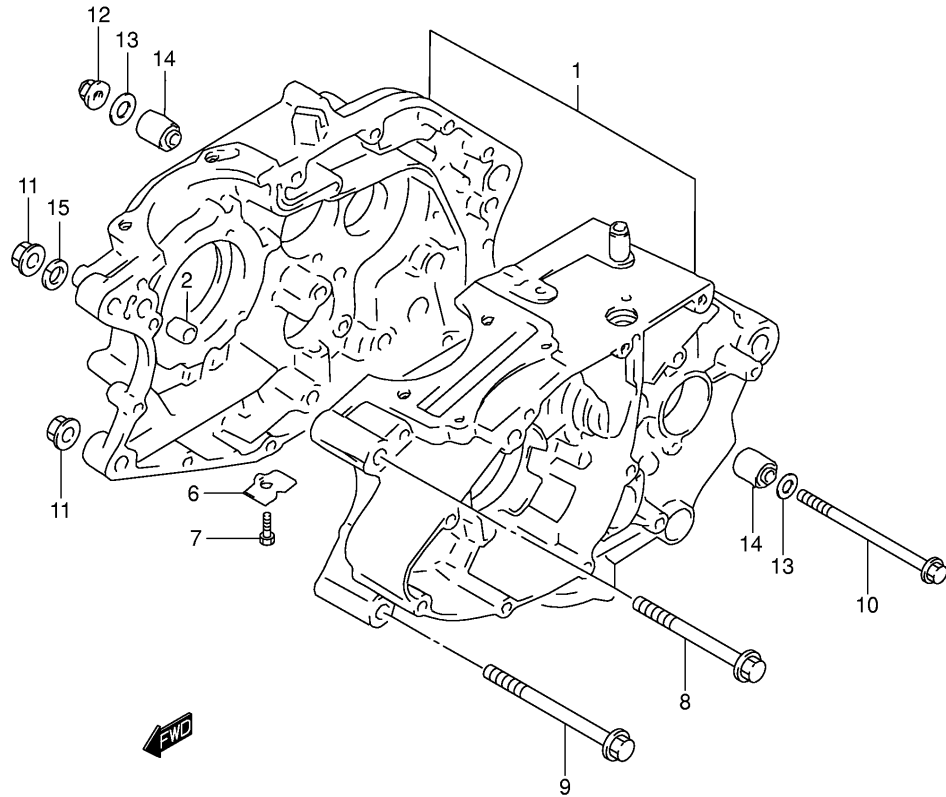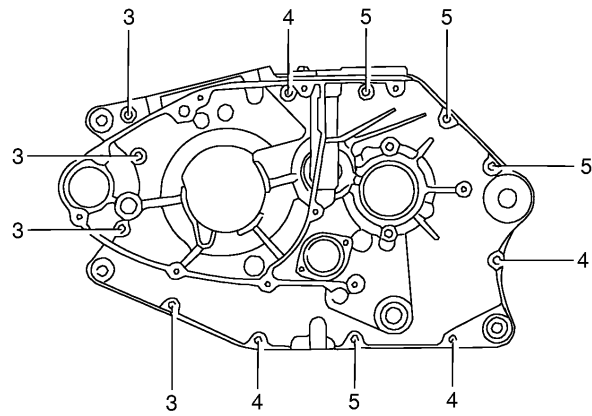  


Ref No	Part No	Description
1	11300-42A50	Crankcase Assy
2	04211-13189	• . Knock Pin
3	01547-06553	• . Bolt
4	01547-06603	• . Bolt
5	01547-06757	• . Bolt
6	11319-05200	• . Plate, Oil Gallery Plug
7	01500-06103	• . Bolt
8	09103-10240	Bolt (10x80)
9	09103-10061	Bolt (10x90)
10	09103-08138	Bolt (8x115)
11	08319-31103	Nut
12	08319-31083	Nut
13	08212-08182	Washer
14	09319-08032	Bush
15	08321-01103	Lock Washer

Ref No	Part No	Description
1	11340-42A30	Cover, Clutch
1a	11971-45010	• . Lens, Oil Level
2	11482-05211	Gasket, Clutch Cover
3	04211-13189	Knock Pin
4	09168-06023	Gasket (5.8x13x1.2)
5	01547-06303	Bolt
6	01547-06453	Bolt
7	09259-20019	Plug (20x10)
8	09280-17003	O Ring (d:3.1,id:16.8)
9	09247-14026	Plug
10	09168-14002	Gasket (13.8x18.8x0.4)
11	11342-12C51	Plug, Clutch Cover Kick
12	11351-42A20	Cover, Magneto
13	11483-05312	Gasket, Magneto Cover
14	01547-06303	Bolt
15	01547-06353	Bolt
16	01547-06403	Bolt
17	01547-06503	Bolt
18	09247-12104	Plug
19	09168-12002	Gasket (12.1x16.2x3.7)
20	09259-26011	Plug
21	09280-22008	O Ring (d:3.1,id:22.7)
22	04211-09129	Knock Pin
23	11360-42A20	Cover, Engine Sprocket
24	01547-06253	Bolt
25	01547-06353	Bolt

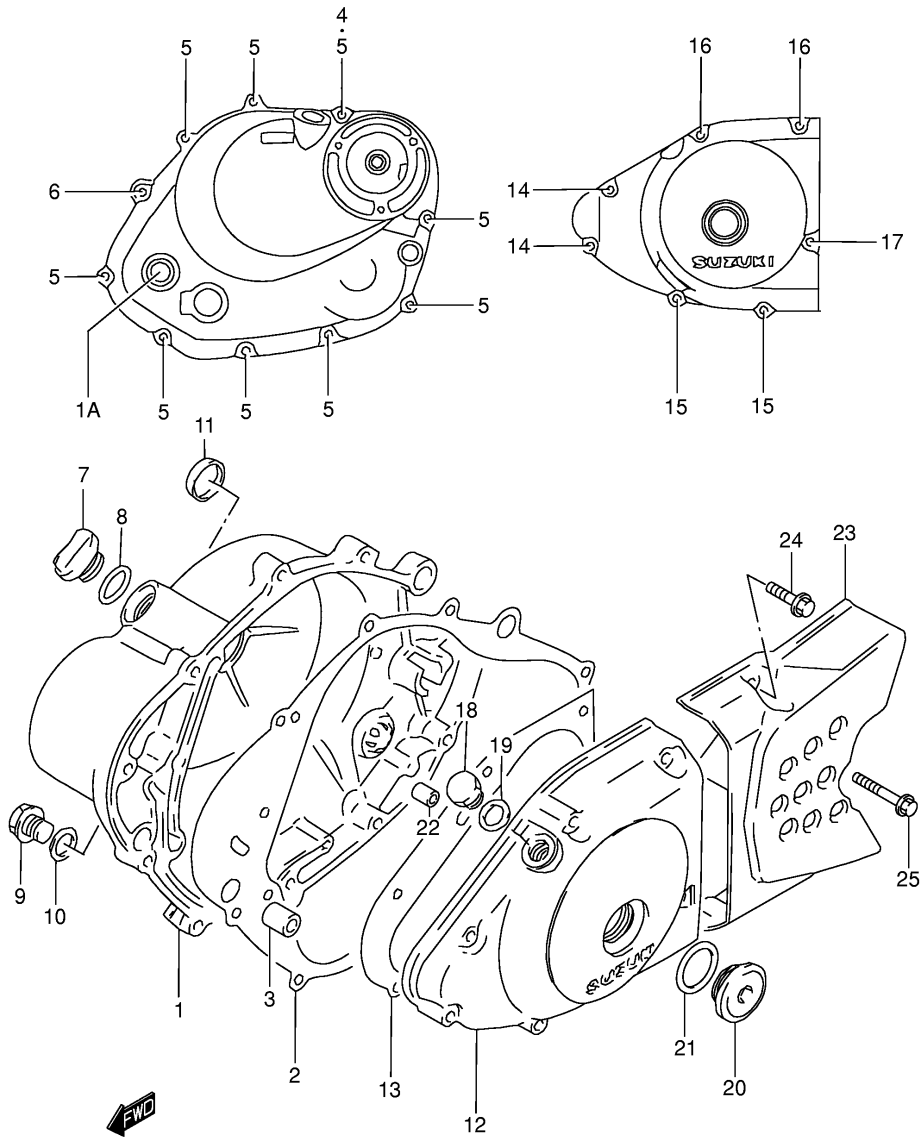 


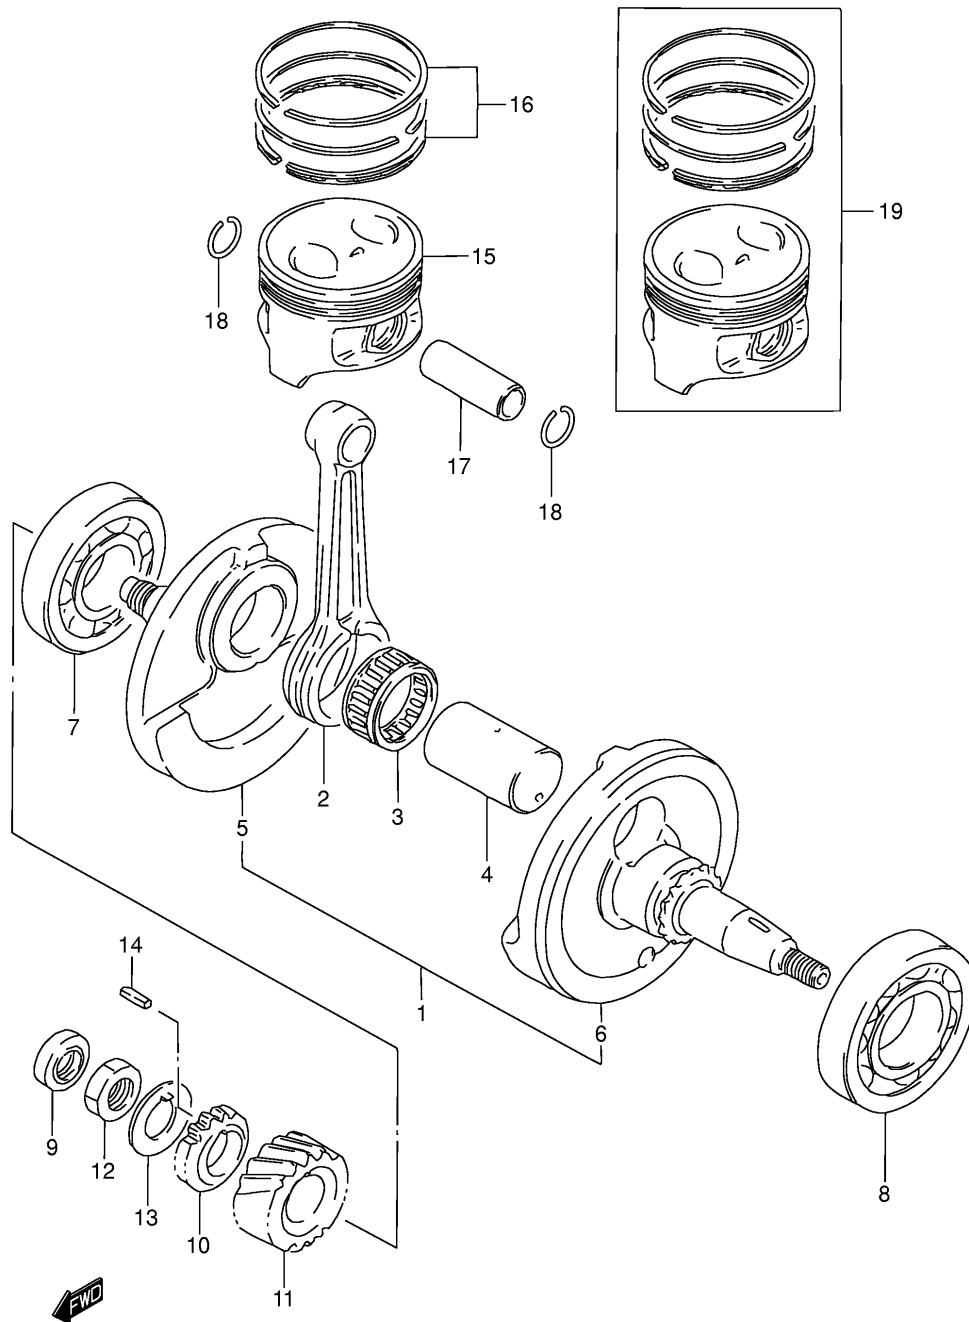 

Ref No	Part No	Description
1	12200-42A20	Crankshaft Assy
2	12161-42A01	• . Rod, Connecting
3	09263-31008-0B0	• . Bearing
4	12210-42A00	• . Pin, Crank
5	12221-42A02	• . Crankshaft, Rh
6	12261-42A20	• . Crankshaft, Lh
7	09262-28014	Bearing (28x68x18)
8	09262-35038	Bearing (35x72x17)
9	09282-12009	Oil Seal (12x21x7)
10	16321-42A00	Gear, Oil Pump Drive (nt:15)
11	21111-42A01	Gear, Primary Drive (nt:19)
12	09140-18004	Nut
13	09166-18003	Washer
14	09421-04007	Key
15	12111-42A10-0F0	Piston
16	12140-42A00	Ring Set, Piston (std)
16	12140-19B10-050	Ring Set, Piston (os:0.5)
17	12151-22A02	Pin, Piston
18	09381-16001	Snap Ring

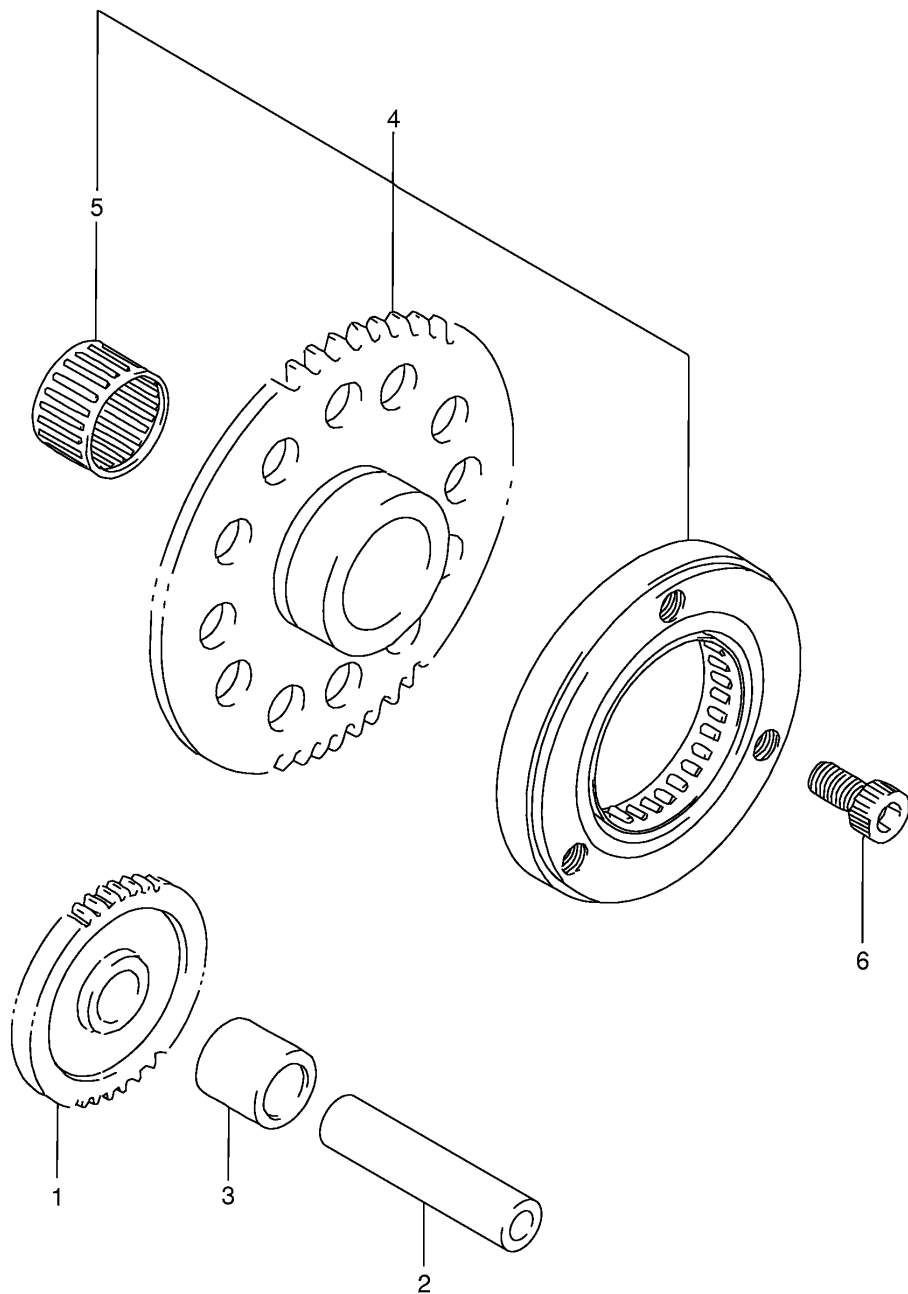 



Ref No	Part No	Description
1	12611-42A01	Gear, Starter Idle (nt:44/15)
2	09206-13003	Pin
3	09180-13006	Spacer
4	12600-35843	Clutch Set, Starter
5	09263-22031	• . Bearing (22x28x16)
6	07130-08163	Bolt

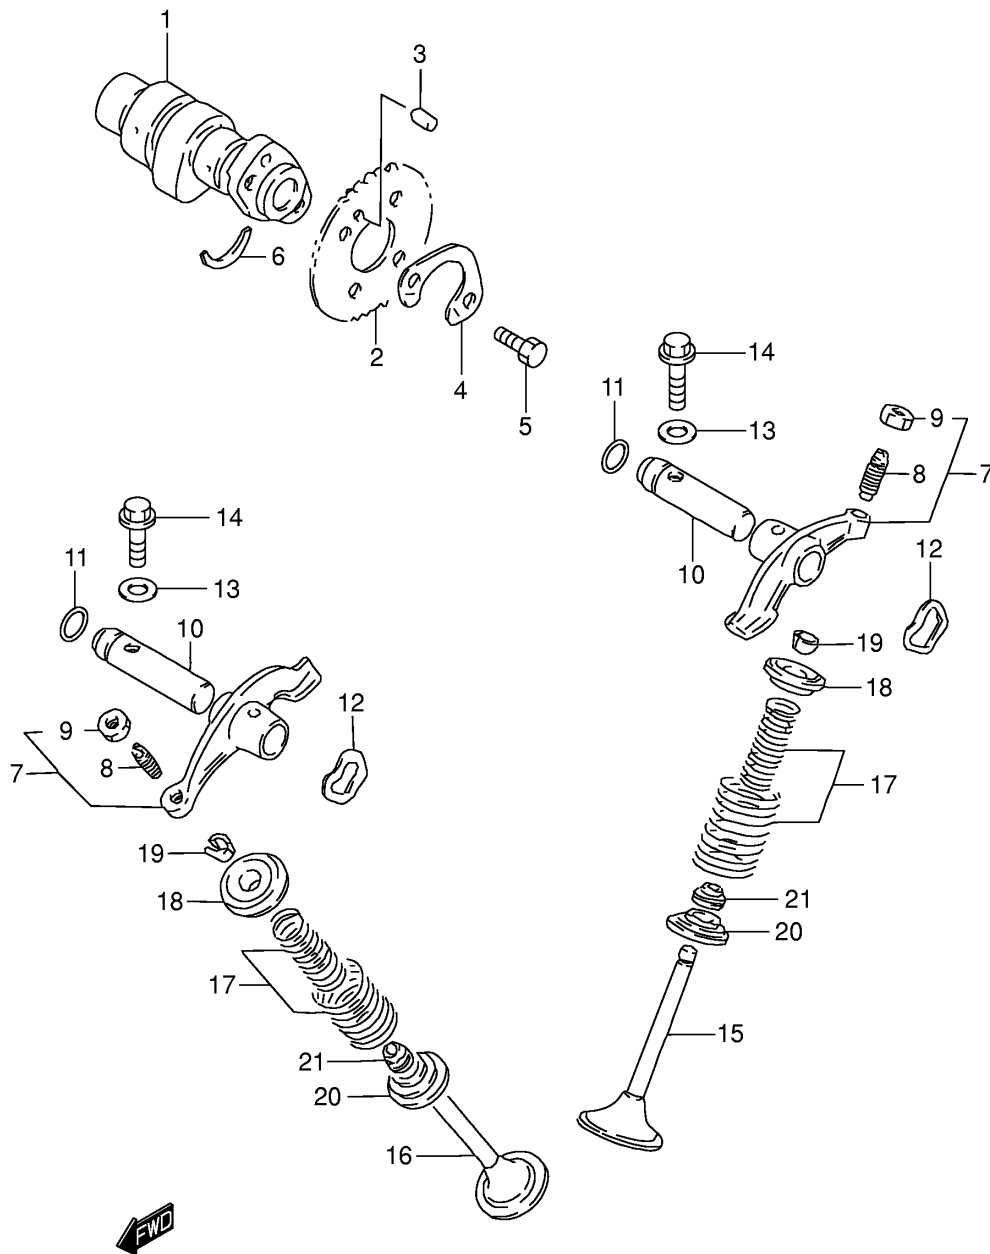 


Ref No	Part No	Description
1	12711-42A10	Cam Shaft
2	12741-05201	Sprocket, Cam Shaft (nt:32)
3	09261-05005	Pin
4	12747-05201	Washer, Sprocket
5	09111-06032	Bolt (6x10.5)
6	09390-22002	C Ring
7	12850-25C00	Arm, Valve Rocker
8	12842-32411	• . Screw, Adjusting
9	12843-32400	• . Nut
10	12861-05201	Shaft, Valve Rocker Arm
11	09280-09005	O Ring (d:1.9,id:8.6)
12	09164-12021	Washer
13	09168-06023	Gasket (5.8x13x1.2)
14	02162-06253	Bolt
15	12911-42A00	Valve, Intake
16	12912-42A00	Valve, Exhaust
17	12920-05210	Spring Set, Valve
18	12931-49200	Retainer, Valve Spring
19	12932-24400	Cotter, Valve
20	12933-49201	Seat, Valve Spring
21	09289-05015	Oil Seal (5.5x11x8.2)

Ref No	Part No	Description
1	12760-42A00	Chain, Cam Shaft Drive
2	12771-18A00	Guide, Cam Chain
3	12811-18A01	Tensioner, Cam Chain
4	12812-32410	Bolt, Cam Chain Tensioner
5	09168-08016	Gasket (8.2x14x1)
6	12830-19B02	Adjuster Assy, Tensioner
7	12833-19B00	• . Spring
8	12835-19B00	• . Bar
9	12834-19B00	• . Plug
10	12832-02A00	• . O Ring
11	12837-19B10	Gasket, Tensioner Adjuster
12	01500-06203	Bolt

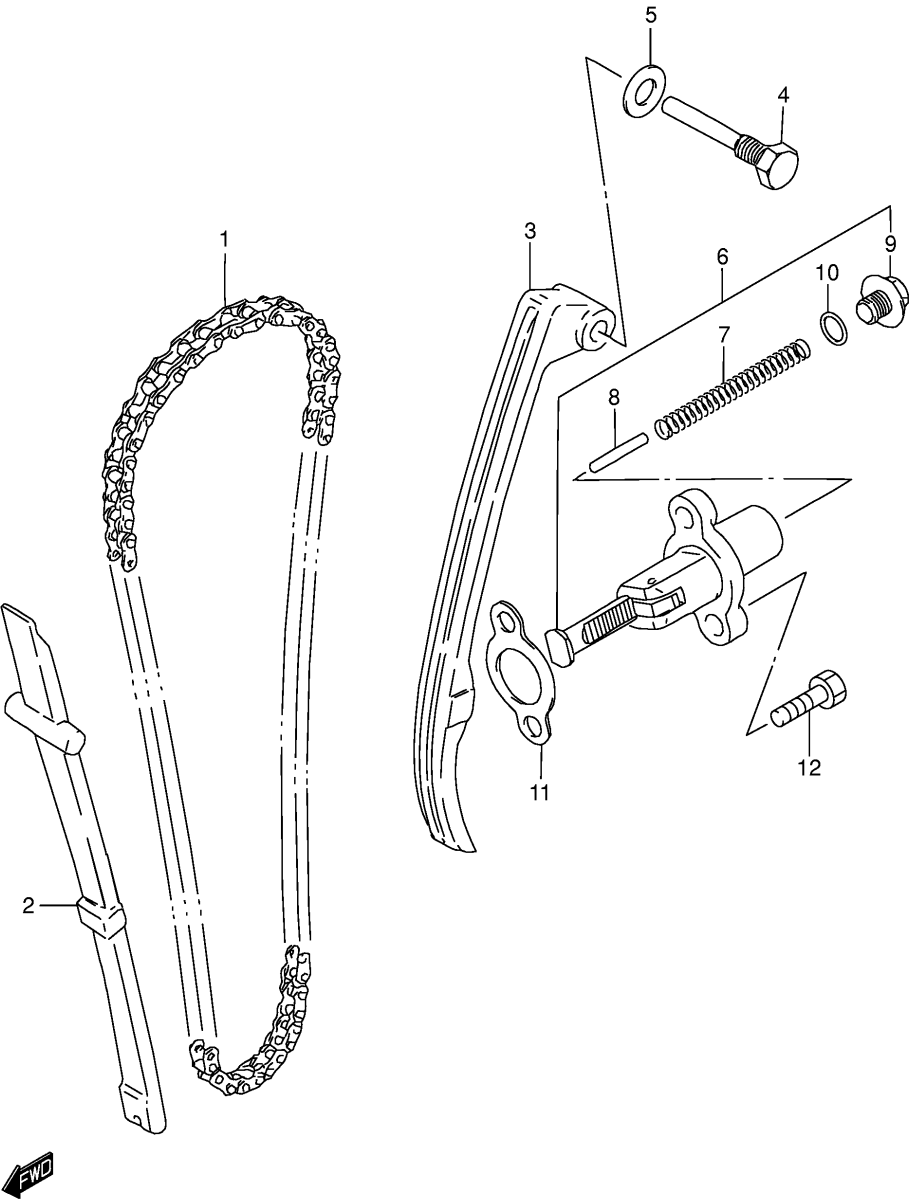 


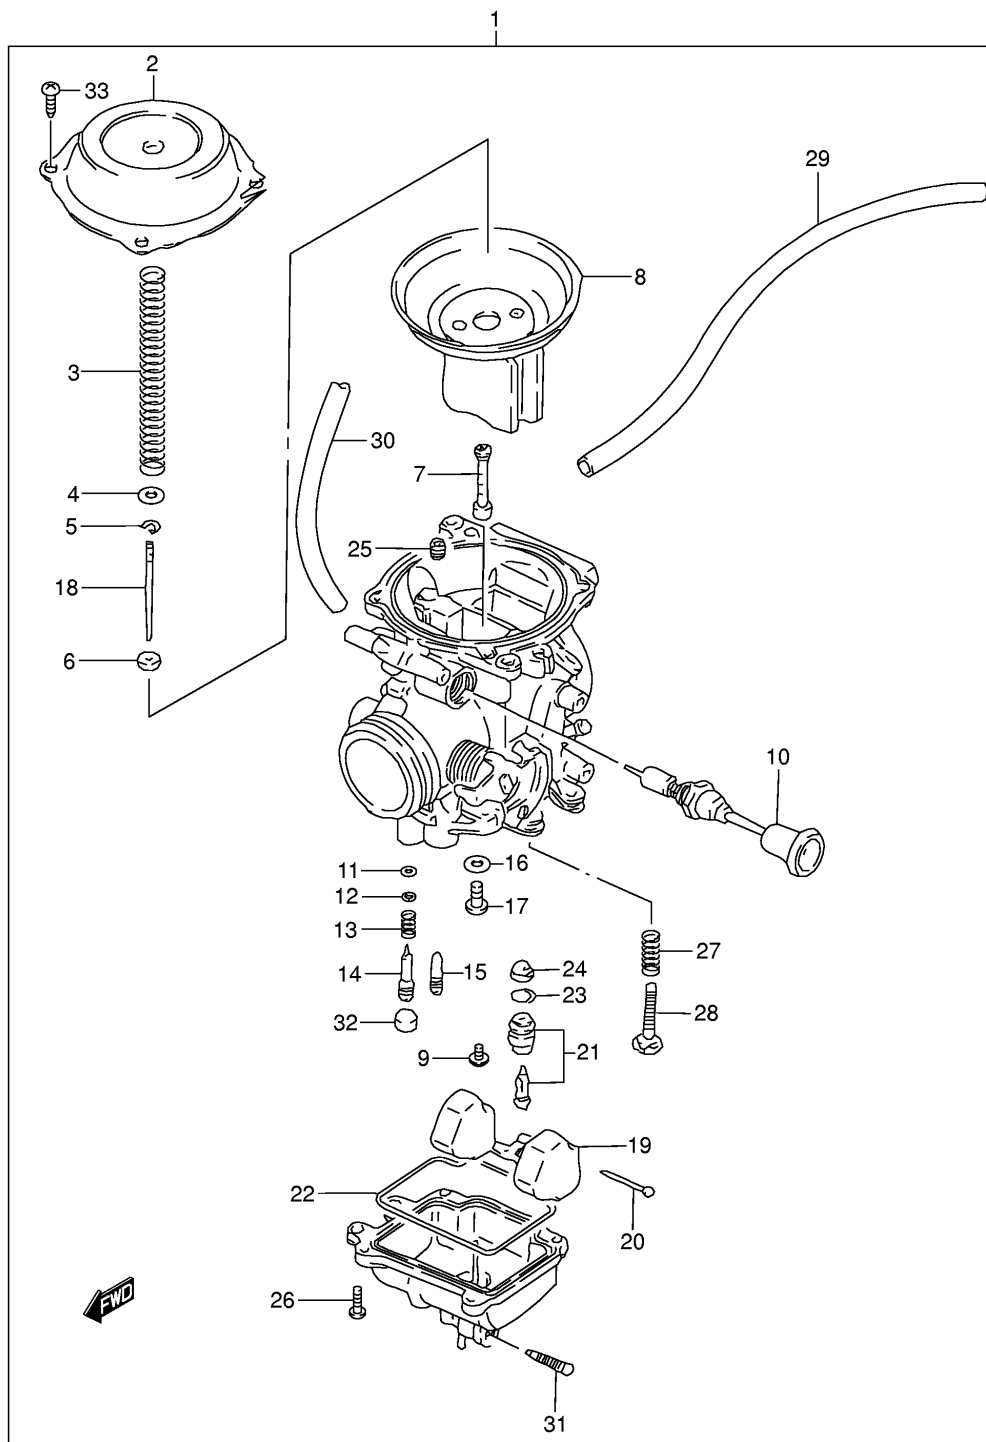 

Ref No	Part No	Description
1	13200-42AC0	Carburetor Assy
1	13200-42AE0	Carburetor Assy
2	13502-42A00	• Cover
3	13417-42A00	• Spring
4	13382-42A00	• Ring
5	13394-10010	• Clip, Needle
6	13387-47010	• Ring
7	09494-00881	• Jet, Needle (p-5m)
8	13500-42A00	• Diaphragm Assy
9	13602-43410	• Screw
10	13411-42A20	• Plunger Assy
11	13295-29900	• O Ring
12	13291-29900	• Washer
13	13268-47070	• Spring
14	13279-47070	• Screw, Pilot (1 1/2)
15	09492-35008	• Jet, Pilot (35)
16	13382-03110	• Washer
17	09491-25010	• Jet, Main (125)
18	13383-42AC0	• Needle, Jet (5d77-1)
19	13250-42A00	• Float
20	13254-92311	• Pin, Float
21	13370-44500	• Valve Assy, Needle
22	13251-42A00	• O Ring, Float Chamber
23	13374-35C00	• O Ring
24	13376-19F00	• Filter
25	09493-27001	• Jet, Air (135)
26	02112-04123	• Screw
27	13268-37420	• Spring
28	13267-25D00	• Adjuster
29	09352-50823-600	• Hose (5x8x600)
30	09355-45855-600	• Hose (4.5x8.5x600)
31	13247-13A00	• Screw, Drain
32	13281-05A00	• Plug
33	02112-04083	• Screw

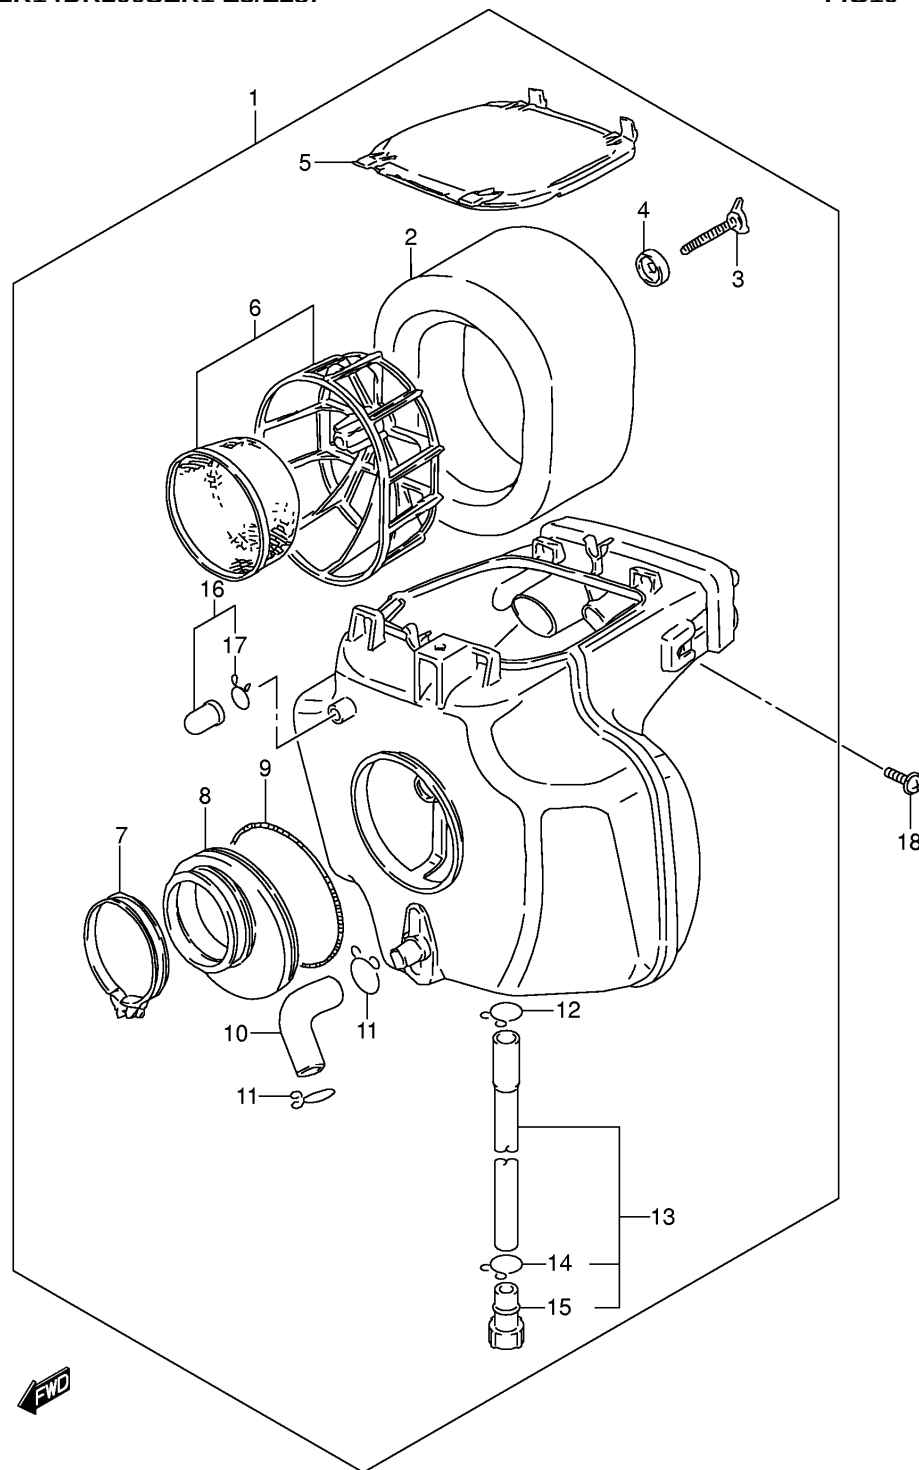 


Ref No	Part No	Description
1	13700-42A01	Cleaner Assy, Air
2	13780-42A01	• . Filter
3	13831-42A00	• . Bolt, Wing
4	13796-16700	• . Washer
5	13740-42A00	• . Cap
6	13790-42A00	• . Holder
7	09402-56208	• . Clamp
8	13881-42A00	• . Tube, Outlet
9	13826-38300	• . Clamp, Air Cleaner Side
10	13853-42A00	• . Tube, Breather
11	09401-14301	• . Clip
12	09401-13409	• . Clip
13	13870-11458	• . Tube, Drain
14	09401-13409	• .. Clip
15	13877-38A00	• .. Stopper, Drain
16	13870-14F00	• . Plug, Drain
17	09401-16401	• .. Clip
18	02112-36163	Screw

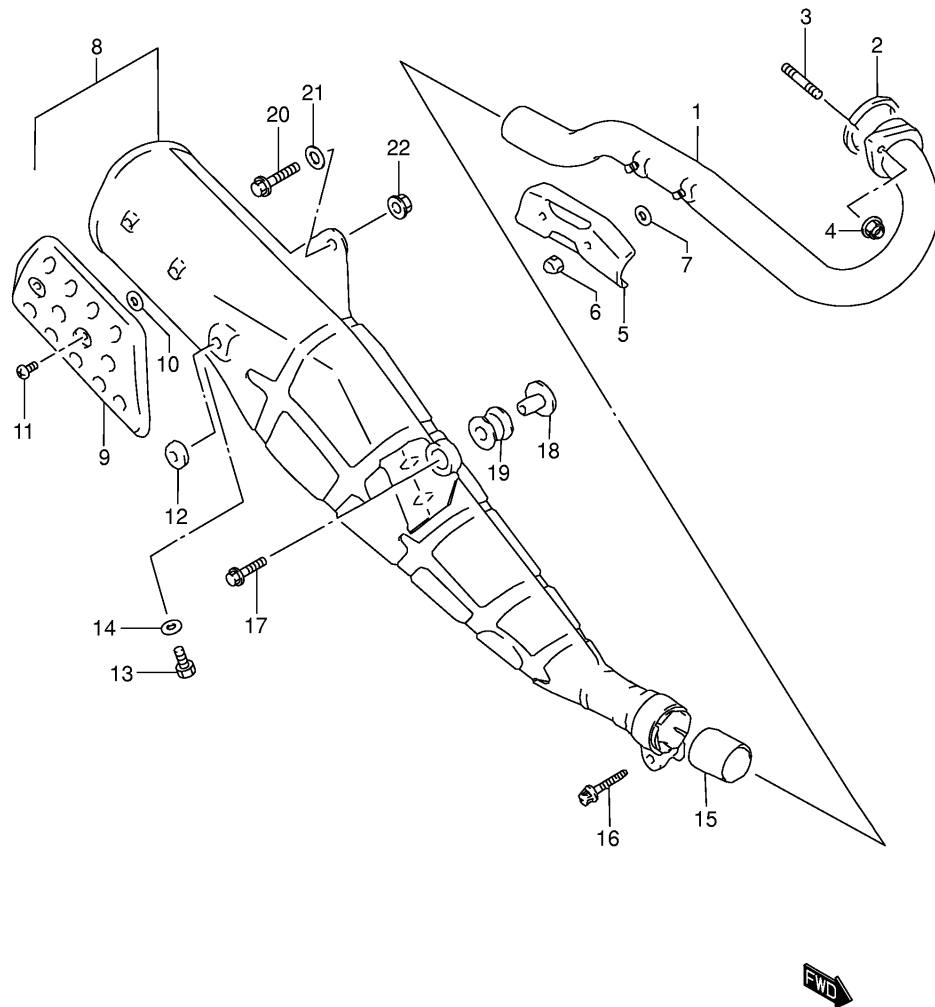 


MUFFLER


Ref No	Part No	Description
1	14150-42A22	Pipe, Exhaust
2	14181-42A00	Gasket, Exhaust Pipe
3	01421-08258	Stud Bolt
4	09159-08067	Nut, Exh Pipe
5	14186-42A20	Cover, Exhaust Pipe
6	09145-06005	Nut
7	09168-06122	Gasket (6x16x1.4)
8	14301-42A61-H01	Muffler Assy
9	14781-42A20	• . Cover, Muffler
10	09168-06120	• . Gasket (5.8x13x1.4)
11	09139-06076	• . Screw (6x10)
12	09321-10007	• . Cushion
13	09247-12103	• . Plug, Drain
14	09168-12002	• . Gasket
15	14773-14202	Gasket, 2nd Muffler
16	07120-08353	Bolt (8x35)
17	09118-08080	Bolt (8x35)
18	09180-08151	Spacer (8.6x12x17.5)
19	09320-12032	Cushion
20	09103-08357	Bolt (8x35)
21	08322-01083	Washer
22	08361-25083	Nut

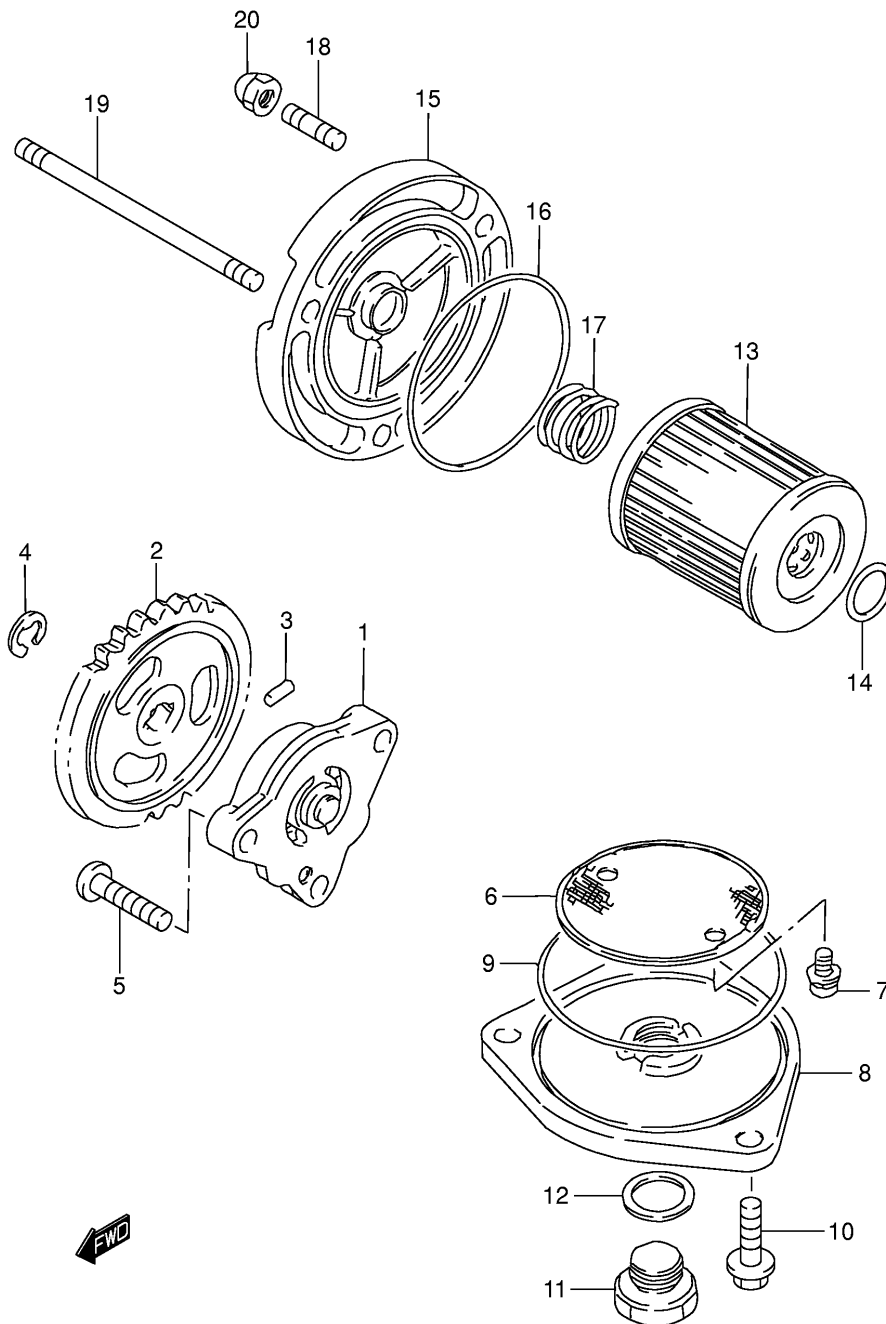 

Ref No	Part No	Description
1	16400-42A01	Pump Assy, Engine Oil
2	16331-35C00	Gear, Oil Pump Driven (nt:30)
3	09261-02008	Pin
4	08332-11063	E Ring
5	02112-06253	Screw
6	16520-05202	Strainer, Engine Oil
7	02112-75123	Screw
8	16523-05200	Cap, Oil Strainer
9	09280-60005	O Ring (d:2.4,id:60.5)
10	01547-06203	Bolt
11	09247-14026	Plug
12	09168-14002	Gasket (13.8x18.8x0.4)
13	16510-25C00	Filter, Oil
14	09280-13004	O Ring (d:1.9,id:13)
15	16512-42A20	Cap, Oil Filter
16	09280-54001	O Ring (d:2.4,id:52.6)
17	09440-18002	Spring
18	09108-06123	Stud Bolt
19	09108-06108	Stud Bolt (l:90)
20	08313-10063	Nut

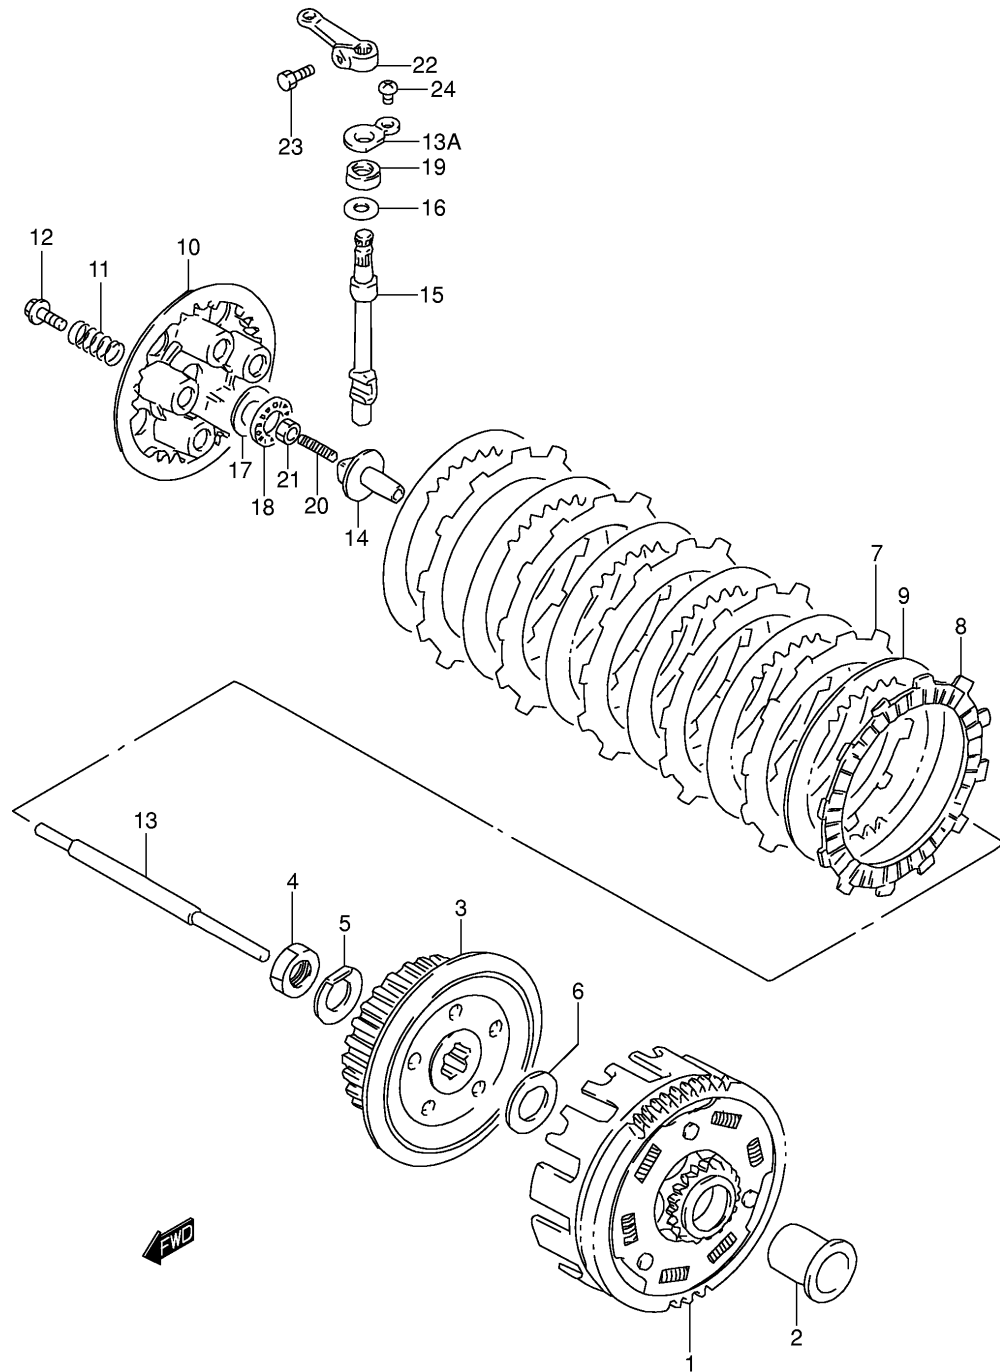 


Ref No	Part No	Description
1	21200-42A50	Gear Assy, Primary Driven
2	21251-13E00	Spacer, Primary Driven
3	21411-42A02	Hub, Clutch Sleeve
4	09140-16001	Nut
5	09169-16003	Washer
6	08211-20355	Washer
7	21441-25C01	Plate, Clutch Drive
8	21441-13A01	Plate, Clutch Drive
9	21451-01B40	Plate, Driven (t:1.4)
10	21462-14102	Disc, Clutch Pressure
11	09440-15021	Spring
12	09116-05020	Bolt (5x16)
13	23110-05202	Rod, Clutch Pressure
13a	23117-05200	Retainer, Cl Rlse Oil Seal
14	23121-38201	Piece, Clutch Push
15	23122-05200	Cam Shaft, Clutch Release
16	09181-10195	Thrust Washer (10x20x1.0)
17	09160-15045	Washer (15.5x28x1)
18	09263-15003	Bearing (15x28x2)
19	09282-10012	Oil Seal (10x20x6)
20	09134-06010	Screw
21	09140-06023	Nut (6x3.6)
22	23271-46010	Arm, Clutch Release
23	01500-06163	Bolt
24	02142-06103	Screw

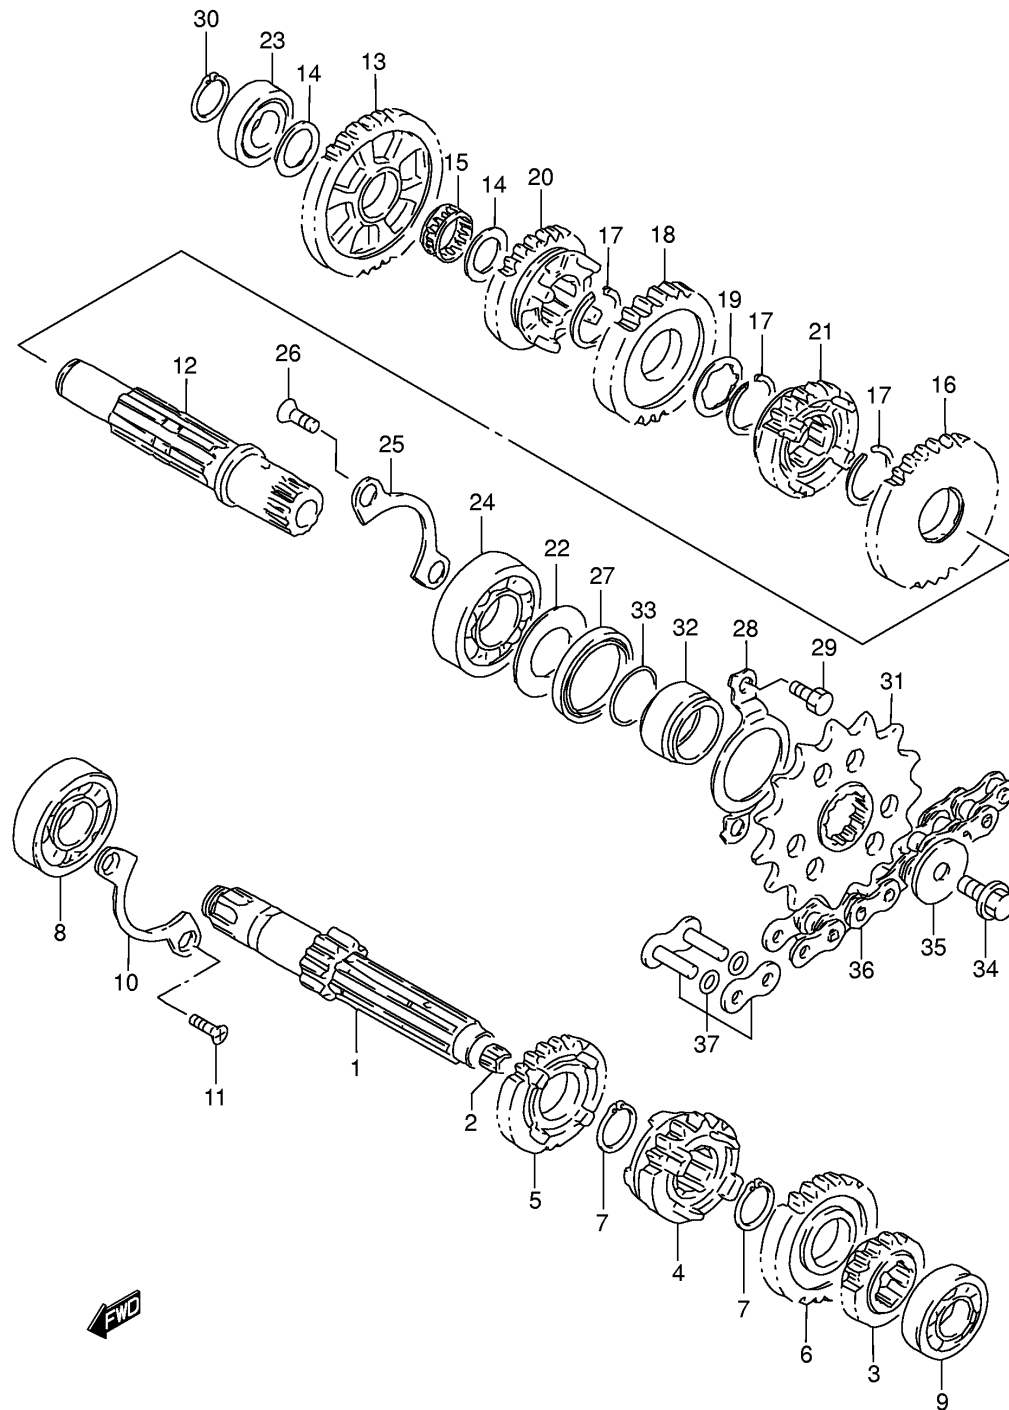 


Ref No	Part No	Description
1	24120-42A01	Shaft, Counter (nt:11)
2	24125-38201	• . Bush
3	24221-42A02	Gear, 2nd Drive (nt:15)
4	24231-42A03	Gear, 3rd Drive (nt:16)
5	24241-42A00	Gear, 4th Drive (nt:21)
6	24251-42A03	Gear, 5th Drive (nt:23)
7	09380-20009	Circlip
8	09262-20069	Bearing (20x47x14)
9	08123-60027	Bearing
10	24741-05200	Retainer, Drive Shaft Bearing
11	02122-06123	Screw
12	24130-42A20	Shaft, Drive
13	24311-42A00	Gear, 1st Driven (nt:33)
14	09181-17167	Thrust Washer (17x26x1.0)
15	09263-17004	Bearing (17x21x9.8)
16	24320-42A03	Gear, 2nd Driven (nt:29)
17	09380-22006	Circlip
18	24331-42A02	Gear, 3rd Driven (nt:23)
19	09167-22011	Lock Washer
20	24341-42A02	Gear, 4th Driven (nt:23)
21	24351-42A02	Gear, 5th Driven (nt:21)
22	24359-42A00	Washer, Oil Sealing
23	09264-17001	Bearing (17x36x12)
24	09262-22018	Bearing (22x50x14)
25	24741-05200	Retainer, Drive Shaft Bearing
26	02122-06123	Screw
27	09283-30053	Oil Seal (30x40x6)
28	24751-42A10	Retainer, Drive Shaft Oil Seal
29	01500-06103	Bolt
30	08331-31176	Circlip
31	27510-42A10	Sprocket, Engine (nt:15)
32	27531-42A00	Spacer, Engine Sprocket
33	09280-21008	O Ring (d:2.5,id:21)
34	01550-08123	Bolt
35	08211-08283	Washer
36	27600-14A10-112	Chain, Drive (did520v)
37	27620-14A10	Joint Set


Ref No	Part No	Description
--------	---------	-------------

1	25211-42A02	Fork, Gear Shift No.1
2	25221-42A02	Fork, Gear Shift No.2
3	25231-42A02	Fork, Gear Shift No.3
4	25411-16701	Shaft, Gear Shift Fork, No.1
5	25421-35410	Shaft, Gear Shift Fork, No.2
6	25310-42A00	Cam, Gear Shift
7	25322-31310	Gear, Gear Shift Cam Driven
8	25323-34201	Pole, Gear Shift No.1
9	25324-34201	Pole, Gear Shift No.2
10	09261-05003	Roller (5x8)
11	09440-04003	Spring
12	25331-30001	Lifter, Gear Shift Pole
13	02122-06123	Screw
14	25341-05200	Guide, Gear Shift Cam
15	02122-06123	Screw
16	25350-42A01	Stopper, Gear Shift Cam
17	09111-06054	Bolt
18	08211-06141	Washer
19	09443-10036	Spring
20	09223-04001	Hook
21	25381-04700	Plate, Gear Shift Cam Stopper
22	04221-04069	Pin
23	09247-14012	Plug
24	09168-14002	Gasket (13.8x18.8x0.4)
25	25510-05201	Shaft, Gear Shifting
26	09180-12068	Spacer (12x20x15.3)
27	09444-26023	Spring
28	25671-01011	Stopper, Return Spring
29	09285-12002	Oil Seal (12x22x9)
30	25600-42A00	Lever Assy, Gear Shift
31	25652-03D00	• . Rubber, Gear Shift Pedal
32	01500-06203	Bolt
33	37720-42A30	Base Assy, Neutral Switch
34	37721-42A00	Protector, Gear Shift Switch
35	09280-22001	O Ring (d:2.4,id:21.8)
36	02112-05083	Screw
37	02112-05163	Screw
38	09404-06429	Clamp (l:45)
39	09209-05011	Contact
40	09440-04010	Spring

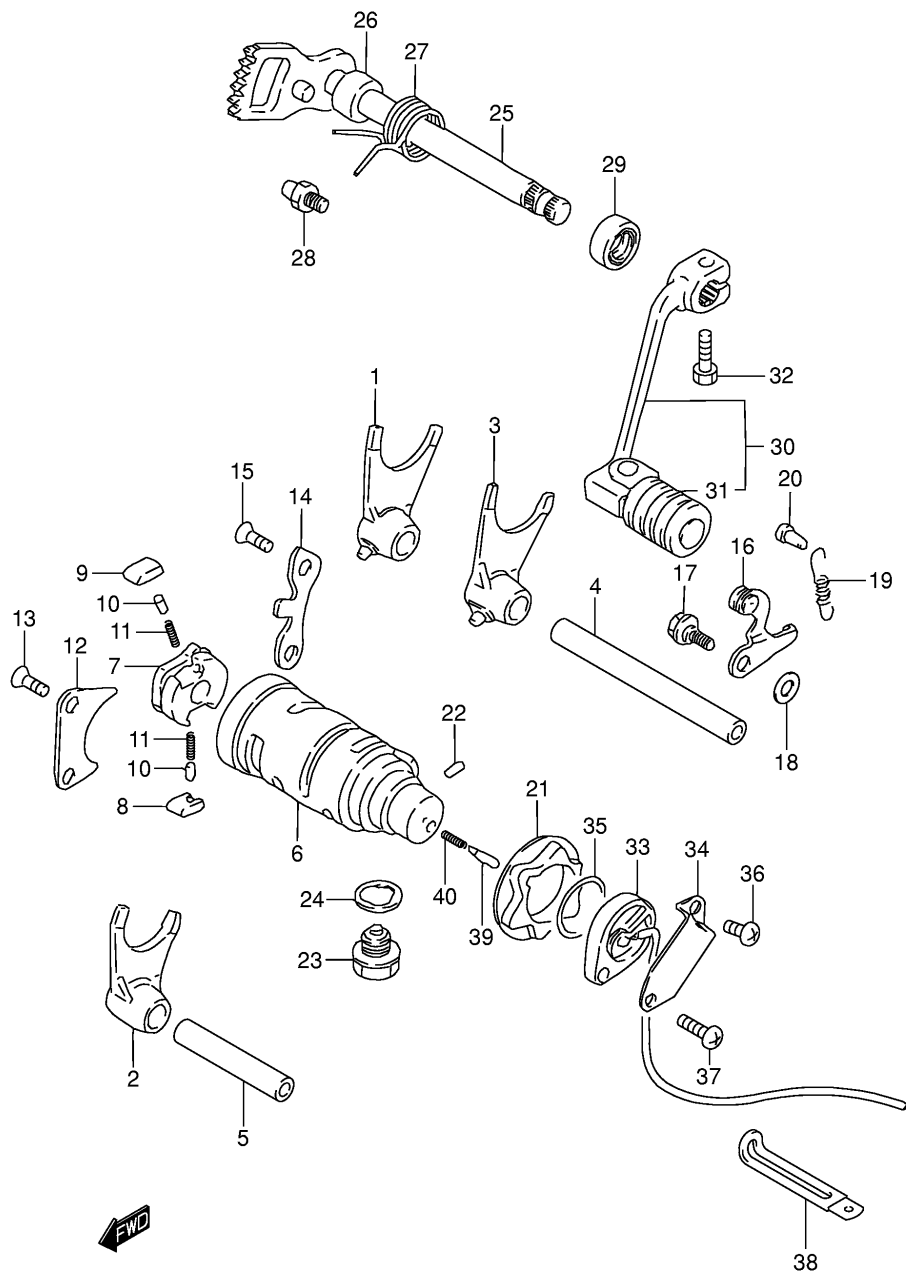 

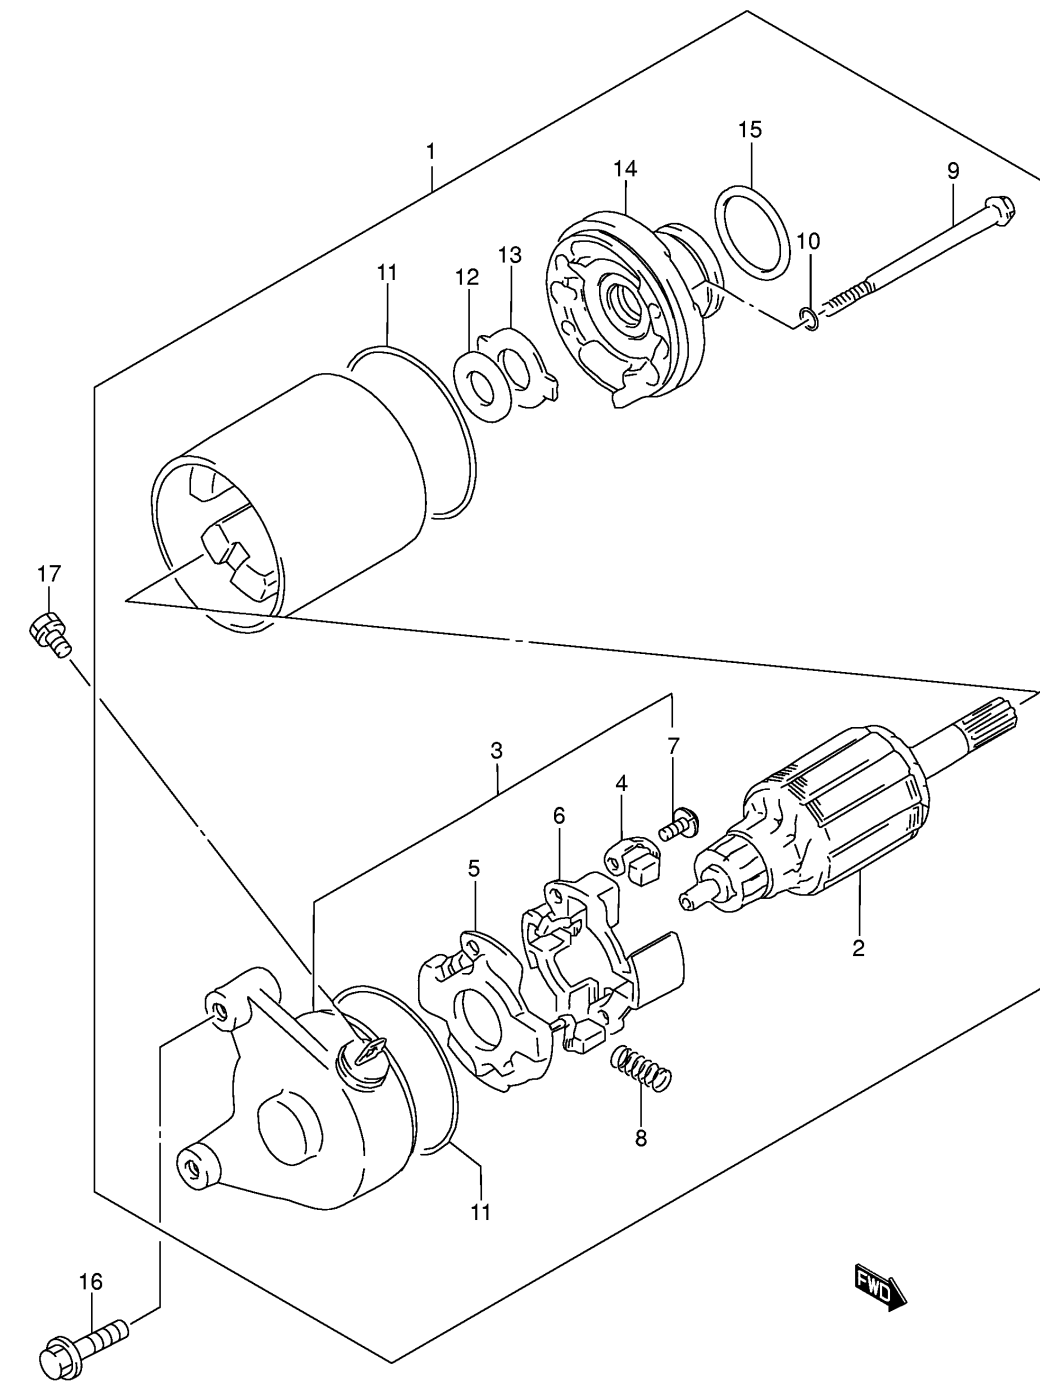 


Ref No	Part No	Description
1	31100-42A01	Motor Assy, Starting
2	31310-11D00	• . Armature
3	31175-42A01	• . Frame Assy, Commutator End
4	31132-32C10	•• .. Brush
5	31130-32C20	•• .. Brush Sub Assy, Starter
6	31133-32C10	•• .. Holder, Brush
7	02112-34123	•• .. Screw
8	31135-32C10	• . Spring
9	31281-32C10	• . Bolt
10	31156-38300	• . O Ring
11	31264-32C10	• . O Ring
12	31361-38300	• . Shim, No.3
13	31361-32C10	• . Plate, Lock
14	31150-42A01	• . Bracket
15	09280-24003	• . O Ring (d:3.0,id:24.5)
16	01547-06303	Bolt
17	09137-05004	Screw (5x8)

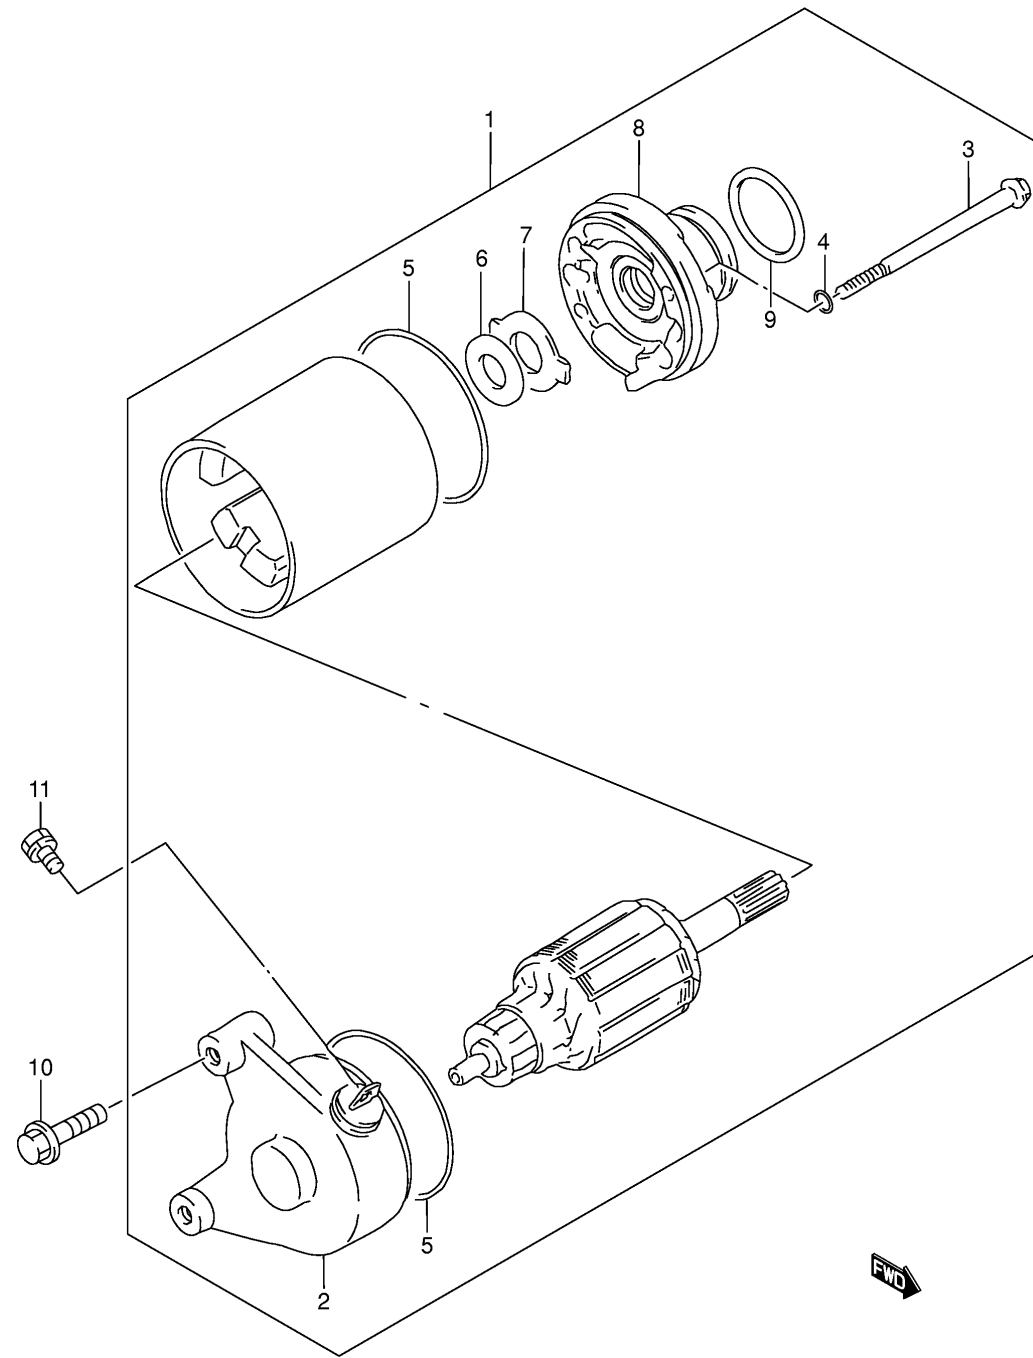 


Ref No	Part No	Description
1	31100-42A20	Motor Assy, Starting
2	31175-42A20	• . Frame Assy, Commutator End
3	31281-08F00	• . Bolt
4	31156-08F00	• . O Ring
5	31264-32C10	• . O Ring
6	31361-38300	• . Shim
7	31361-32C10	• . Plate, Lock
8	31150-08F00	• . Bracket
9	09280-24003	• . O Ring (d:3.0,id:24.5)
10	01547-06303	Bolt
11	09137-05004	Screw (5x8)


Ref No	Part No	Description
1	32101-42A30	Stator Assy
2	32102-42A30	Rotor Assy
3	02112-05253	Screw
4	31792-26F10	Nut (m12x1.25)
5	02112-05123	Screw
6	09420-03008	Key

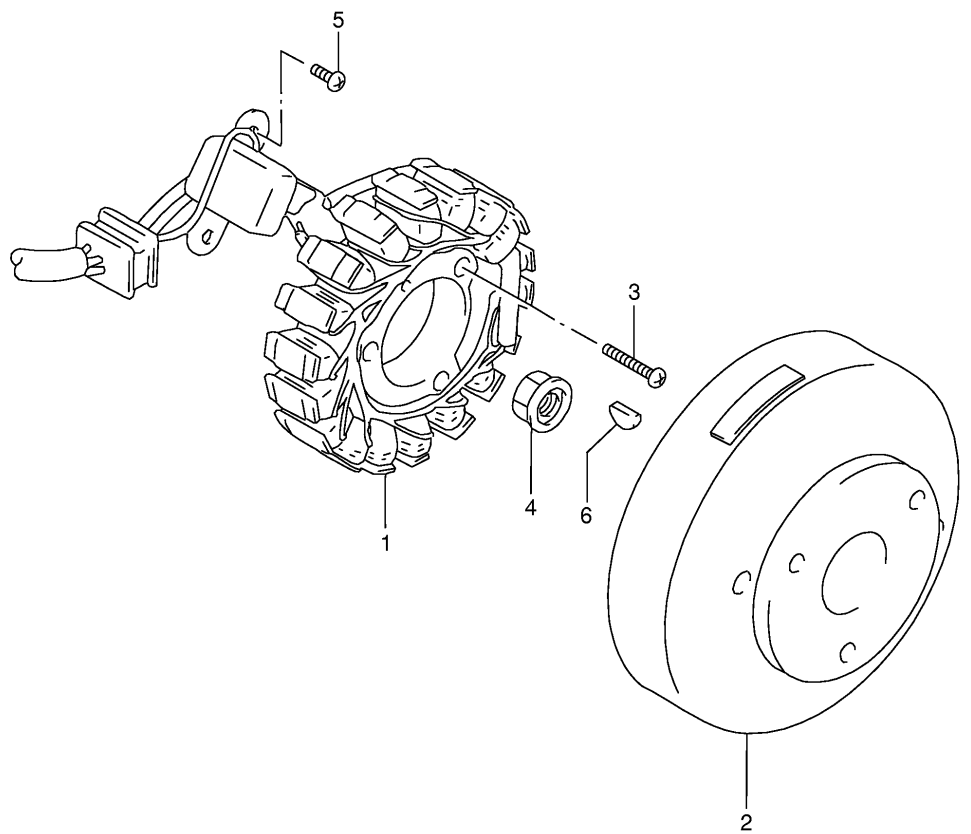 

Ref No	Part No	Description
1	33610-15D20	Battery Assy (ytx7l-bs,12v,6ah)
2	33651-37000	Cushion (170x95x3)
3	33651-37000	Cushion (170x95x3)
4	09462-00093	Band
5	33860-44A00	Wire, Battery (-)

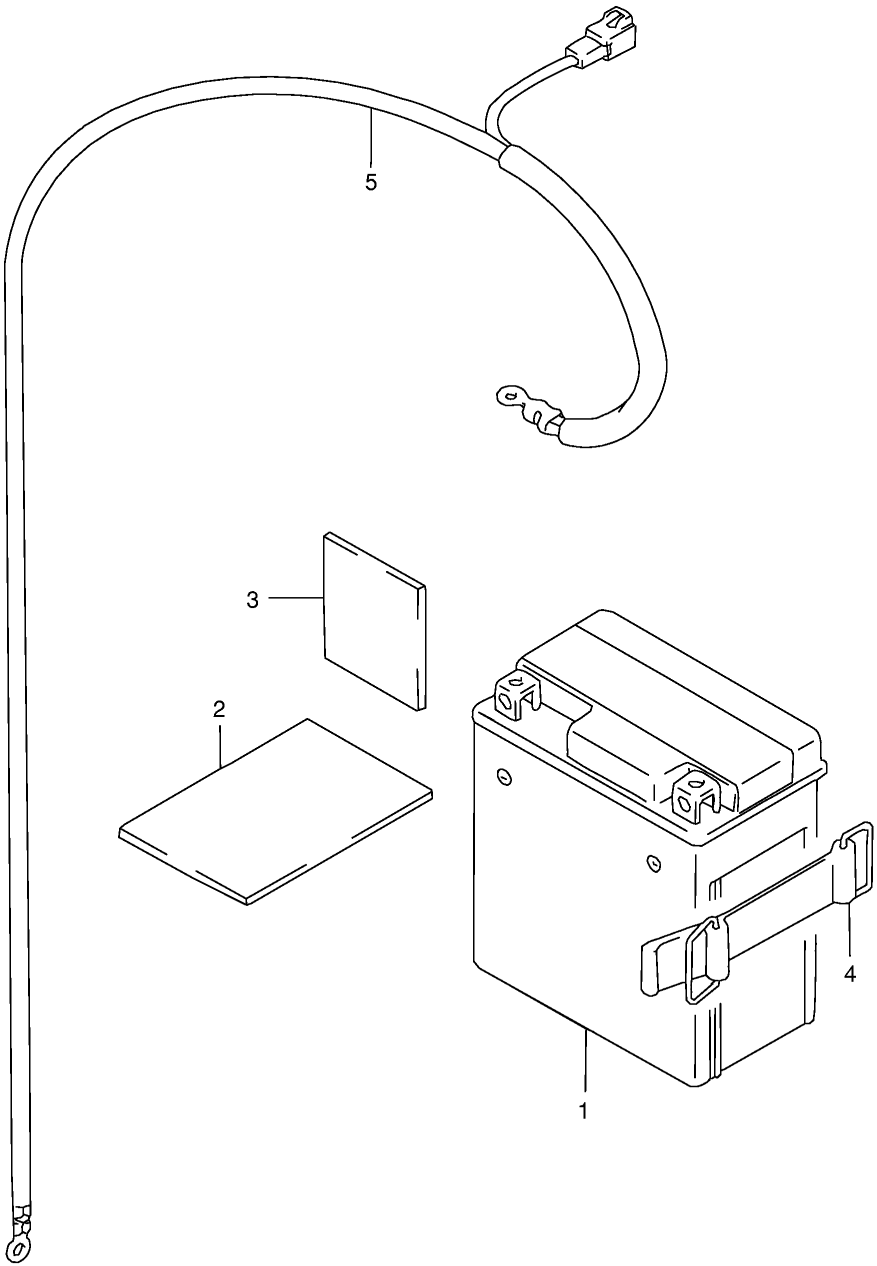 


ELECTRICAL

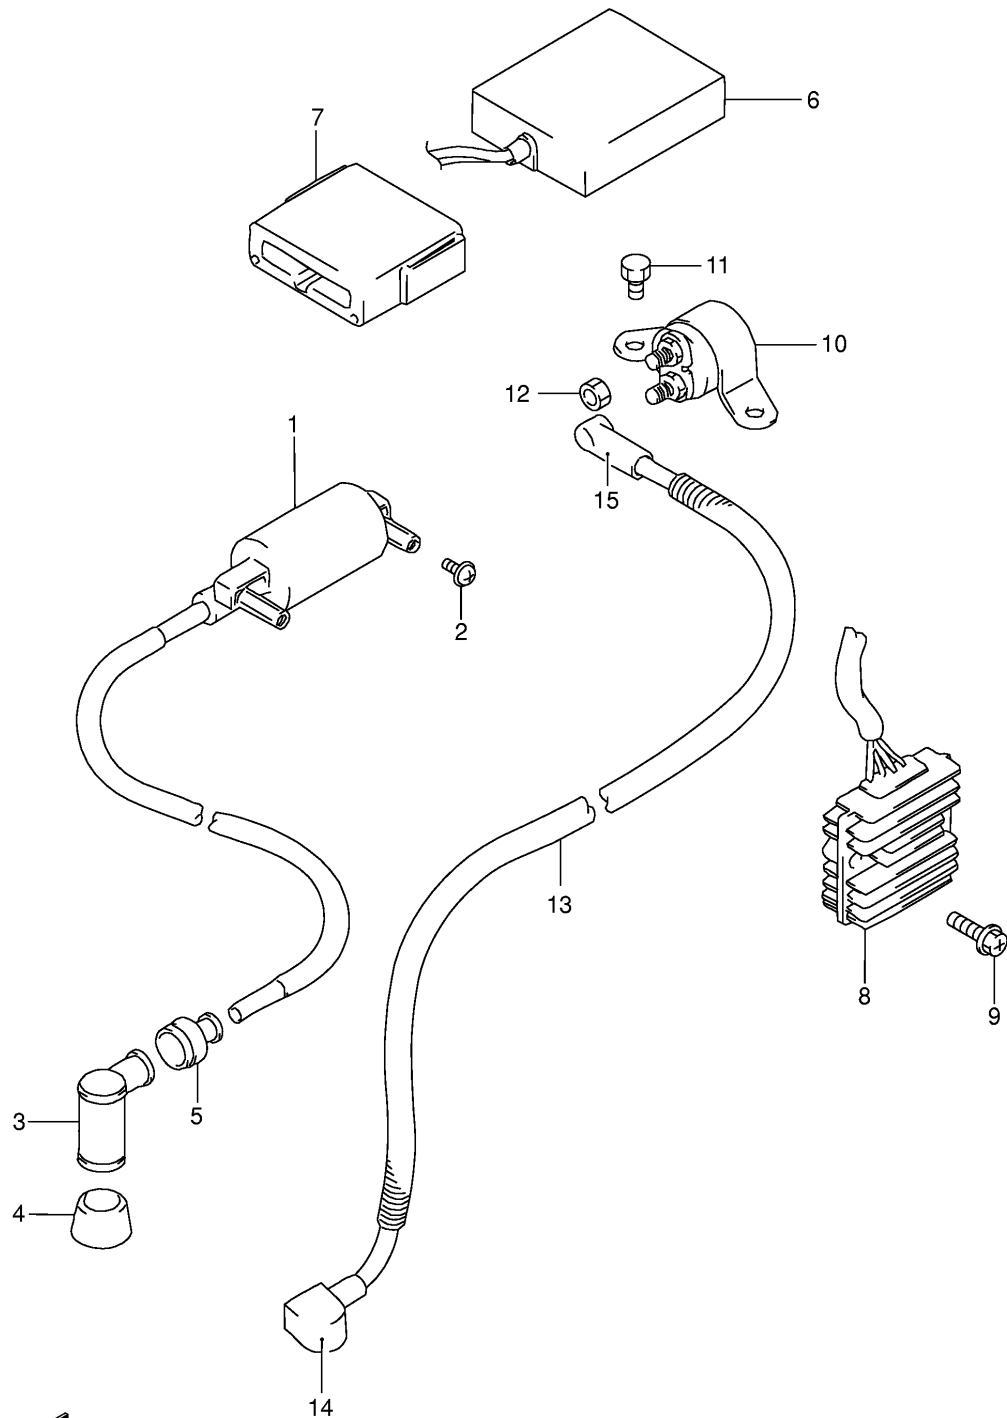 


Ref No	Part No	Description
1	33410-05350	Coil Assy, Ignition
2	02142-05103	Screw
3	33510-22010	Cap, Spark Plug
4	33541-47D00	Seal, Spark Plug Cap
5	33542-38B00	Seal, High Tension Cord
6	32900-42A30	Cdi Unit
7	32980-44A00	Cushion, Cdi Unit
8	32800-08D10	Rectifier
9	02162-06253	Bolt
10	31800-15501	Relay Assy, Starting Motor
11	09128-06044	Screw (6x10)
12	08361-35068	Nut
13	33810-44A00	Wire, Starter Motor Lead
14	31861-06C00	• . Cap, Starter Motor Terminal
15	31861-10D00	• . Cap, Starter Relay



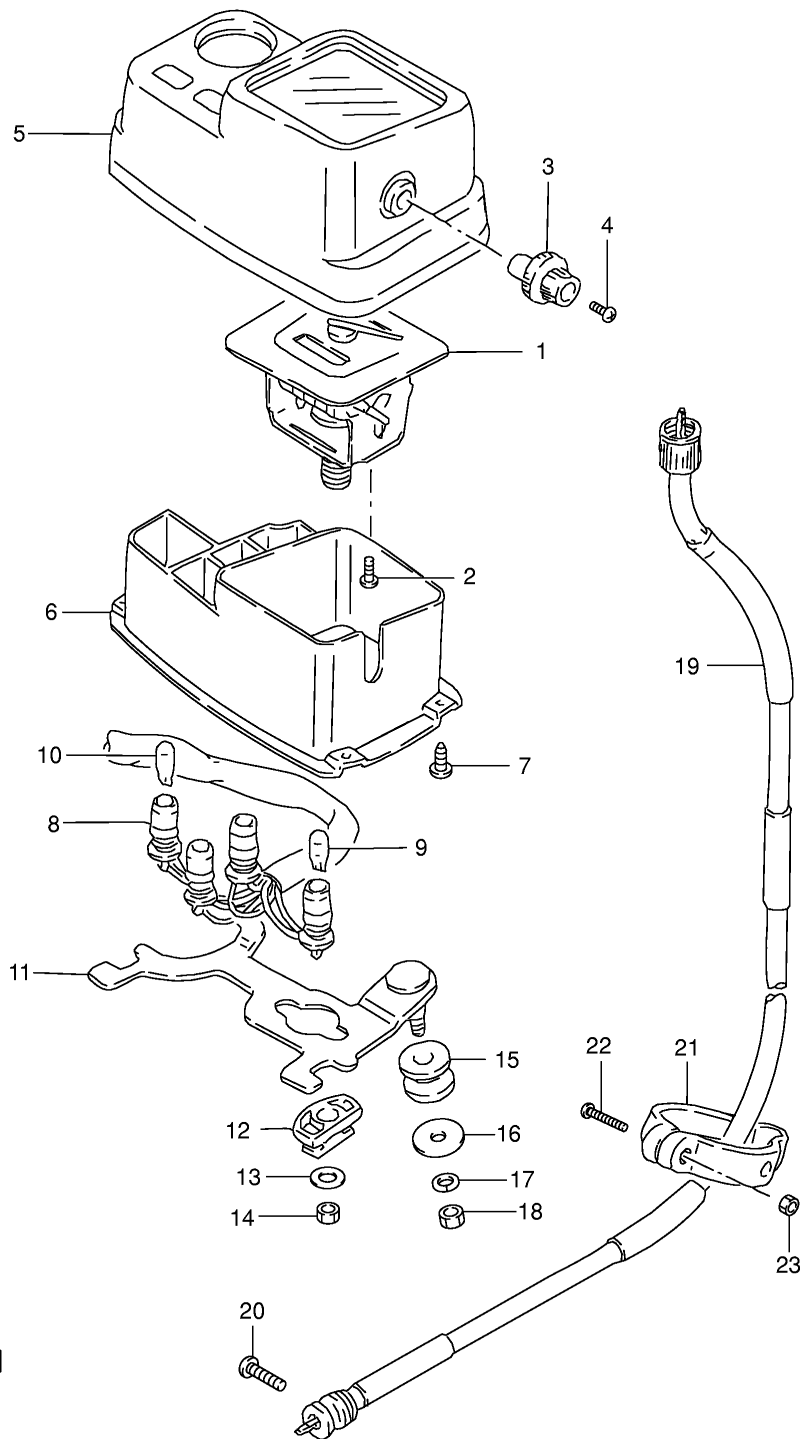 



Ref No	Part No	Description
1	34120-44AB0	Speedometer (mile/kilo)
1	34120-44A90	Speedometer (kilo)
2	02112-74123	Screw
3	34124-14A10	Knob, Trip
4	09139-02003	Screw
5	34150-44AE0	Hood, Meter
5	34150-44AD0	Hood, Meter
6	34111-14A10	Case, Meter
7	34184-12B00	Screw
8	34173-44A90	Socket Assy
9	09471-12028	Bulb (12v,3.4w)
10	09471-12077	Bulb (12v,1.7w)
11	34950-44A00	Bracket, Meter
12	34189-14A10	Cushion
13	09160-05043	Washer (5.5x16x1.2)
14	08310-00057	Nut
15	34956-15100	Cushion
16	09160-06084	Washer (6.5x18x1.6)
17	08321-01063	Washer
18	08310-00063	Nut
19	34910-44A20	Cable Assy, Speedometer
20	02112-05163	Screw
21	34938-01A00	Clamp, Speedometer Cable
22	02112-05163	Screw
23	08310-00053	Nut



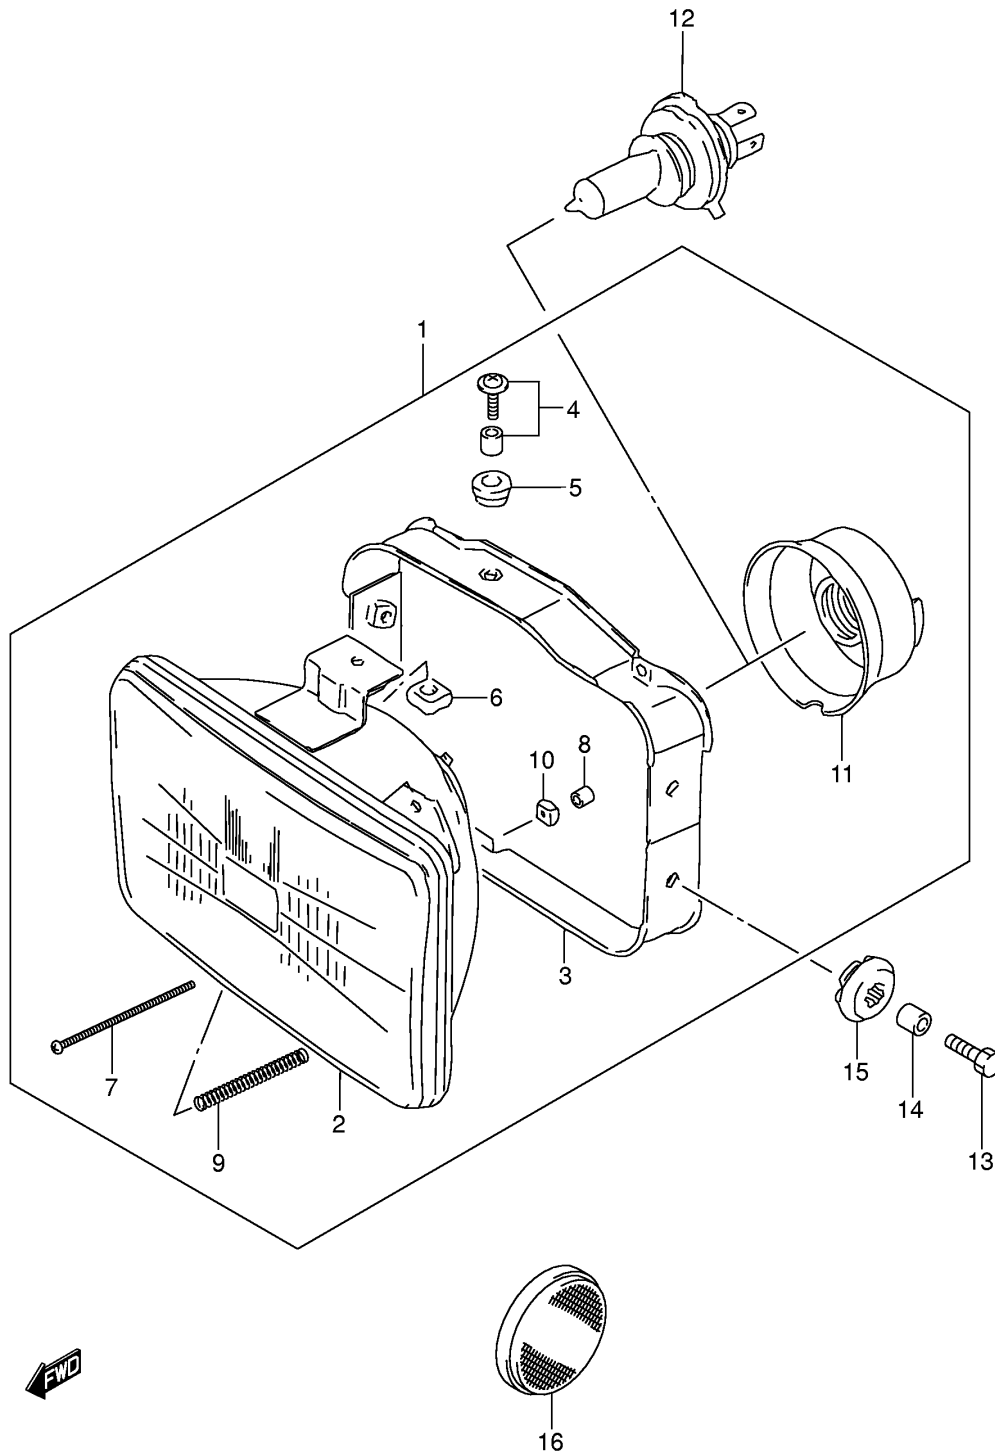 


Ref No	Part No	Description
1	35100-14A32-999	Headlamp Assy
2	35121-14A32	• Lamp Unit
3	35141-14A00	• Ring, Mounting
4	35136-38A00	• Screw, Mounting
5	35139-45230	• Cushion
6	35135-45900	• Nut
7	35151-45900	• Screw
8	35158-43400	• Cap
9	35154-49200	• Spring
10	35152-45600	• Nut
11	35173-01440	• Cover, Socket
12	09471-12185	Bulb (12v,60/55w)
13	09116-06167	Bolt (6x20)
14	09180-06263	Spacer (6.5x9x9)
15	09320-09018	Cushion
16	35950-14A00	Reflector, Front Side




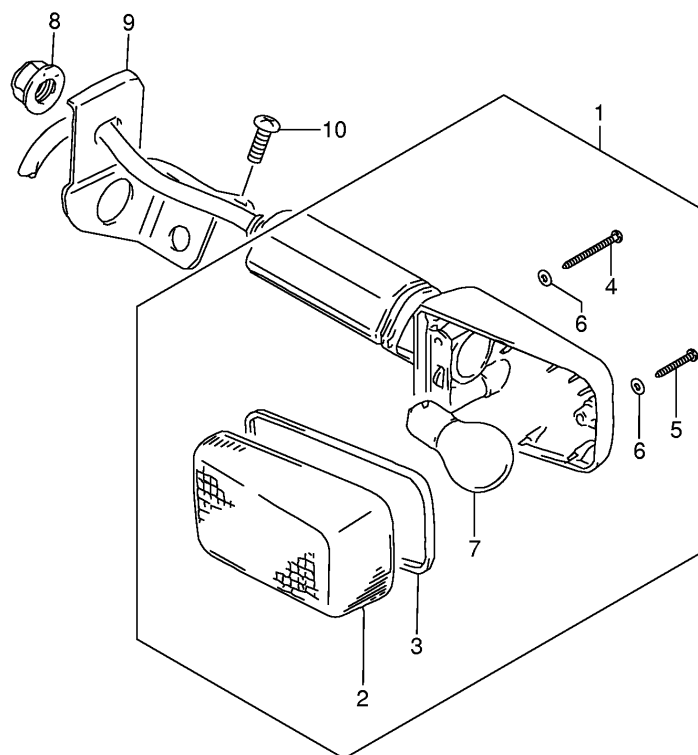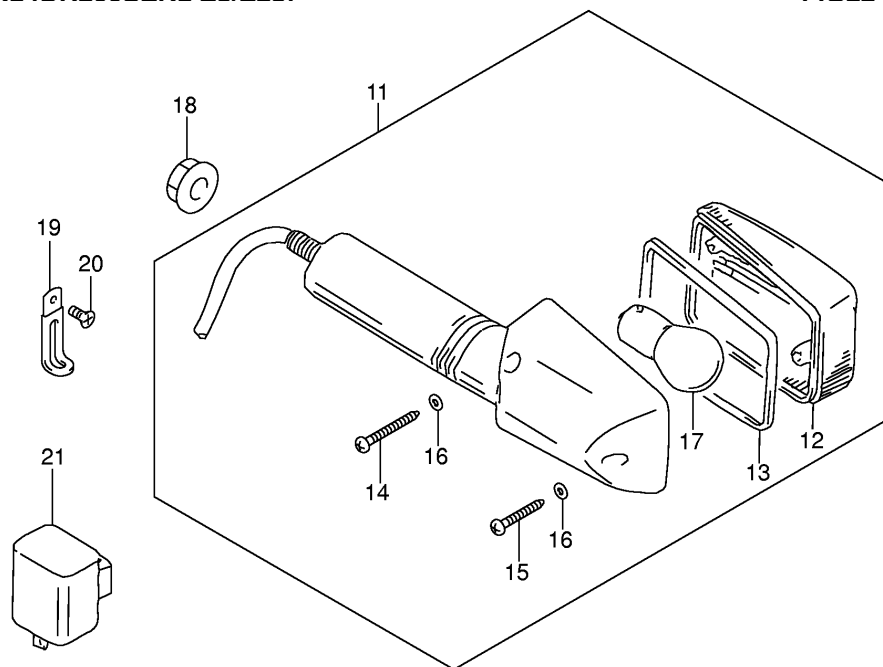  

Ref No	Part No	Description
1	35601-29EC0	Lamp Assy, Front Turn Signal
2	35612-17C20	. . Lens, Front Turn Signal
3	35613-27A00	. . Gasket
4	35623-27A00	. . Screw
5	35725-40511	. . Screw
6	35627-27A02	. . Gasket
7	09471-12045	. . Bulb (12v,21w)
8	08316-10103	Nut
9	35670-44A01	Bracket, Front Turn Rh
9	35680-44A01	Bracket, Front Turn Lh
10	02142-05083	Screw
11	35603-29EK0	Lamp Assy, Rear Turnsinal
12	35652-17C20	. . Lens, Rear Turn Signal
13	35613-27A00	. . Gasket
14	35623-27A00	. . Screw
15	35725-40511	. . Screw
16	35627-27A02	. . Gasket
17	09471-12045	. . Bulb (12v,21w)
18	08316-10103	Nut
19	09404-06432	Clamp (I:80)
20	03541-04103	Screw
21	38610-31X50	Relay, Turn Signal

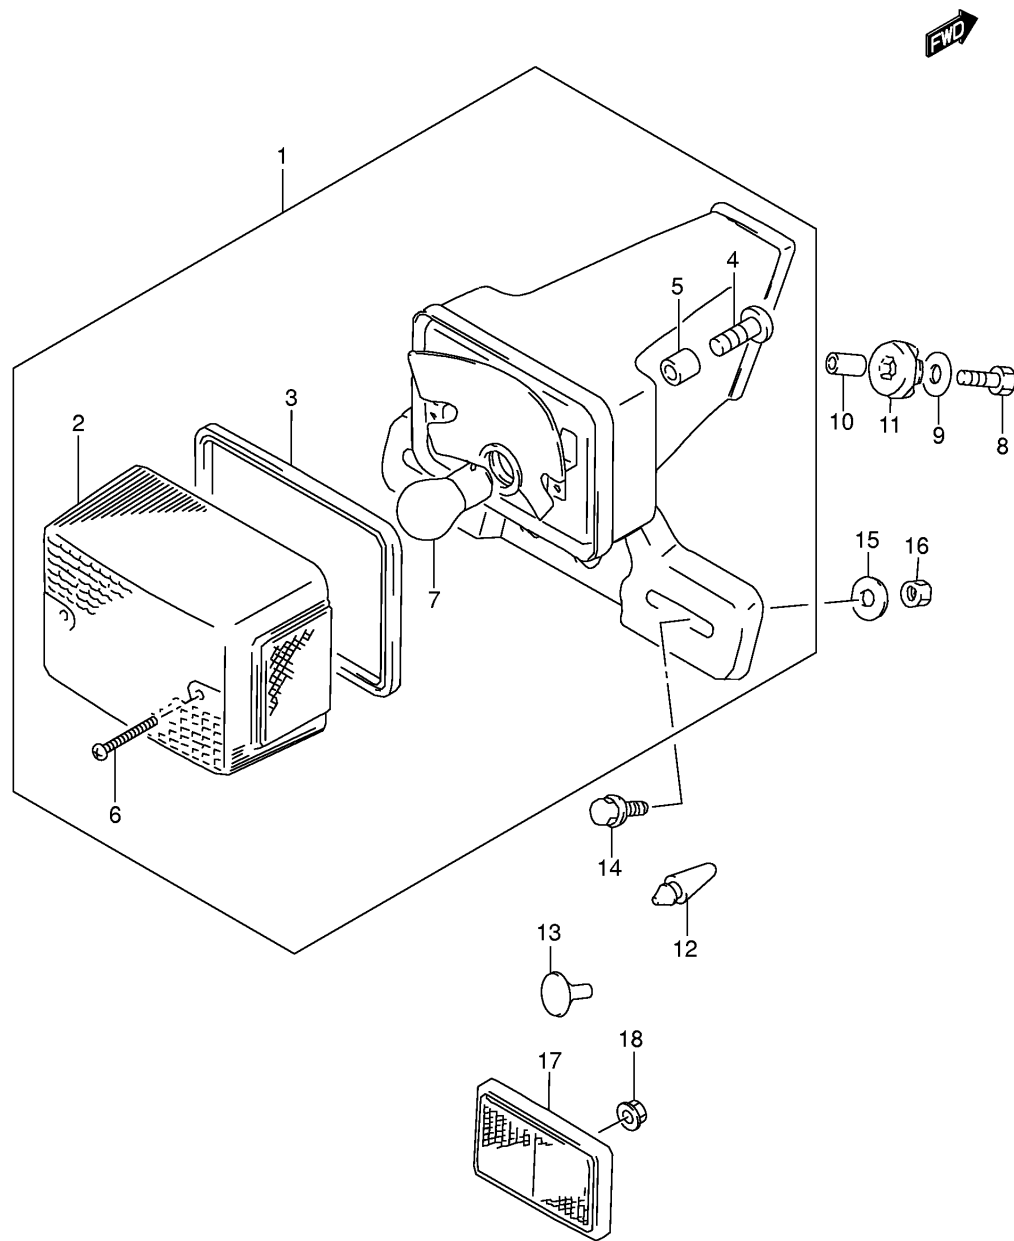 



Ref No	Part No	Description
1	35710-42A30	Lamp Assy, Near Combination
2	35712-42A30	. Lens
3	35713-14D30	. Gasket
4	09125-06055	. Screw (6x25)
5	35766-14D30	. Spacer
6	09125-04501	. Screw, Lens (4x45)
7	09471-12083	. Bulb (12v,21/5w)
8	01500-06203	Bolt
9	09160-06109	Washer (6.5x18x1.6)
10	09180-06291	Spacer (6.5x10x13)
11	09320-09015	Cushion
12	09321-06030	Cushion, Plate
13	09321-06026	Cushion, Rear Fender
14	01500-06303	Bolt
15	09160-06109	Washer (6.5x18x1.6)
16	08310-00063	Nut
17	35970-38E00	Reflector Assy, Near
18	08316-10053	Nut

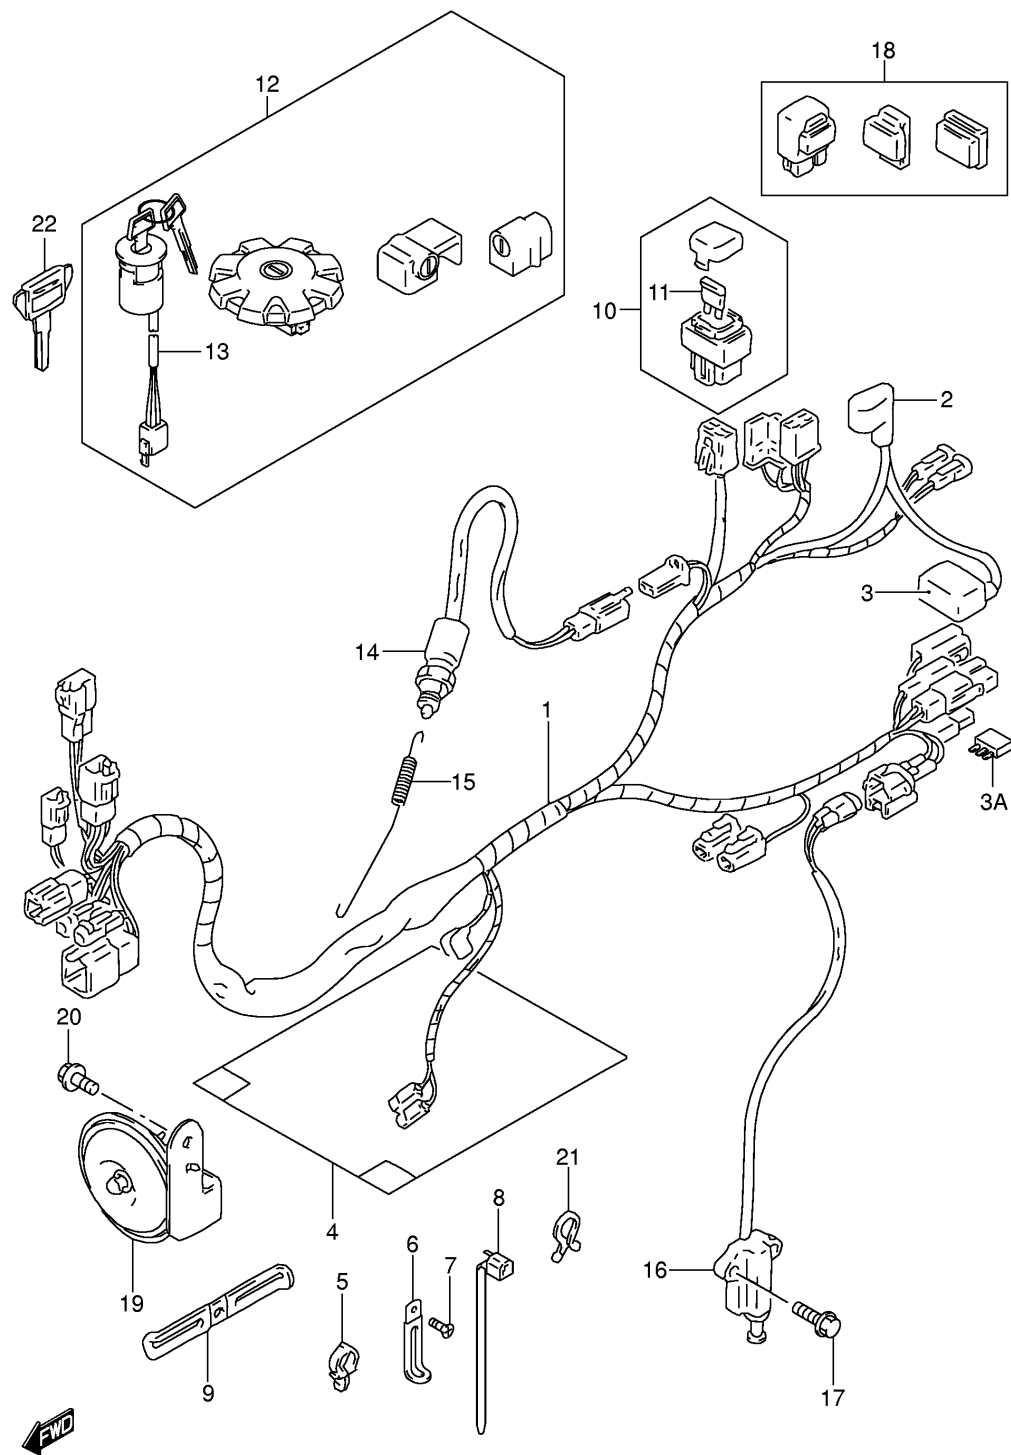 


Ref No	Part No	Description
1	36610-42A50	Harness, Wiring
2	31861-10D00	• . Cap, Relay
3	33624-10D00	• . Cap, Battery (+)
3a	36611-38A00	• . Diode
4	36618-15D20	Cover, Wire Harness
5	09403-12404	Clamp
6	09404-06429	Clamp (l:45)
6	09404-06434	Clamp (l:95)
7	03541-04103	Screw
8	09407-11401	Clamp (l:95)
8	09407-14403	Clamp (l:125)
8	09407-18402	Clamp (l:165)
8	09407-25401	Clamp (l:235)
9	36651-05301	Clamp, Starter Motor Lead
10	36740-24B01	Box Assy, Fuse
11	09481-20101	• . Fuse (20a)
12	37000-44820	Lock Set
12	37000-44830	Lock Set
13	37110-44A01	• . Switch Assy, Ignition
14	37740-31D00	Switch Assy, Stop Lamp
15	09443-06064	Spring
16	37840-44X50	Switch Assy, Side Stand
17	01550-06203	Bolt
18	38740-24X50	Relay Assy, Side Stand
19	38500-44B00	Horn Assy
20	01550-06123	Bolt
21	09408-00012	Clip, Lead Wire
22	37146-03A00	Key, Blank
22	37146-03A10	Key, Blank
22	37146-03A20	Key, Blank
22	37146-03A30	Key, Blank




Ref No	Part No	Description
1	37200-44A70	Switch Assy, Handle Rh
2	02112-04203	• . Screw
3	37400-44A00	Switch Assy, Handle Lh
4	02112-05305	• . Screw

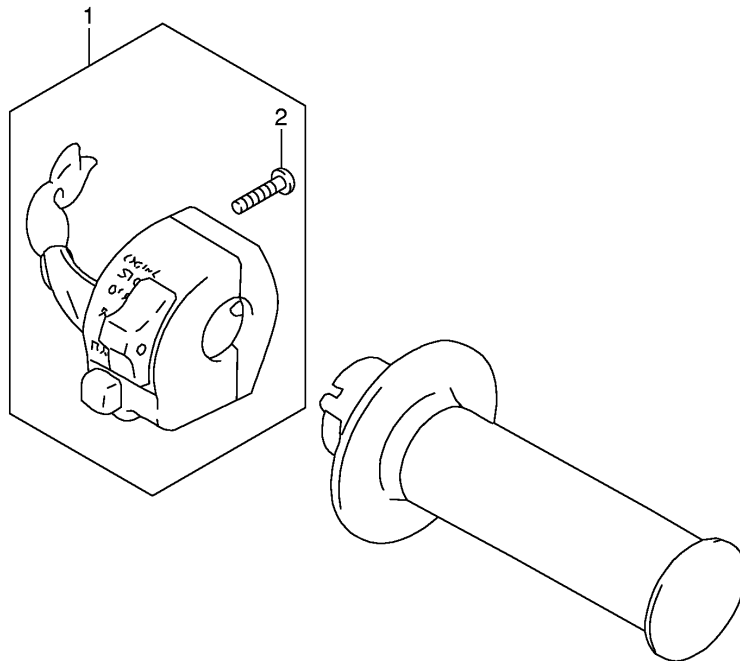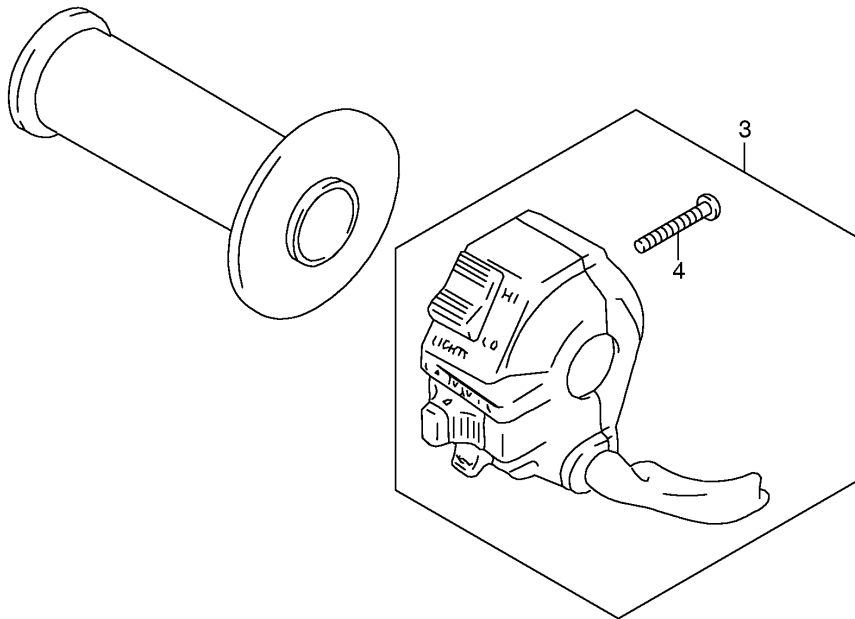  


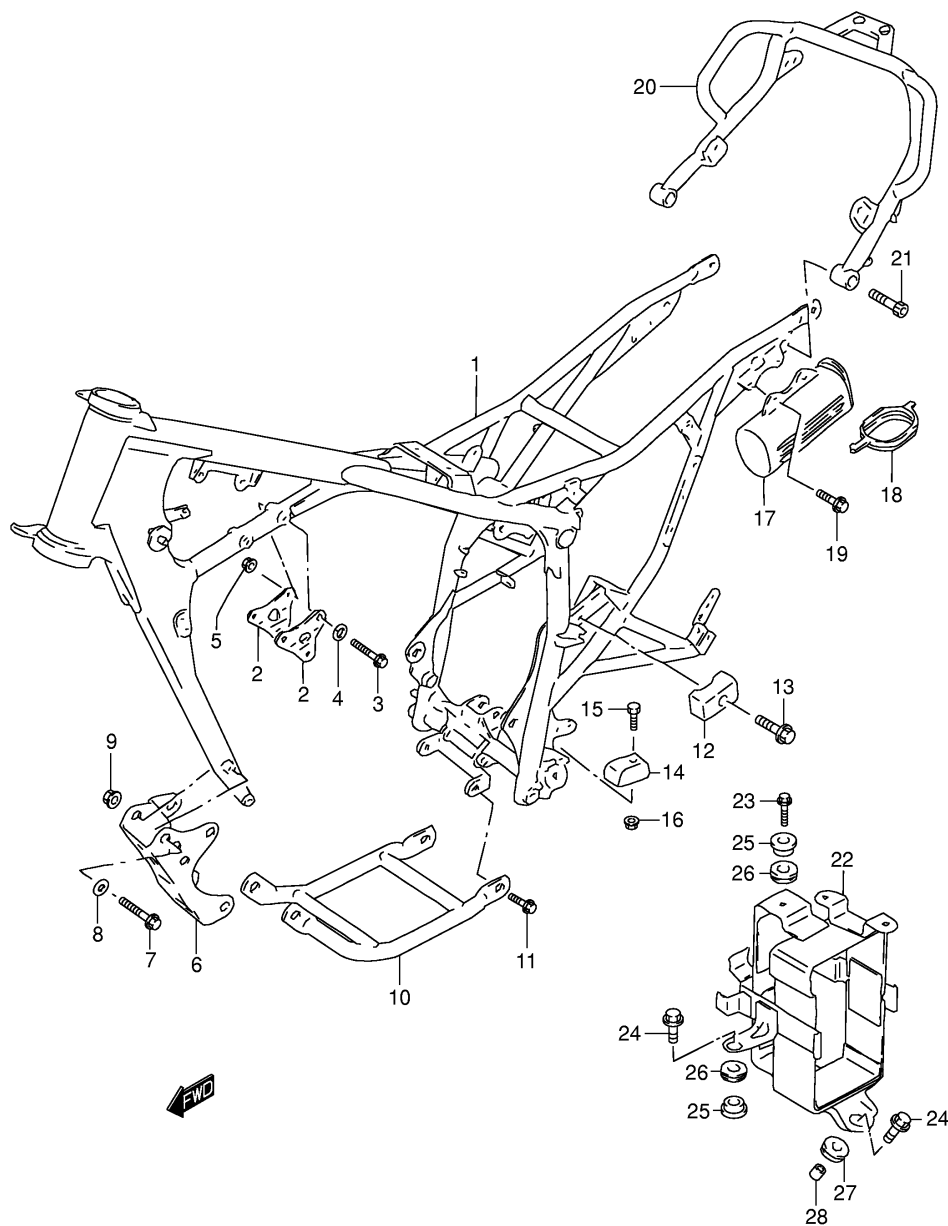 


Ref No	Part No	Description
1	41100-44AB0-YU8	Frame (gray)
1	41100-44AD0-YU8	Frame (gray)
2	41991-42A00-291	Plate, Mount, Upper (black)
3	09103-08332	Bolt (8x53)
4	08321-01083	Lock Washer
5	08319-31083	Nut
6	41992-44AA1-YU8	Plate, Mount Lower (gray)
7	09103-08328	Bolt (8x65)
8	08321-01083	Lock Washer
9	08319-31083	Nut
10	42510-44AA0-YU8	Protector, Engine (gray)
11	01551-10163	Bolt
12	43911-44A00	Guide, Chain Upper
13	01580-06353	Bolt
14	43912-42AA0	Guide, Chain Lower
15	09128-06006	Bolt
16	08319-31063	Nut
17	41551-38200	Holder, Tool
18	41552-37210	Cap, Tool Holder
19	09116-06165	Bolt (6x16)
20	43980-44AB2-YU8	Grip, Rear (gray)
21	09106-08105	Bolt (8x30)
22	41540-44AA0	Holder, Battery
23	01550-06203	Bolt, Upper
24	09116-06131	Bolt, Lower
25	09169-06065	Spacer
26	09320-08021	Cushion
27	09320-10501	Cushion, Lower Lh
28	09180-06285	Spacer, Lower Lh

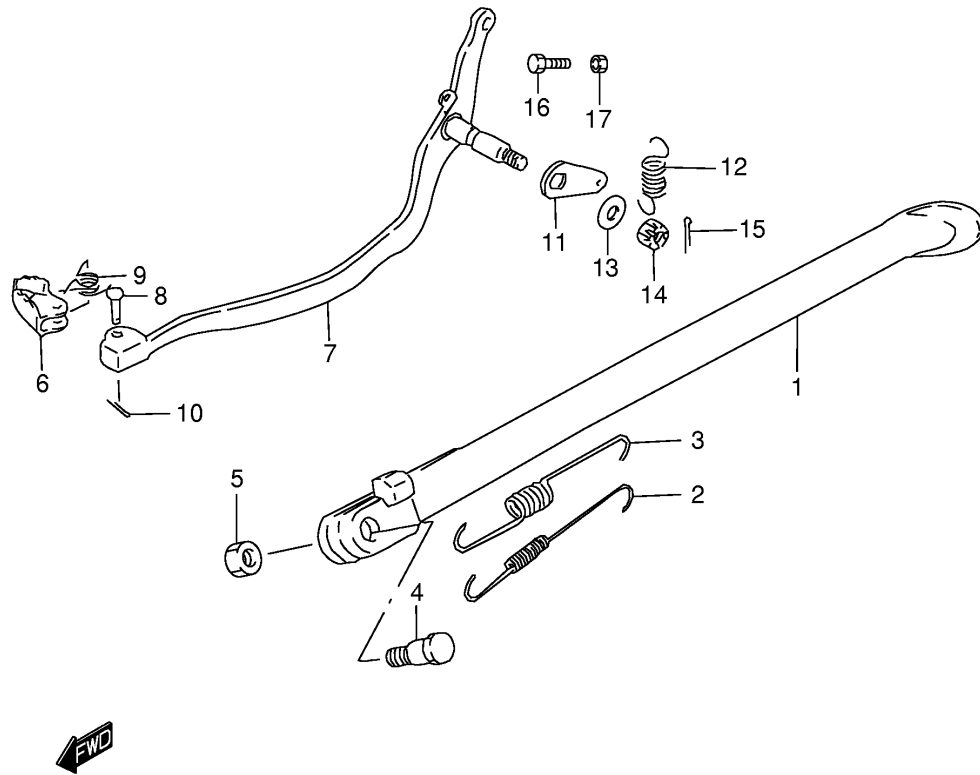 


Ref No	Part No	Description
1	42310-44A33-019	Stand, Prop (black)
2	09443-12035	Spring, Inner
3	09443-20003	Spring, Outer
4	09111-10019	Bolt
5	09159-10097	Nut
6	43110-14130	Pedal, Brake
7	43120-44A12	Arm, Brake Pedal
8	09200-06038	Pin
9	09444-11005	Spring
10	04111-20158	Cotter Pin
11	43128-38200	Arm, Brake Return Spring
12	09443-14002	Spring
13	08211-08202	Thrust Washer
14	08314-40083	Nut
15	04111-20208	Cotter Pin
16	09100-06009	Bolt (6x23)
17	08310-00063	Nut

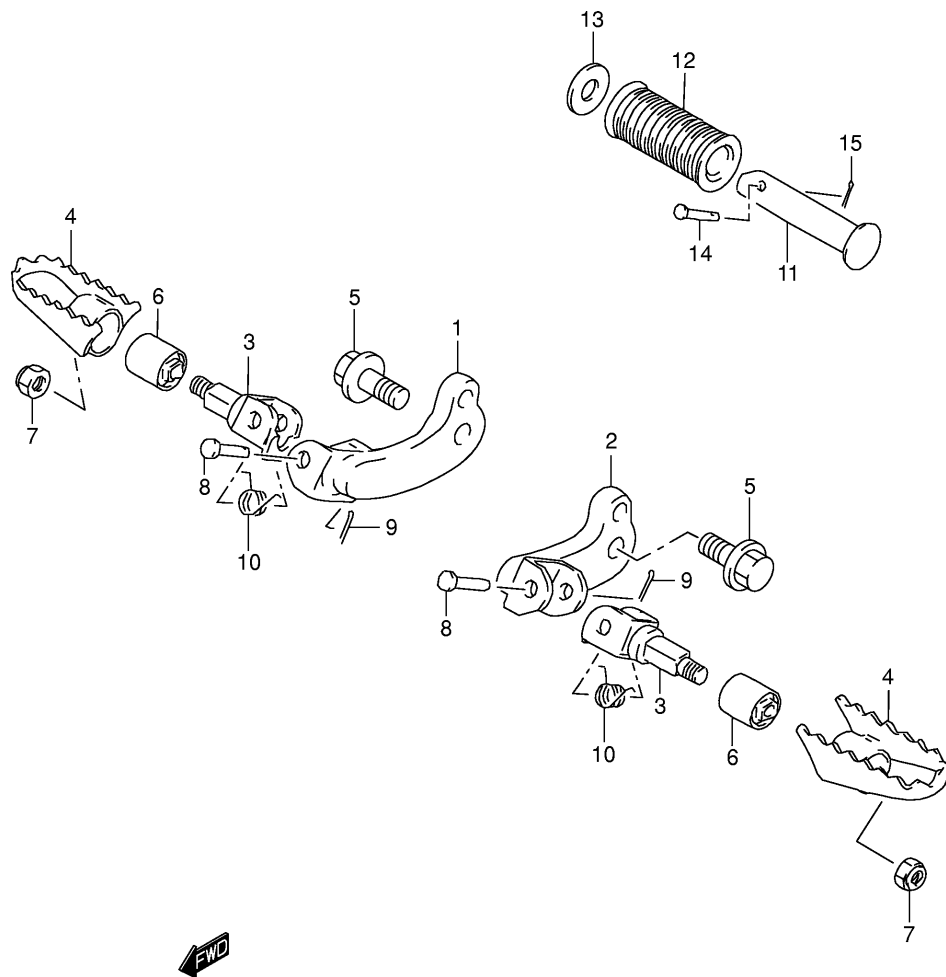 


Ref No	Part No	Description
1	43510-44A03-019	Bar, Front Footrest Rh (black)
2	43520-44A03-019	Bar, Front Footrest Lh (black)
3	43530-44A02	Bracket, Front Footrest
4	43550-44A01-019	Footrest, Front (black)
5	09103-12047	Bolt (12x25)
6	09319-10053	Bush
7	08319-31103	Nut
8	09200-08002	Pin
9	04111-20158	Cotter Pin
10	09448-14037	Spring
11	43610-03001	Bar, Footrest Rubber
12	43612-33200	Rubber, Pillion Footrest
13	09160-19024	Washer (19.5x32x2)
14	09200-06033	Pin
15	04111-20158	Cotter Pin

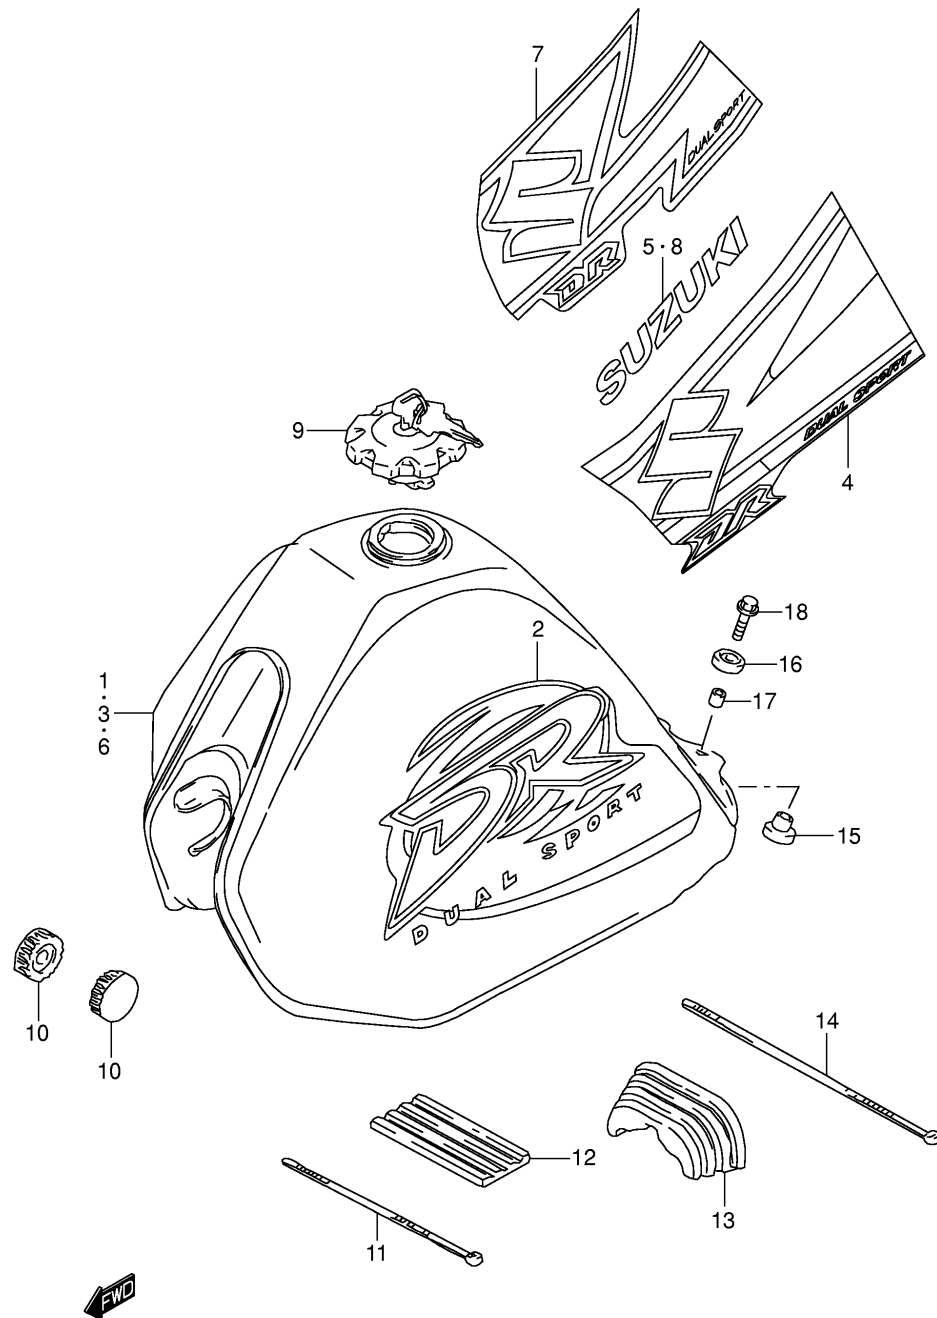 

Ref No	Part No	Description
9	44200-12851	Cap Set, Fuel Tank
9	44200-05820	Cap Set, Fuel Tank
10	09329-10016	Cushion
11	09407-25402	Clamp
12	44541-14500	Cushion, Fuel Tank Upper
13	44542-14A00	Cushion, Fuel Tank Rear
14	09407-30402	Clamp
15	09320-10020	Cushion
16	09320-14013	Cushion
17	09180-06271	Spacer (6.5x9x18)
18	01570-06303	Bolt

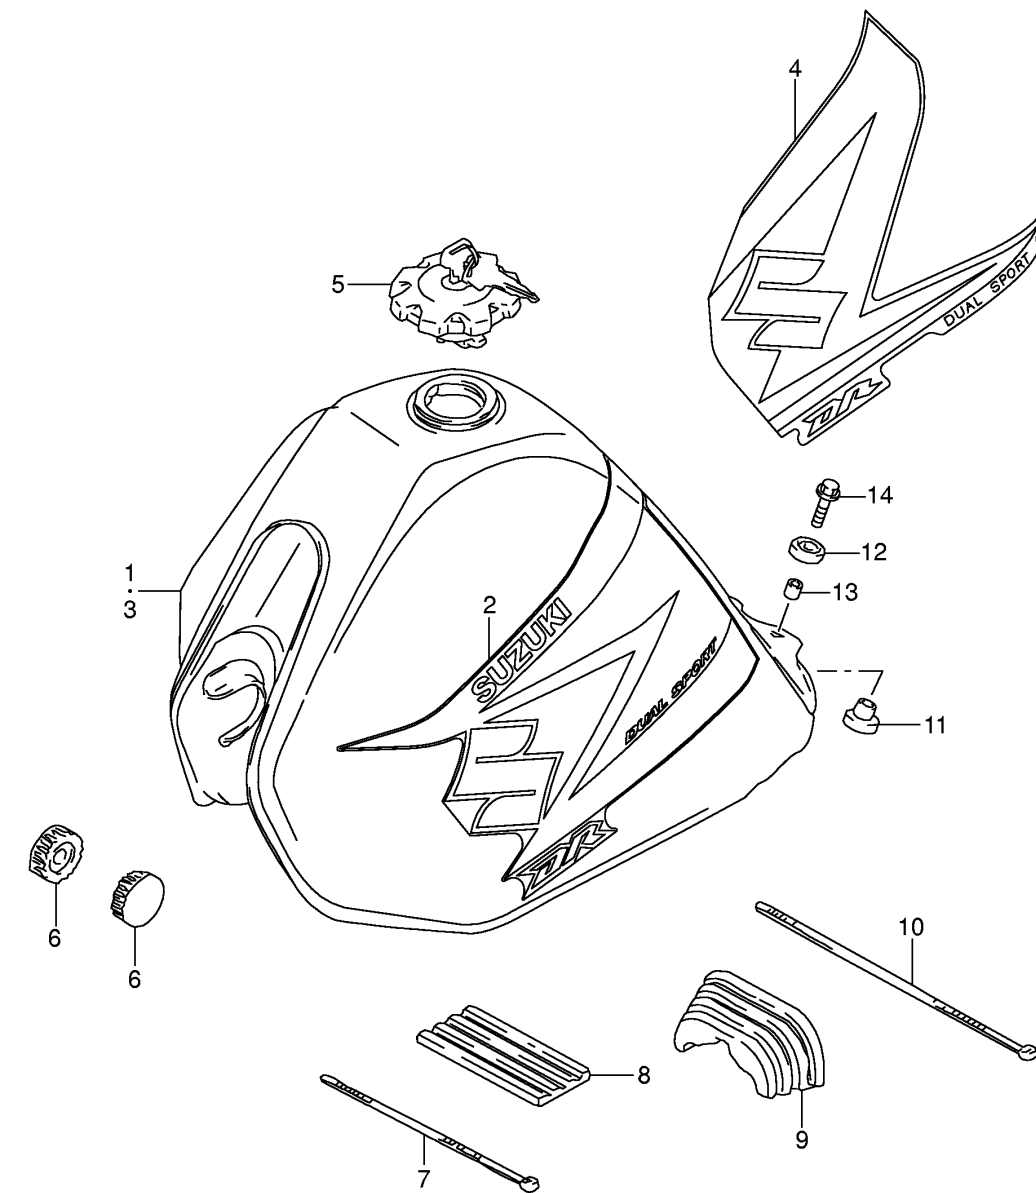 




Ref No	Part No	Description
1	49200-44A00-YU1	Tank Assy, Fuel (yellow)
1	49200-44A00-YC2	Tank Assy, Fuel (blue)
1	49200-44A10-YU1	Tank Assy, Fuel (yellow)
1	49200-44A10-YC2	Tank Assy, Fuel (blue)
2	68110-44AS0-NN2	• . Tape Set, Fuel Tank
2	68110-44AS0-ABM	• . Tape Set, Fuel Tank
5	44200-12851	Cap Set, Fuel Tank
5	44200-05820	Cap Set, Fuel Tank
6	09329-10016	Cushion
7	09407-25402	Clamp
8	44541-14500	Cushion, Fuel Tank Upper
9	44542-14A00	Cushion, Fuel Tank Rear
10	09407-30402	Clamp
11	09320-10020	Cushion
12	09320-14013	Cushion
13	09180-06271	Spacer (6.5x9x18)
14	01570-06303	Bolt

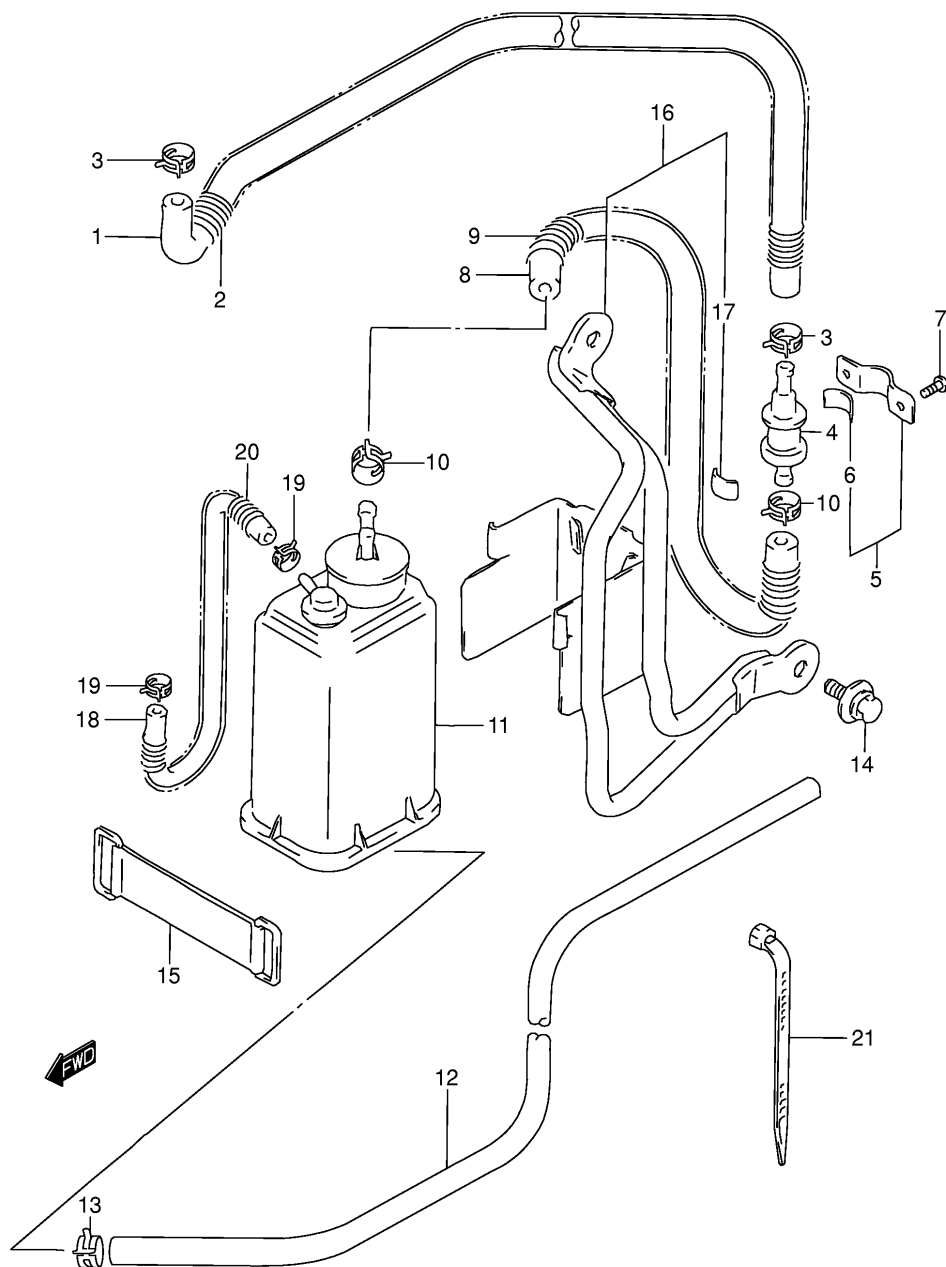 

Ref No	Part No	Description
1	09343-05509	Hose, Fuel Tank
2	09440-13053	Spring
3	09401-11413	Clip
4	44240-38A00	Valve, Roll Cover
5	44892-24A00	Plate, Valve
6	44894-24A00	• . Cushion
7	02112-04083	Screw
8	09343-05414	Hose, Valve Charge
9	09440-13043	Spring
10	09401-11413	Clip
11	17210-44A00	Canister
12	09352-70113-00B	Hose, Canister Air (l:2000->50)
13	09401-10409	Clip
14	09116-06130	Bolt
15	09462-00034	Band
16	44880-44A00	Plate
17	44894-24A00	• . Cushion
18	09355-35755-600	Hose, Carb (l:600->50)
19	09401-06405	Clip
20	09440-10031	Spring
21	09407-14403	Clamp


Ref No	Part No	Description
1	44300-44AB0	Cock Assy, Fuel
2	44348-87420	• . O Ring
3	09128-06006	Screw (6x20)
4	09168-06026	Gasket (6.4x11.5x0.8)
5	09352-50823-600	Hose (l:600->60)
5	09352-50823-600	Hose (l:600->80)
6	09401-08401	Clip
7	09440-10009	Spring

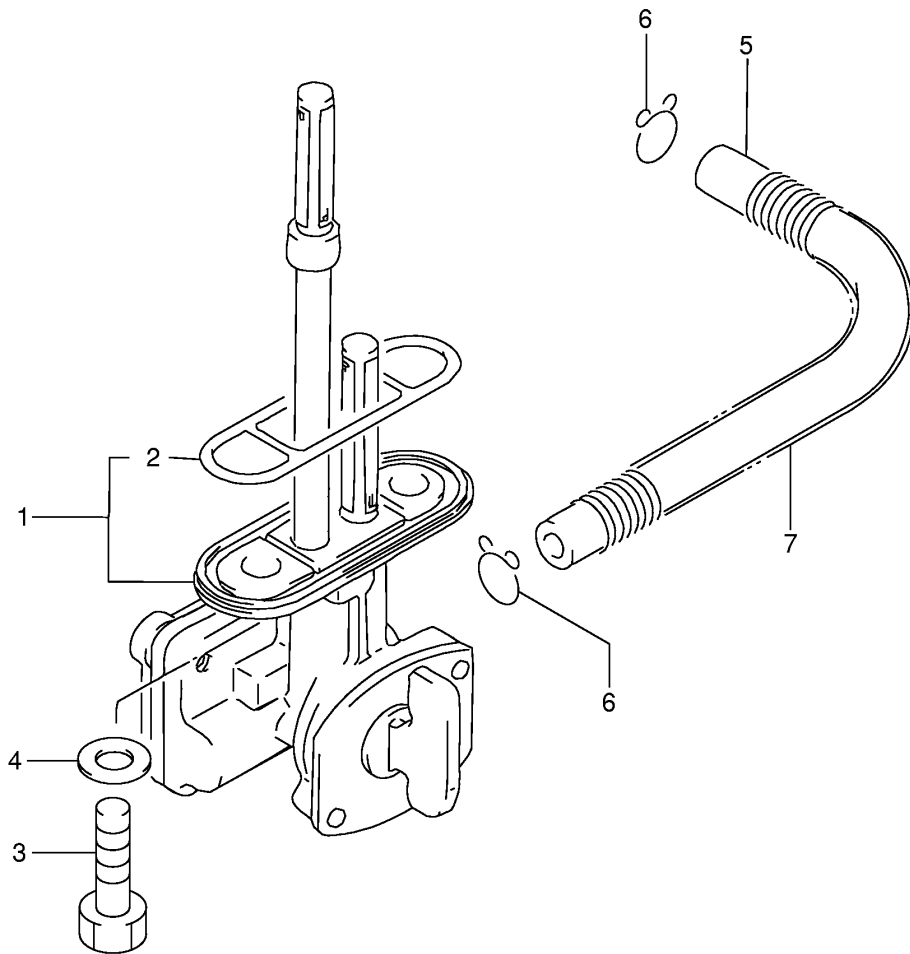 

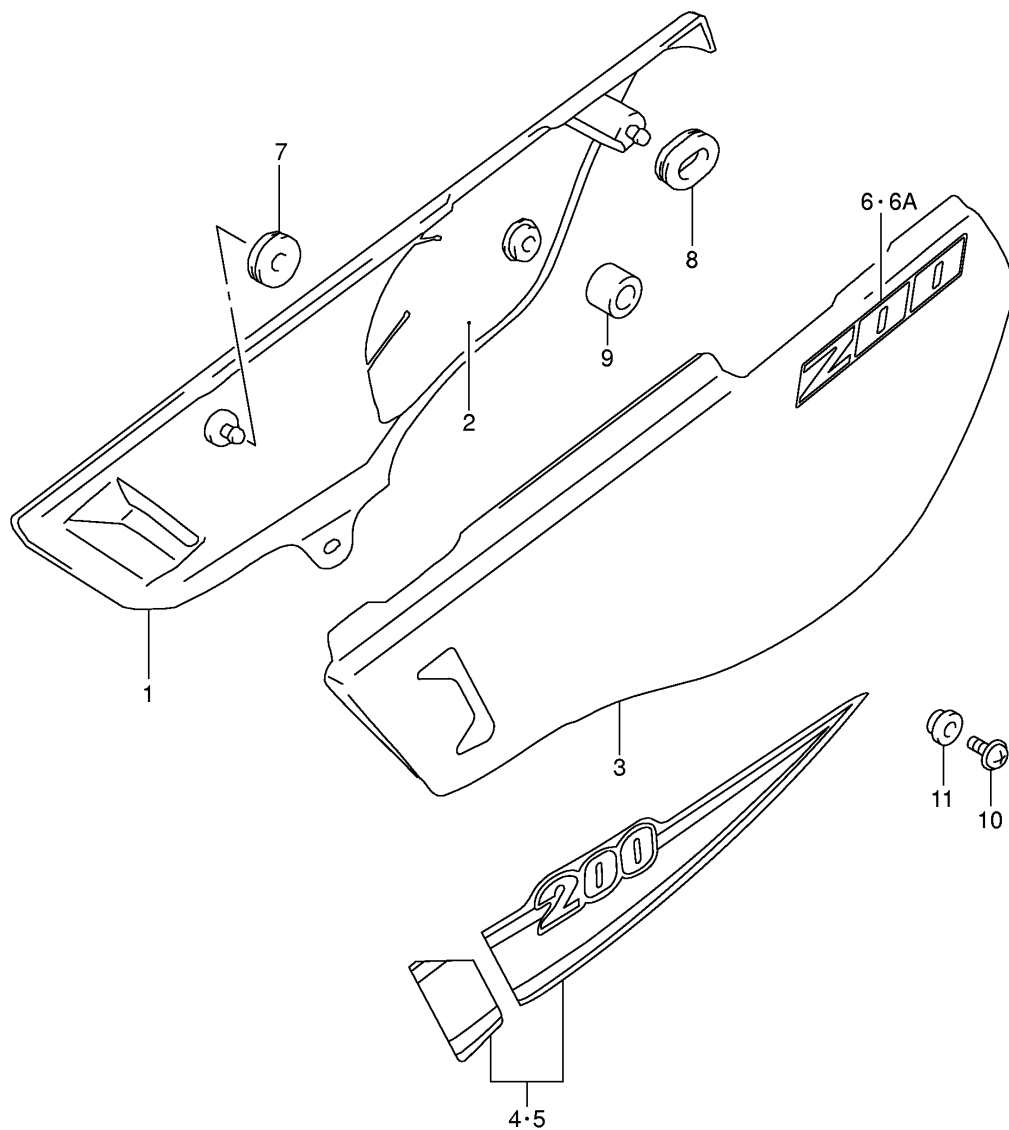  


Ref No	Part No	Description
1	47111-44AA0-30H	Cover, Frame Rh (white)
2	47166-44AA0	Shield, Frame Cover Rh
3	47211-44AA0-30H	Cover, Frame Lh (white)
6	68131-44AA0-8YM	Emblem
7	09320-08018	Cushion
8	09320-08029	Cushion
9	09321-10027	Cushion
10	09136-06017	Screw (6x16)
11	09169-06028	Washer




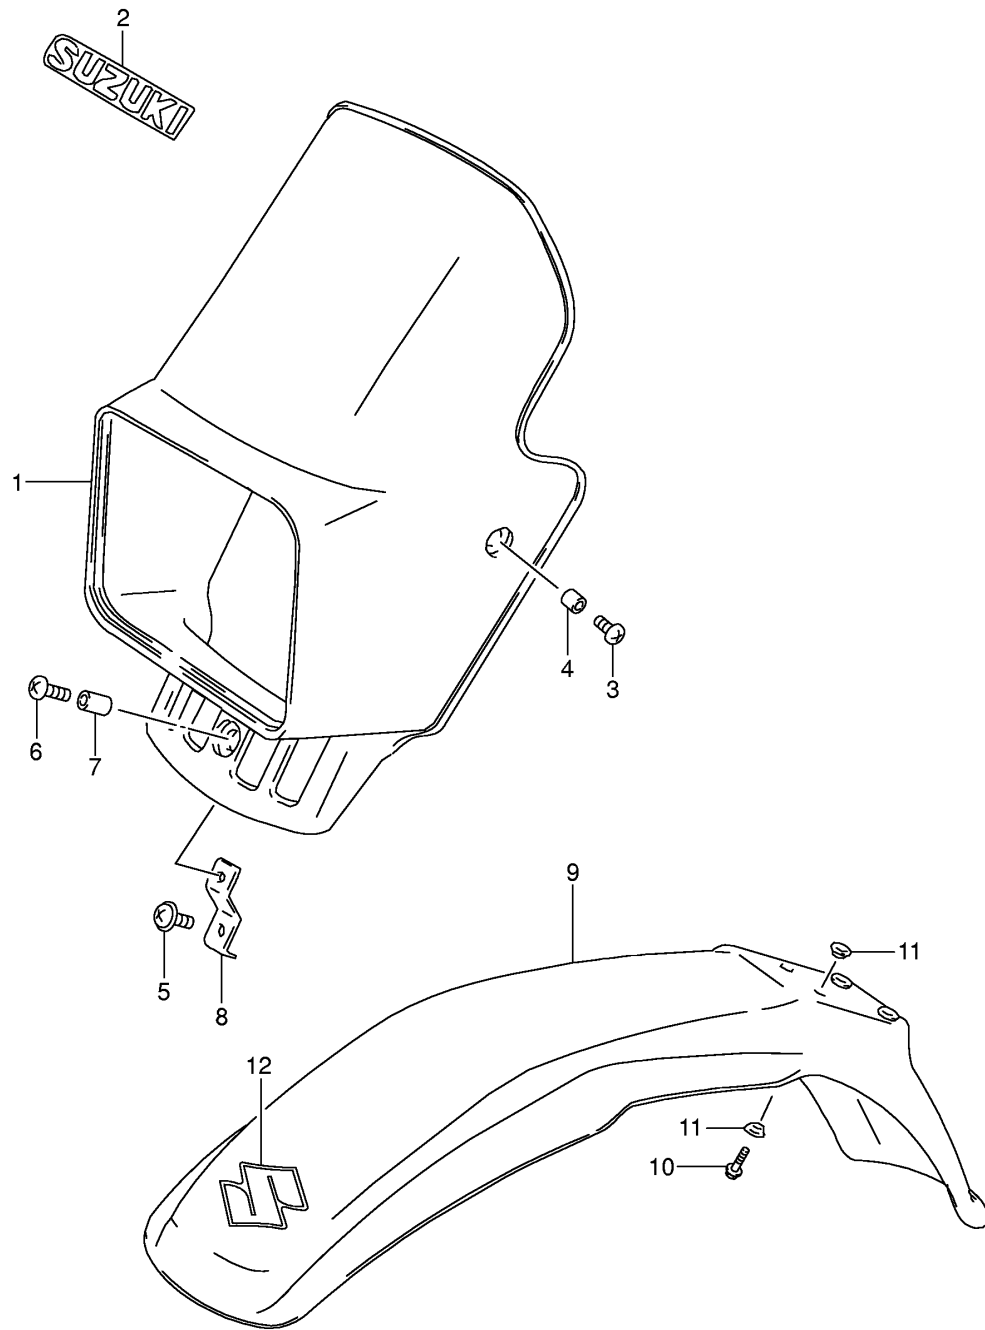 


Ref No	Part No	Description
1	51811-14A20-30H	Cover, Headlamp (white)
2	68171-44B00-8YM	Emblem, Suzuki
3	02142-06123	Screw
4	09180-06245	Spacer (6.1x8x3.5)
5	02112-36127	Screw
6	02142-06203	Screw
7	09180-06249	Spacer (6.1x8x12)
8	51814-44A00	Brace, Cover Lower
9	53111-44A00-YU1	Fender, Front (yellow)
9	53111-44A00-YJ4	Fender, Front (blue)
10	01550-06163	Bolt
11	09169-06054	Washer

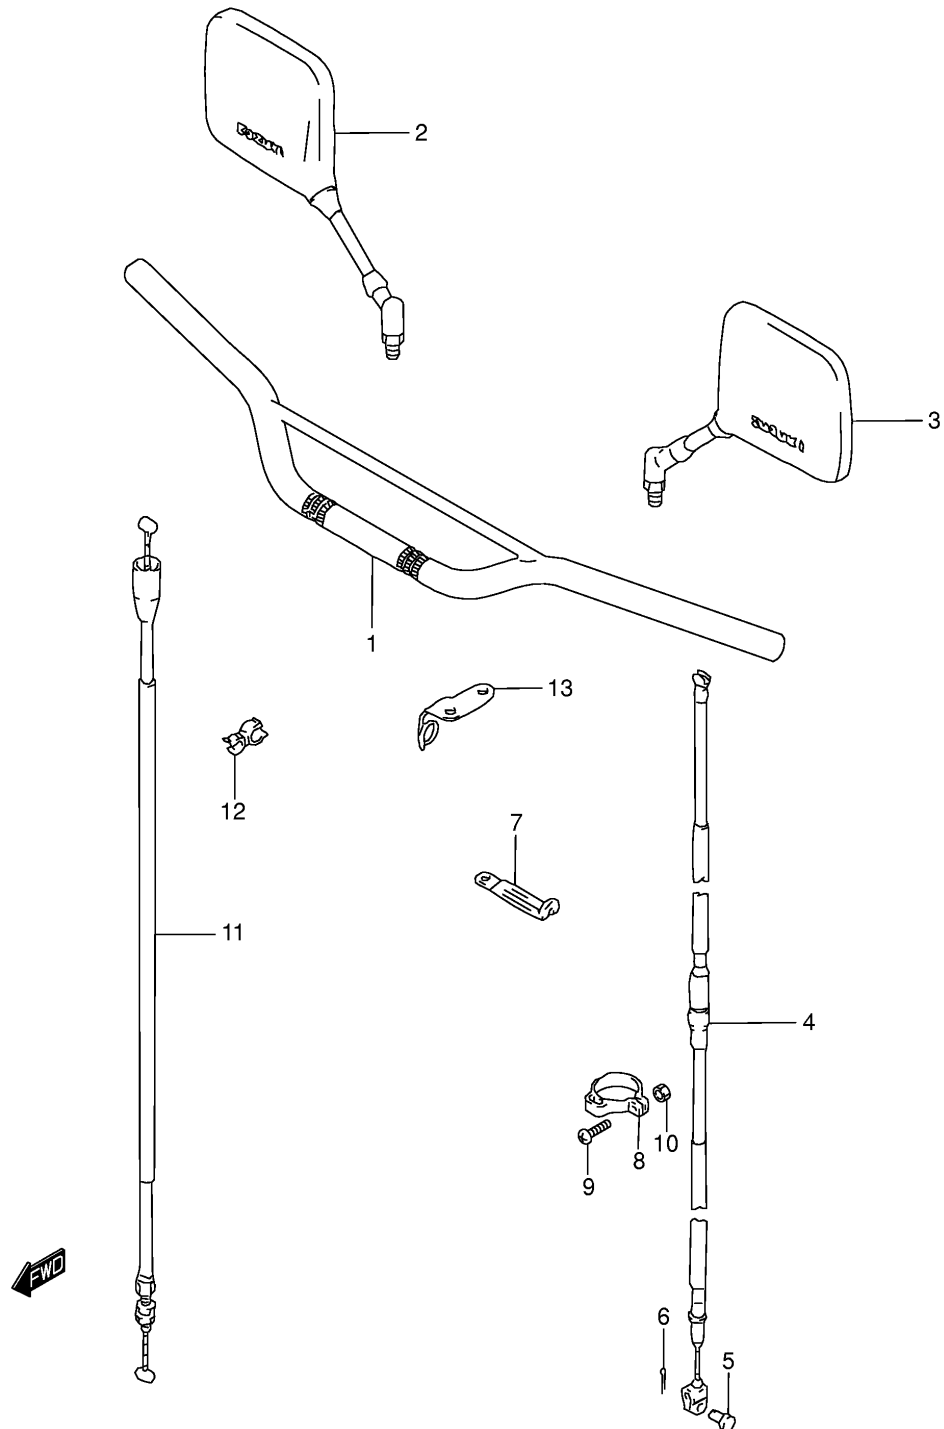 


Ref No	Part No	Description
1	56110-44AA0-291	Handlebar (black)
2	56500-10041	Mirror Assy, Rear View Rh
3	56600-10041	Mirror Assy, Rear View Lh
4	58200-44AB1	Cable Assy, Clutch
5	09200-06004	Pin (l:13)
6	04111-20158	Cotter Pin
7	09407-25401	Clamp (l:235)
8	58285-05351	Clamp, Clutch Cable
9	02112-05163	Screw
10	08310-00053	Nut
11	58300-44AA0	Cable Assy, Throttle
12	09408-00078	Clamp, Throttle Cable
13	58620-15D10	Guide, Clutch Cable

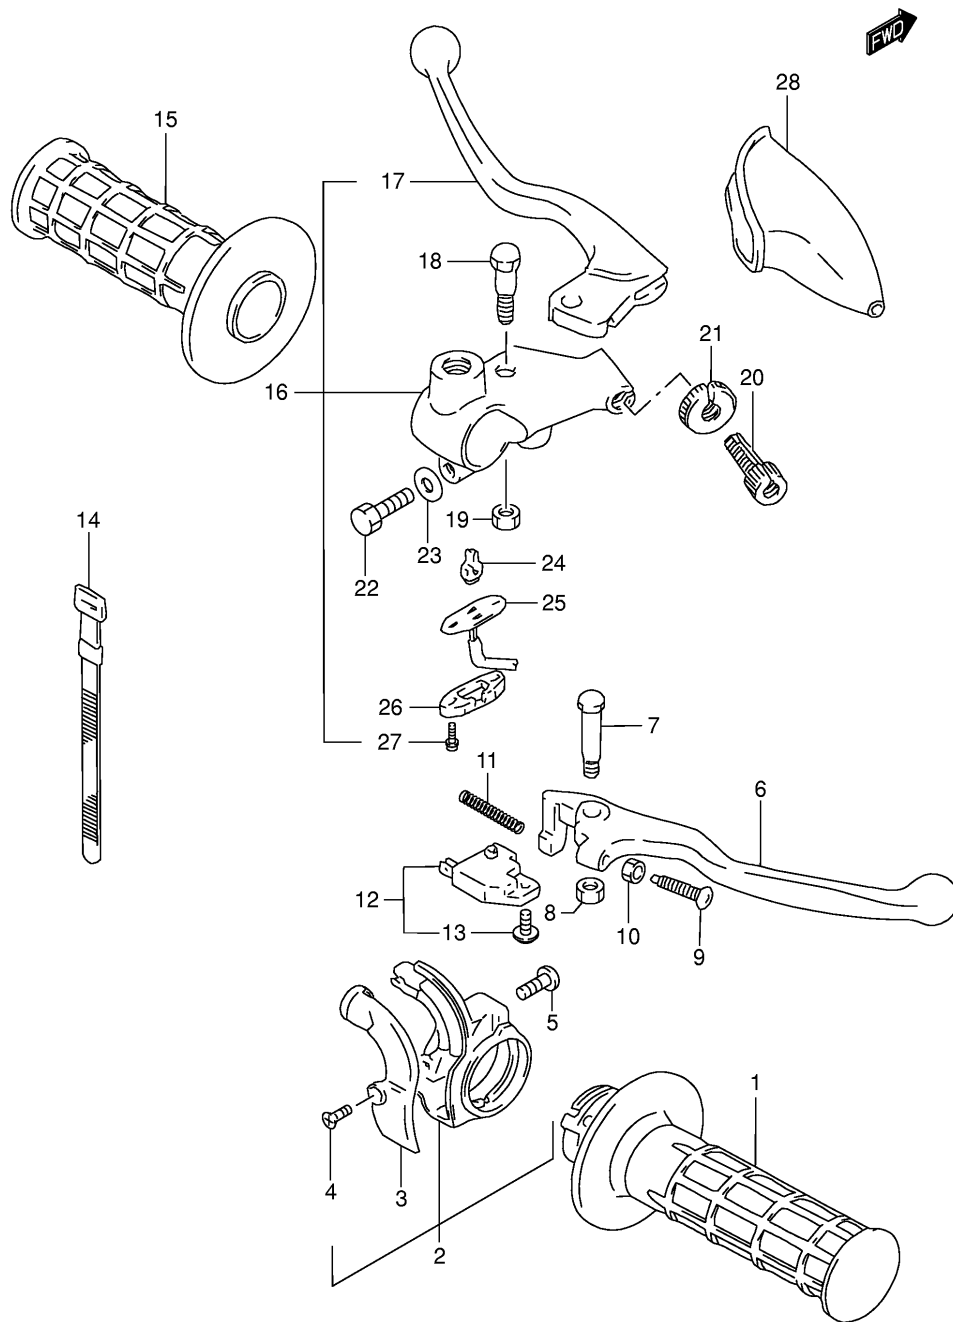 


Ref No	Part No	Description
1	57110-14D00	Grip, Throttle
2	57100-28B00	Case Assy, Throttle
3	57129-13601	• . Cover
4	02122-04103	• . Screw
5	02112-05164	• . Screw
6	57421-03D00	Lever, Brake
7	57431-14500	Bolt, Brake Lever
8	08319-21068	Nut
9	57431-14511	Bolt, Adjust
10	08310-00053	Nut
11	57318-14502	Spring, Return
12	57460-17C11	Switch Assy, Stop
13	57465-17C00	• . Screw
14	09407-12402	Clamp (l:120)
15	57211-27C00	Grip, Lh
16	57500-44AD0	Lever Assy, Clutch
17	57620-15D11	• . Lever
18	57431-11013	• . Bolt
19	08319-21068	• . Nut
20	57441-11010	• . Adjuster
21	57442-44B00	• . Nut
22	01500-06207	• . Bolt
23	08322-01067	• . Washer
24	57465-18601	• . Contact
25	57541-49100	• . Wire Harness
26	57481-33010	• . Cover
27	57484-49110	• . Screw
28	57341-40002	Cover, Clutch Lever

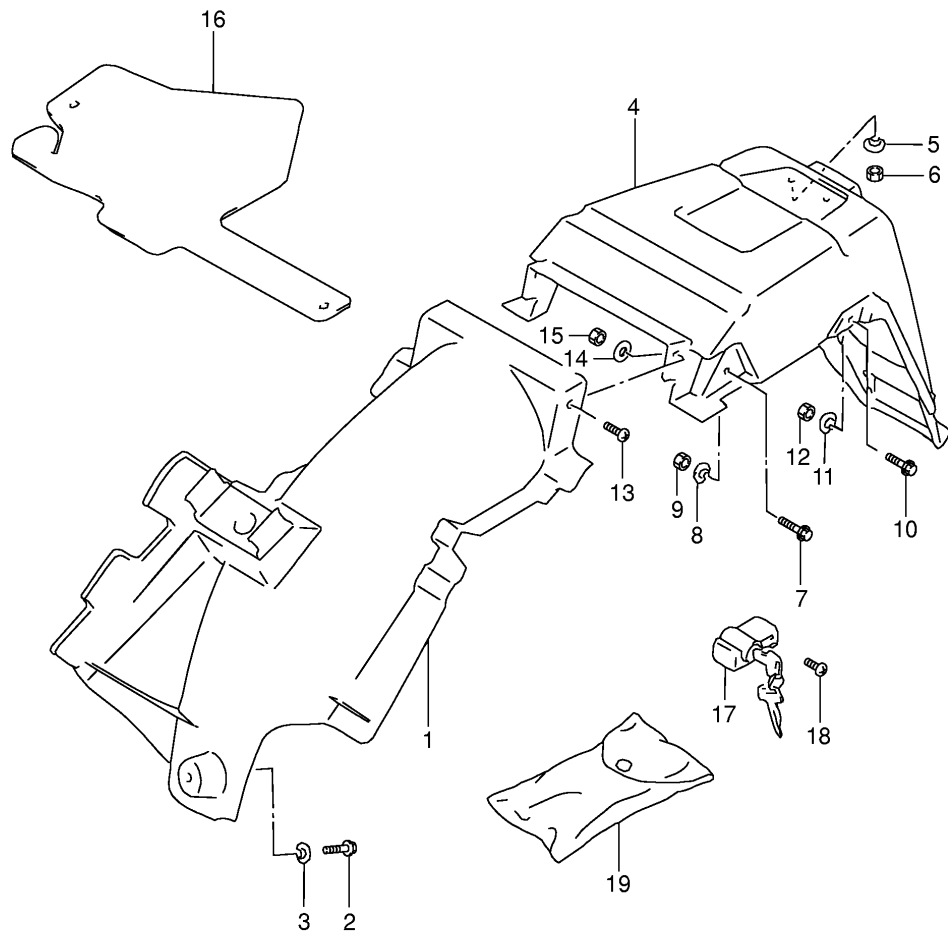 


Ref No	Part No	Description
1	63110-44AA0	Body, Rear Fender Front
2	01550-06123	Bolt
3	09169-06010	Washer
4	63100-44AC0-YU1	Body Assy, Rear Fender (yellow)
4	63100-44AC0-YJ4	Body Assy, Rear Fender (blue)
5	09169-06045	Washer
6	08319-31067	Nut
7	09106-08120	Bolt, Front
8	09169-08037	Washer
9	08310-00083	Nut
10	01550-06203	Bolt, Rear
11	09169-06045	Washer
12	08319-31067	Nut
13	02142-06163	Screw, Fr/r
14	09160-06084	Washer (6.5x18x1.6)
15	08319-31067	Nut
16	63411-44AA0	Mud Flap, Rear Fender Front
17	95700-44810	Lock Set, Helmet
18	09139-06089	Screw
19	09800-21022	Tool Set

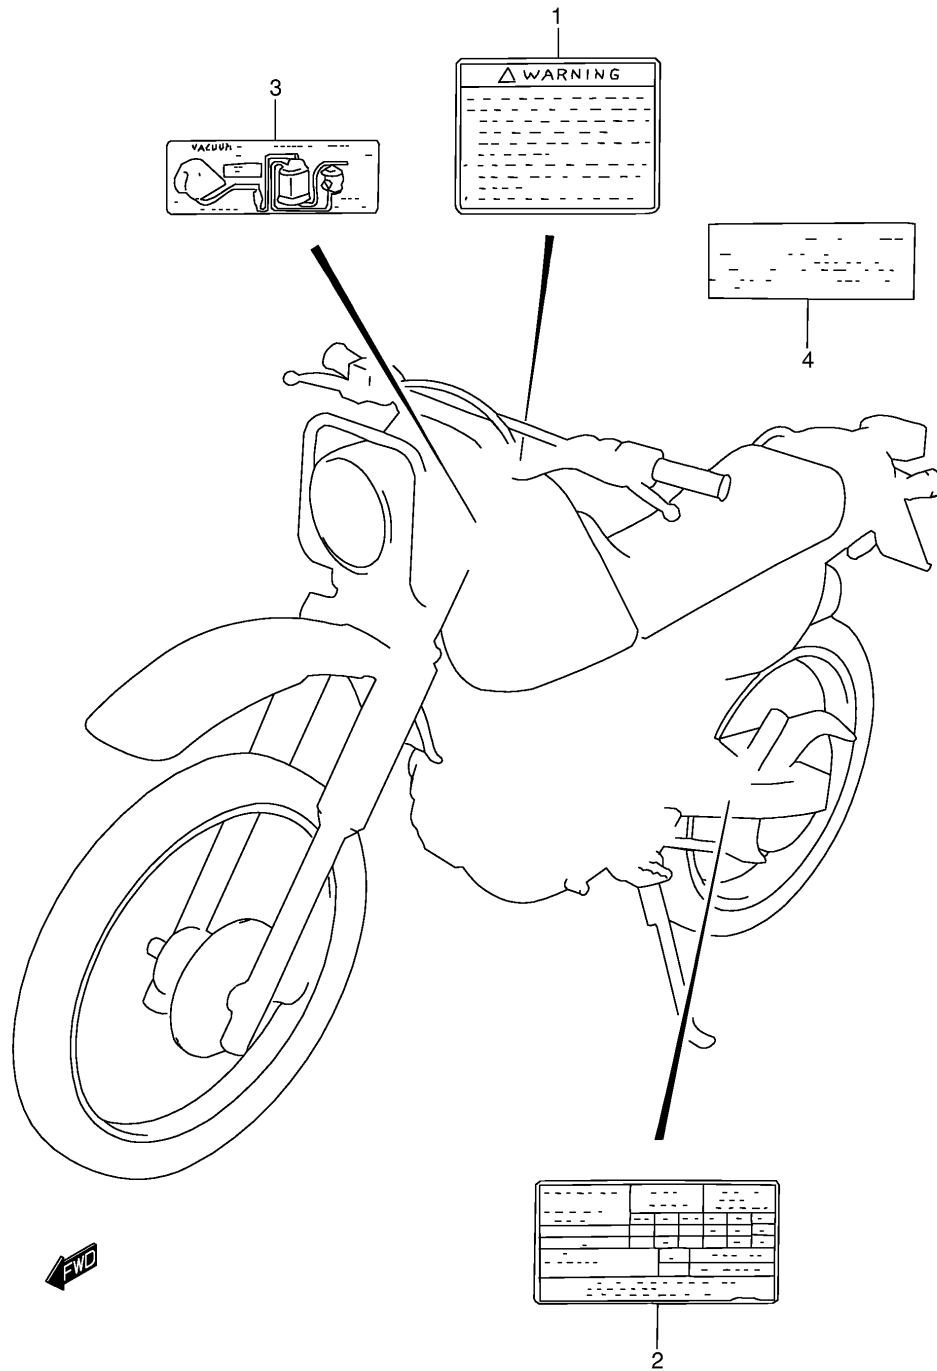 


Ref No	Part No	Description
1	68319-29F00	Label, Warning (english)
1	68319-29F10	Label, Warning
2	68332-42AC0	Label, Tire (english)
2	68332-42AD0	Label, Tire
3	68387-44AA0	Label, Piping Diagram
4	68353-26E02	Label, Manual Notice
5	99011-42A56-03A	Manual, Owner's
5	99011-42A56-28B	Manual, Owner's

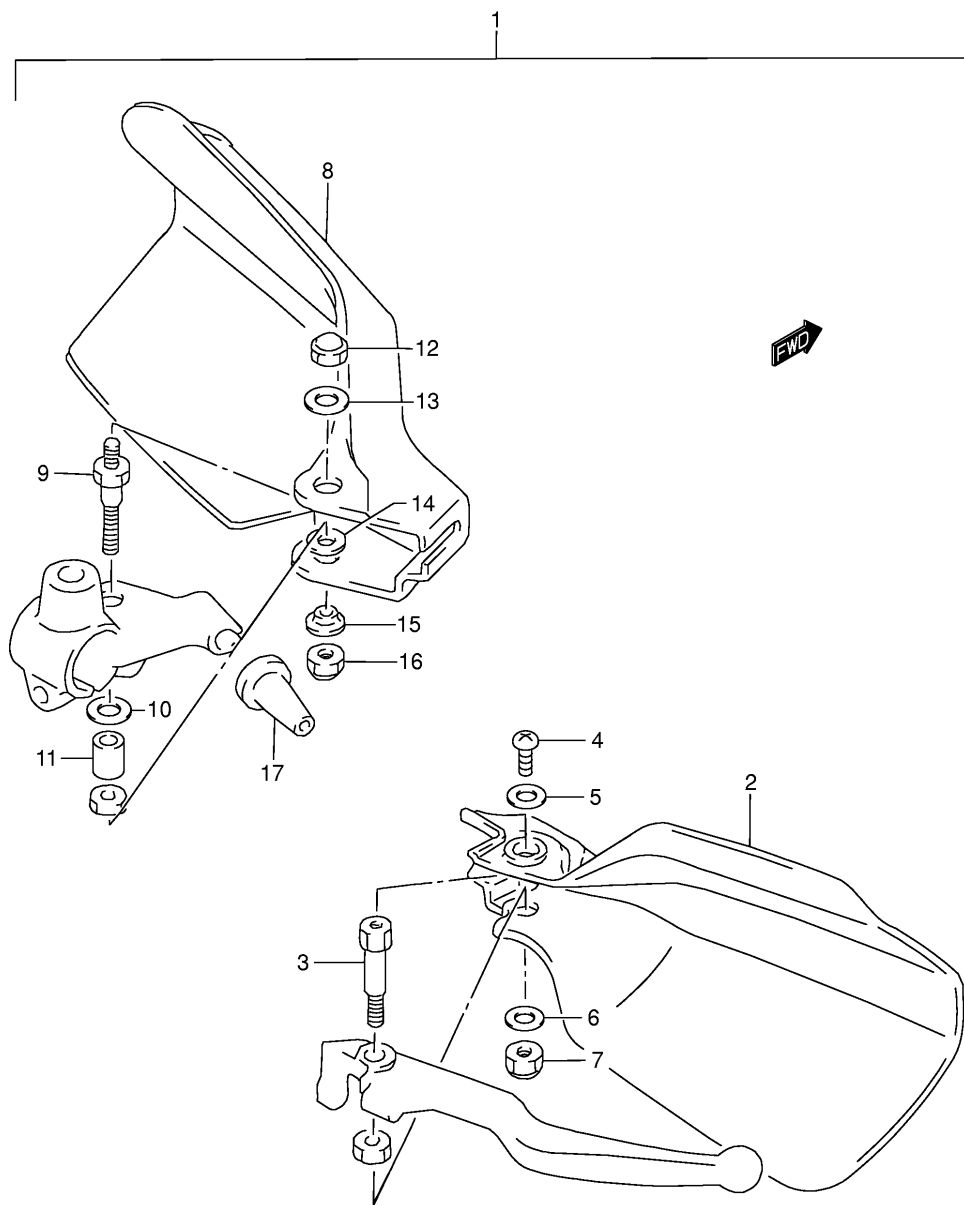 

Ref No	Part No	Description
1	57300-05810-YU1	Cover Set, Knuckle (yellow)
1	57300-05810-YJ4	Cover Set, Knuckle (blue)
2	57341-05D00-YU1	. . Cover, Knuckle Rh (yellow)
2	57341-05D00-YJ4	. . Cover, Knuckle Rh (blue)
3	57431-05D00	. . Bolt
4	02142-05107	. . Screw
5	09160-05043	. . Washer (5.5x16x1.2)
6	09160-06130	. . Washer (6.5x16x1.6)
7	08319-21068	. . Nut
8	57541-31D00-YU1	. . Cover, Knuckle Lh (yellow)
8	57541-31D00-YJ4	. . Cover, Knuckle Lh (blue)
9	57531-44B01	. . Bolt
10	57533-44B00	. . Washer
11	57532-44B00	. . Spacer
12	08313-10067	. . Nut
13	09160-06066	. . Washer (6.5x20x1.6)
14	09160-06019	. . Washer (6.5x16x1.2)
15	09169-06055	. . Washer
16	08319-21068	. . Nut
17	58273-31000	. . Boot, Clutch Cable

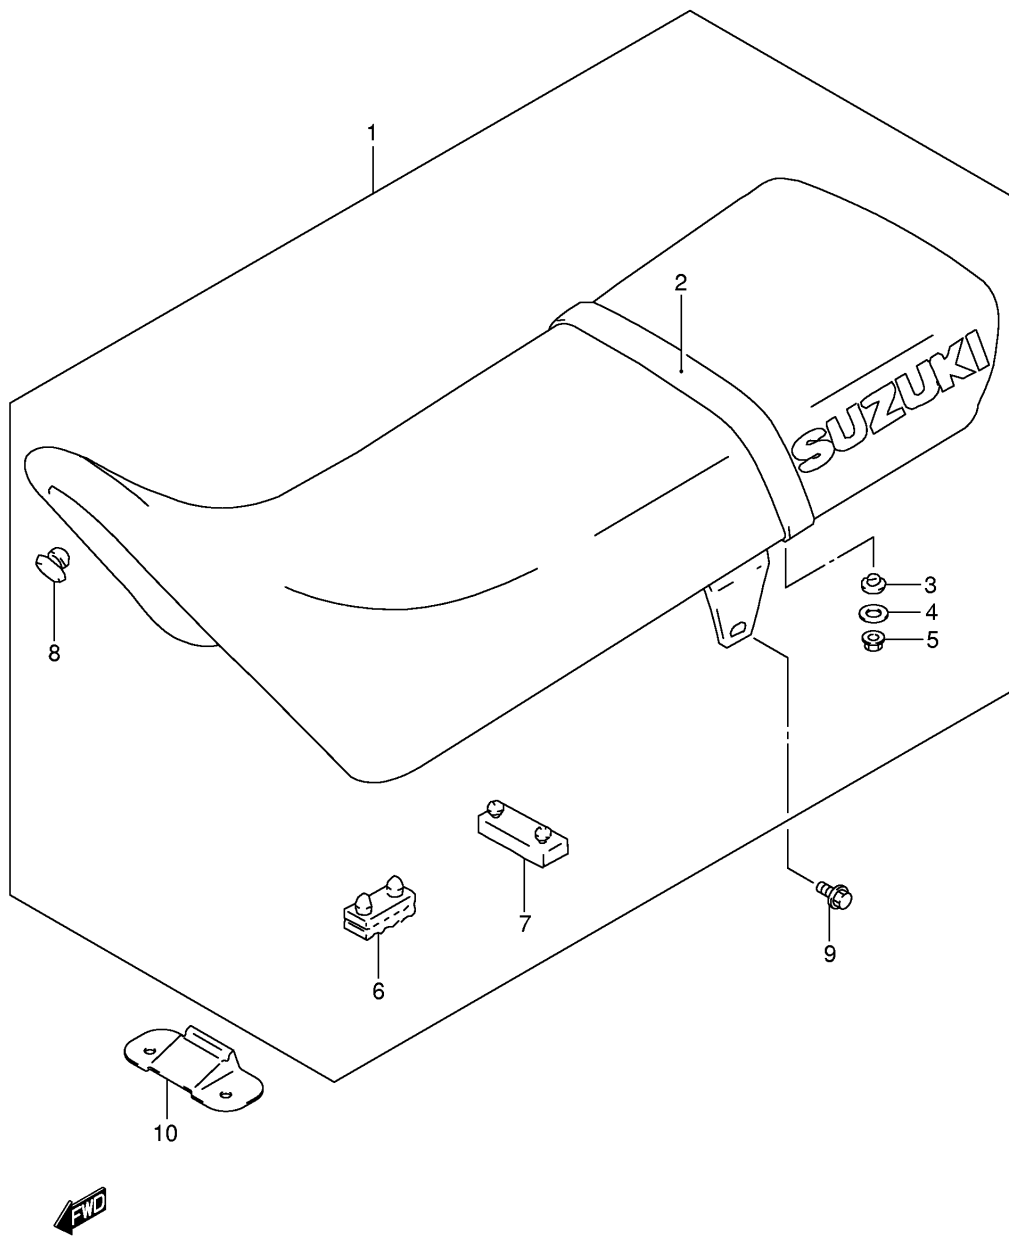 


Ref No	Part No	Description
1	45100-42AC0-N9K	Seat Set (seat Black/blue)
2	45180-42AA0-P21	• . Band, Seat (black)
3	09169-06071	• . Washer
4	08212-06201	• . Thrust Washer
5	08316-20063	• . Nut
6	45149-31300	• . Cushion
7	45149-43500	• . Cushion
8	09329-10001	• . Cushion
9	01550-08123	Bolt
10	45119-42A00	Plate, Seat Front Hook

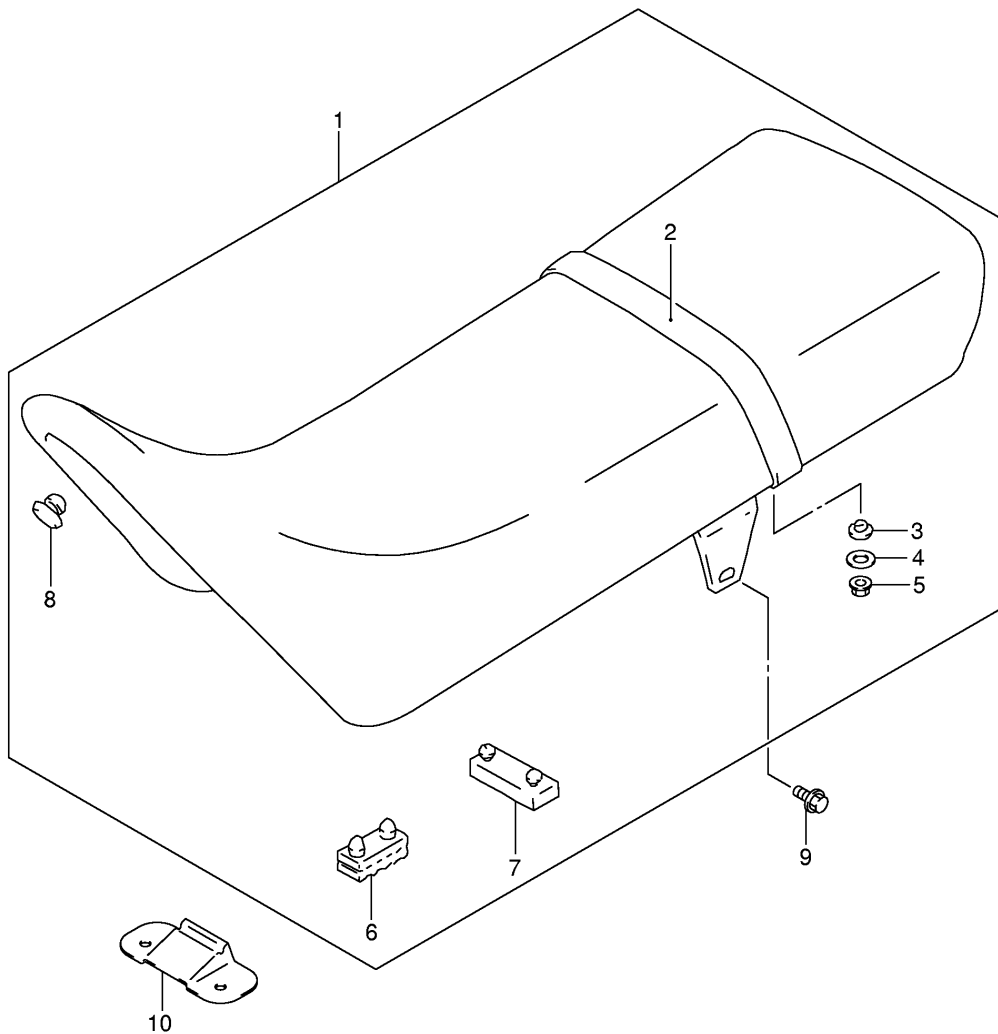 


Ref No	Part No	Description
1	45100-42AK0-6BY	Seat Set (black)
2	45180-42AA0-P21	• . Band, Seat (black)
3	09169-06071	• . Washer
4	08212-06201	• . Thrust Washer
5	08316-20063	• . Nut
6	45149-31300	• . Cushion
7	45149-43500	• . Cushion
8	09329-10001	• . Cushion
9	01550-08123	Bolt
10	45119-42A00	Plate, Seat Front Hook




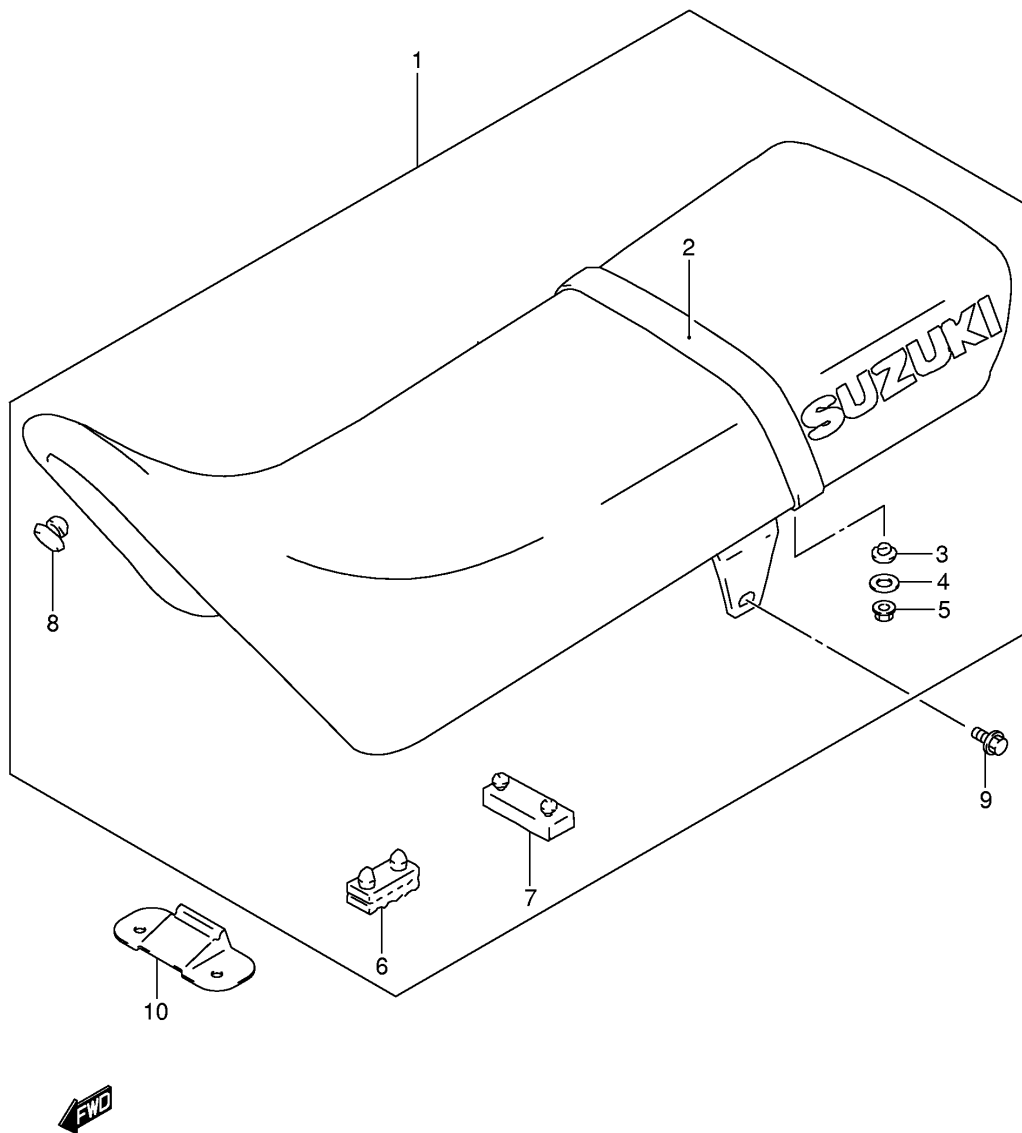 

Ref No	Part No	Description
1	45100-42AP0-BAE	Seat Set
1	45100-42AP0-BDL	Seat Set
2	45180-42AA0-P21	• . Band, Seat (black)
3	09169-06071	• . Washer
4	08212-06201	• . Thrust Washer
5	08316-20063	• . Nut
6	45149-31300	• . Cushion
7	45149-43500	• . Cushion
8	09329-10001	• . Cushion
9	01550-08123	Bolt
10	45119-42A00	Plate, Seat Front Hook

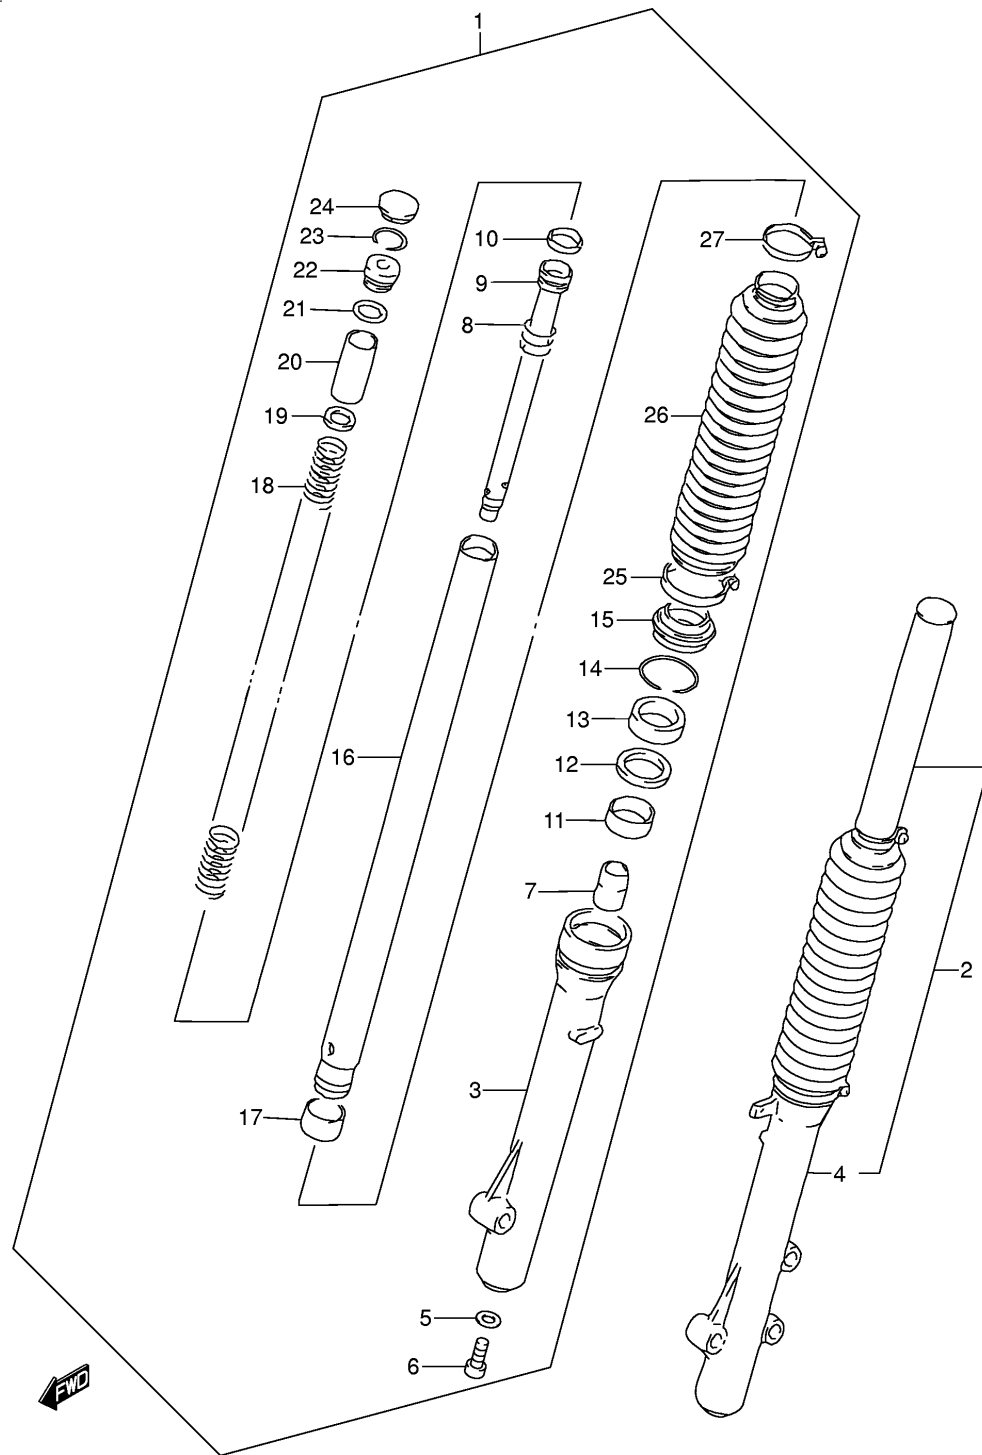 



Ref No	Part No	Description
1	51103-42AA0	Damper Assy, Front Fork Rh
2	51104-42AA0	Damper Assy, Front Fork Lh
3	51131-01A01	. Tube, Outer Rh
4	51141-01A01	. Tube, Outer Lh
5	51148-36011	. Gasket
6	51147-42AA0	. Bolt, Center
7	51195-43530	. Piece, Oil Lock
8	51177-01A00	. Spring, Rebound
9	51146-42AA0	. Cylinder
10	51196-45200	. Ring, Piston
11	51152-33300	. Bush, Guide
12	51168-30B00	. Spacer, Seal
13	51153-19D10	. Seal, Oil
14	51156-01A00	. Ring, Oil Seal Stopper
15	51173-01A00	. Dust Seal
16	51110-01A30	. Tube, Inner
17	51121-33300	. Piston
18	51171-42AA0	. Spring, Main
19	51192-20510	. Seat, Spring
20	51176-42AA0	. Spacer, Spring
21	51181-31030	. O Ring
22	51175-47400	. Bolt, Spring
23	51169-47400	. Ring, Stopper
24	51189-31230	. Cap
25	51576-42AA0	Band, Boot Lower
26	51571-01A00-019	Boot (black)
27	51575-01A00	Band, Boot Upper

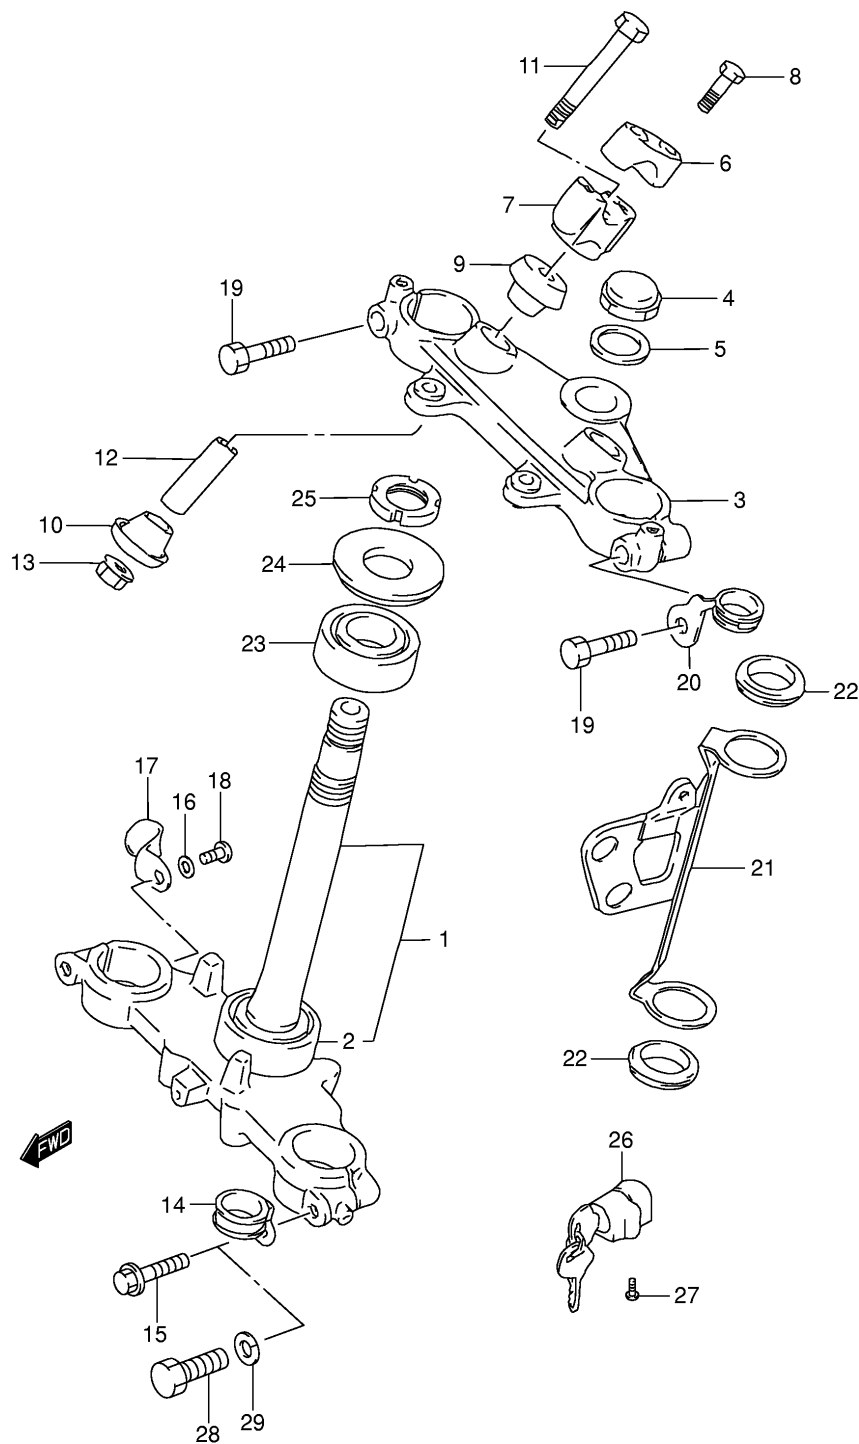 

Ref No	Part No	Description
1	51410-42AB0	Stem, Steering (black)
2	09265-30009	• . Bearing (30x55x17)
3	51311-44AA0-291	Head, Steering Stem (black)
4	51353-24B00	Nut, Cap
5	51354-14D00	Washer
6	56211-27200-291	Holder, Handle Upper (black)
7	56221-42A00-291	Holder, Handle Lower (black)
8	01550-08353	Bolt
9	56240-42A00	Rubber, Handle Holder
10	56242-28C60	Rubber, Lower
11	56321-27E00	Bolt, Lower Holder
12	56243-42A00	Spacer
13	08319-31107	Nut
14	51452-42A00	Clip
15	01550-10403	Bolt
16	08321-01067	Lock Washer
17	51452-05130	Clip
18	02112-06087	Screw
19	01550-10403	Bolt
20	51452-48700	Clip
21	51530-42A00	Bracket, Headlamp Rh
21	51540-42A00	Bracket, Headlamp Lh
22	51553-34280	Cushion
23	09265-25019	Bearing (25x47x15)
24	51643-01B10	Seal, Steering Upper Dust
25	51631-08D30	Nut, Steering
26	51900-44810	Lock Set, Steering
27	02112-35123	Screw
28	51451-42A00	Bolt
29	08321-01103	Lock Washer


Ref No	Part No	Description
1	54111-44A10	Hub, Front Wheel (silver)
2	09180-12146	Spacer (12.5x19x60.50)
3	08113-62017	Bearing, Rh
4	08133-62017	Bearing, Lh
5	54711-44A01	Axle, Front
6	54740-02B40	Spacer, Front Axle Lh
7	54600-01A00	Box Assy, Speedometer Gear
8	59221-13A01	Disc, Front Brake
9	09106-08155	Bolt, Disc
10	08322-01123	Washer
11	09141-12004	Nut
12	04111-30308	Pin, Cotter
13	55110-42AA0	Tire, Front (70/100-21 44p) (bridgestone)
14	55200-16510	Tube Assy, Wheel Inner
15	55261-32E00	Protector, Wheel Inner Tube
16	55311-42AA0	Rim, Front Wheel (21x1.60)
17	55320-42A00	Spoke Set, Front Wheel

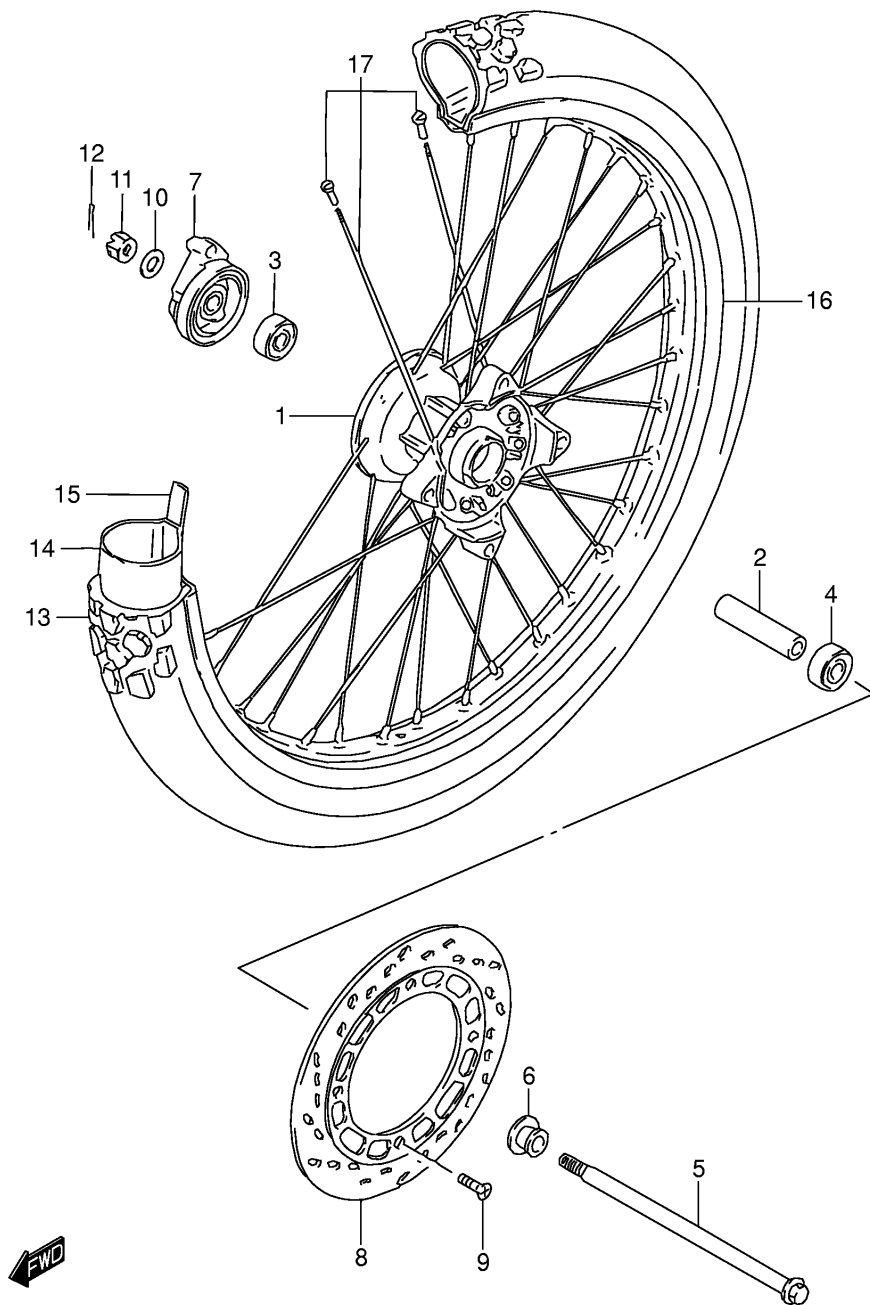 

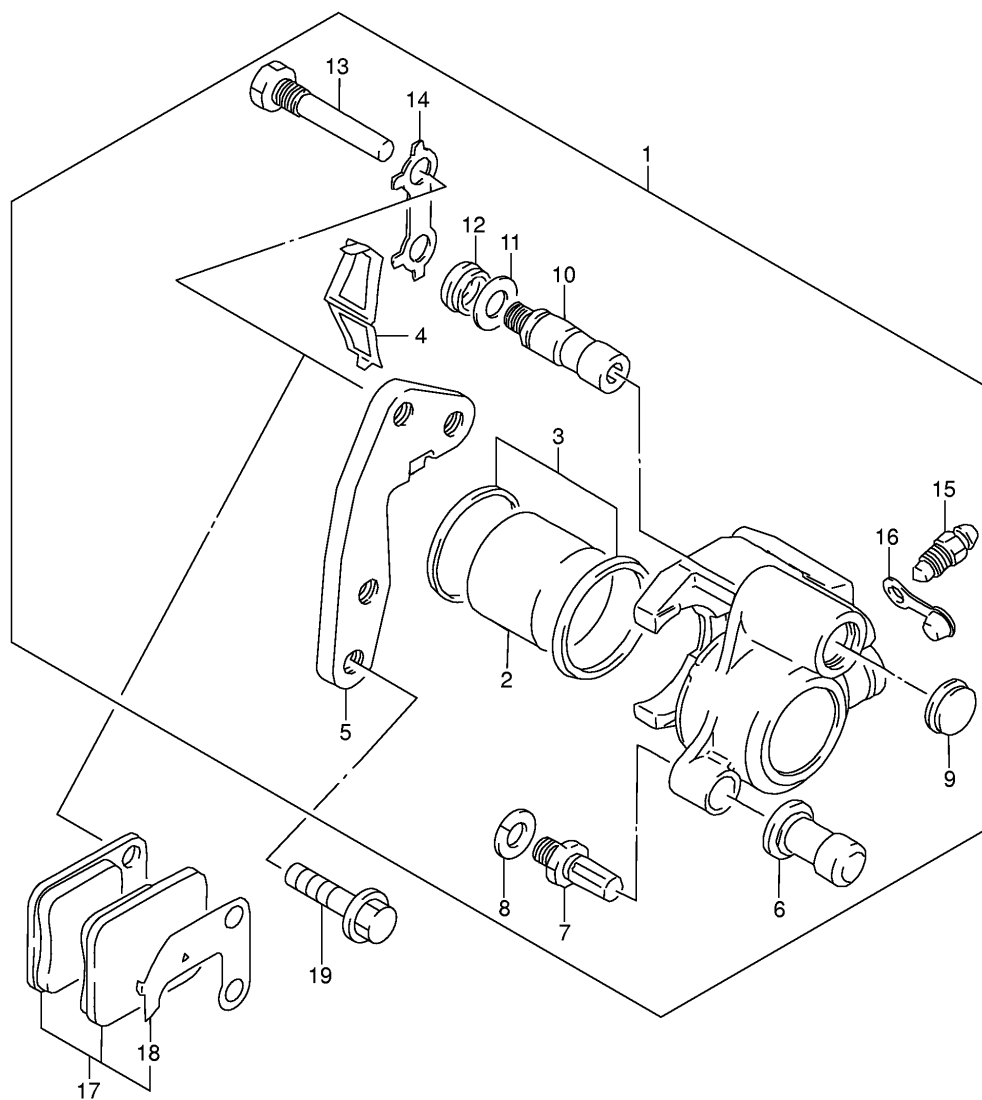 


Ref No	Part No	Description
1	59300-42A10-999	Caliper Assy, Front Lh
2	59300-13810	• . Piston Set
3	69100-13820	• • . Seal Set, Piston
4	59315-13A00	• . Spring
5	59351-13A01	• . Bracket
6	59386-13A00	• . Boot
7	59382-13A00	• . Bolt
8	59314-13A00	• . Washer
9	59384-13A00	• . Dust Seal
10	59305-13A01	• . Pin, Slide
11	59306-13A00	• . Spring
12	59303-13A00	• . Boot
13	59345-13A00	• . Pin
14	59346-13A00	• . Washer
15	59121-01A00	• . Bleeder
16	59122-01A00	• . Cap, Bleeder
17	59300-42880	Pad & Shim Set
18	59371-13A00	• . Shim
19	09103-08269	Bolt (8x30)



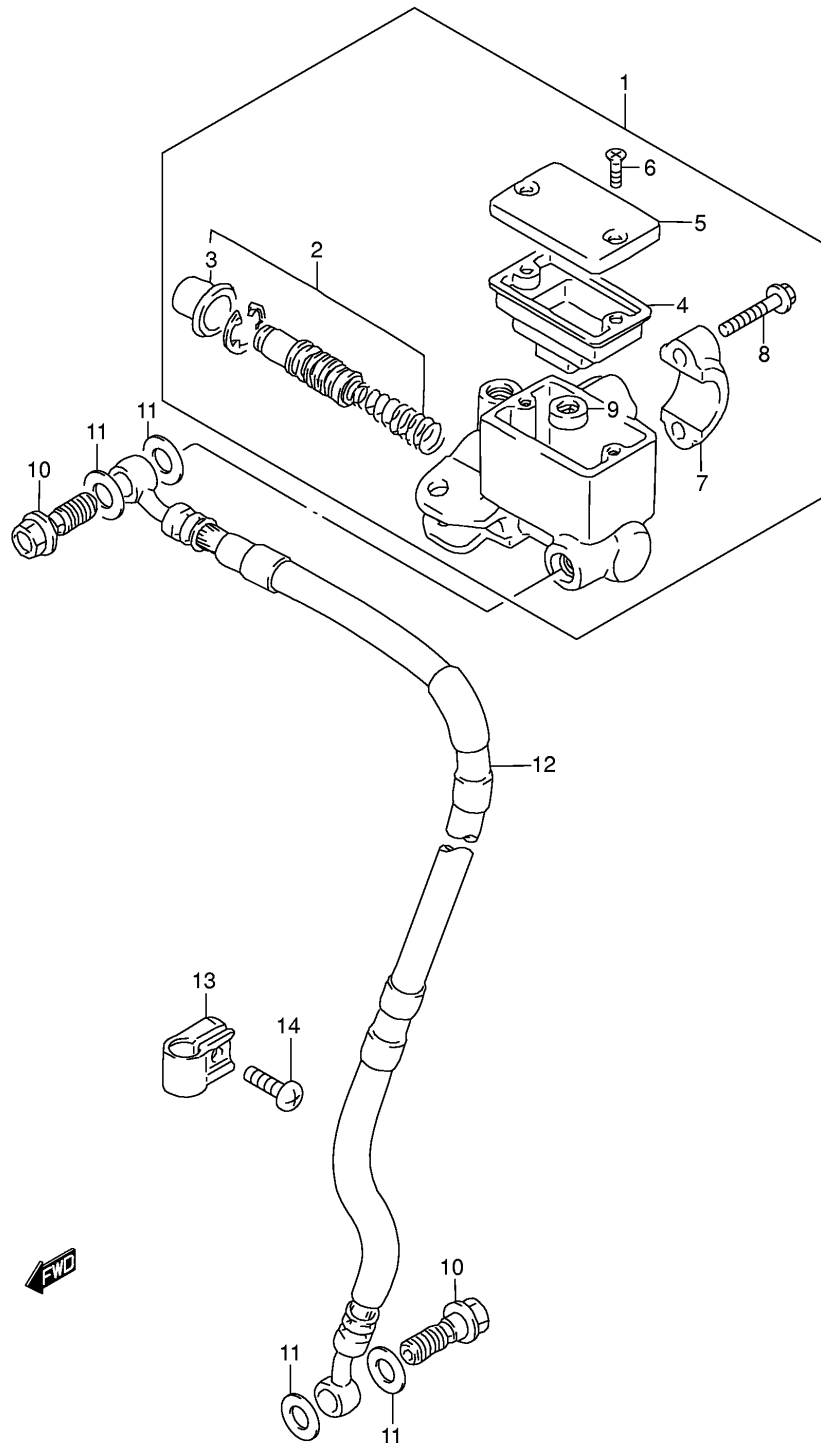 



Ref No	Part No	Description
1	59600-03D00	Cylinder Assy, Front Master
2	69600-38810	. Piston/cup Set
3	59666-44300	.. Boot
4	59667-44B00	. Diaphragm
5	59669-03D00	. Cap
6	02122-04123	. Screw
7	59671-03D00	. Holder
8	59675-27C00	. Bolt
9	59748-14500	. Separator
10	09360-10041	Union Bolt (10x22)
11	09161-10009	Washer (10x15x1.5)
12	59480-44AA0	Hose, Front Brake
13	58621-07A10	Clamp, Brake Hose
14	02142-06163	Screw

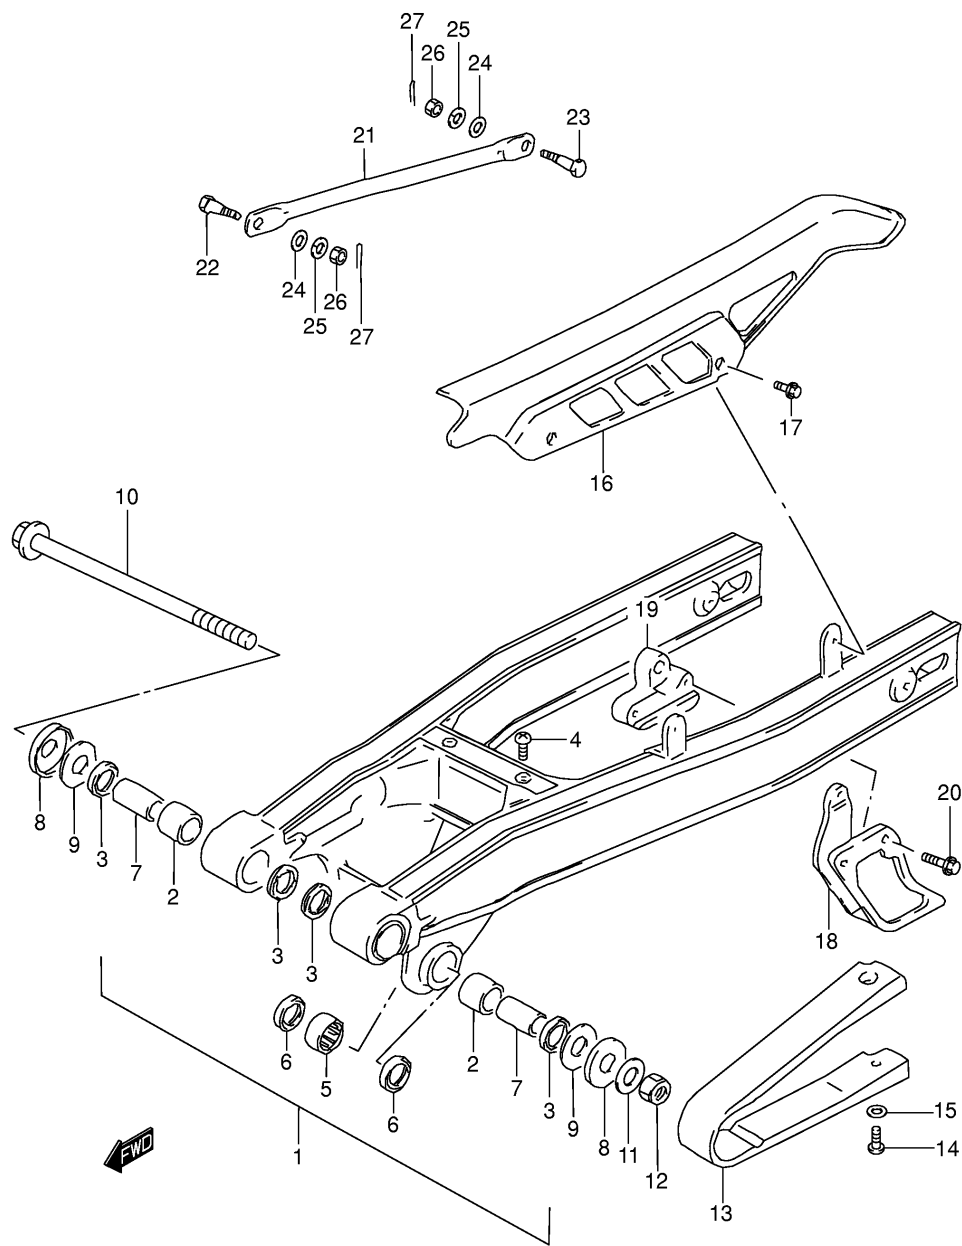 

Ref No	Part No	Description
1	61100-42840	Swinging Arm Set, Rear
2	61261-13700	. Bushing, Pivot
3	09283-20031	. Oil Seal (20x27x5)
4	02142-06163	. Screw
5	09263-20053	. Bearing (20x27x25)
6	62647-44A00	. Seal, Dust (20x27x4)
7	61251-42A00	Spacer, Pivot
8	61262-40400	Cover, Dust Seal
9	08211-14322	Thrust Washer
10	61211-26B01	Shaft, Pivot
11	09160-14057	Washer (14.5x24x2.3)
12	09159-14019	Nut
13	61273-42A01	Buffer, Chain Touch Defense
14	02142-06203	Screw
15	09169-06037	Washer
16	61311-01A03	Case, Chain
17	09116-06096	Bolt (6x10)
18	61341-13A00	Guide, Chain
19	61345-42A00	Rubber, Chain Guide
20	01550-06203	Bolt
21	64311-42A00-13L	Torque Link, Rear (silver)
22	09111-08088	Bolt, Torque Link Fr
23	09111-08013	Bolt (8x26.5)
24	08322-01083	Washer
25	09162-08008	Washer
26	09140-08008	Nut
27	04111-20208	Cotter Pin


Ref No	Part No	Description
1	62600-42812	Lever Set, Rear Cushion
2	09269-12006	• . Bearing (12x26x16)
3	62277-27C20	• . Ring, Bearing Stopper
4	09263-37003	• . Bearing (37x47x20)
5	62624-42A00	Seal, Dust
6	62623-42A11	Spacer, Rear Suspension Eccentric
7	62646-42A11	Spacer, Cushion Lever Shaft
8	62628-42AA0	Washer, Rear Cushion Lever Center Lh
9	62625-42AA0	Washer, Rear Cushion Lever Center Rh
10	62621-42AA0	Shaft, Rear Cushion Lever Center
11	08319-21128	Nut
12	62647-05A00	Seal, Dust Rear Cushion Front
13	62316-05A01	Spacer, Rear Cushion Front
14	62668-42A02	Bolt, Cushion Lever Front
15	08319-31128	Nut
17	62226-20900	• . Seal, Dust
18	62684-20900	• . Spacer
19	62226-02B00	• . Seal, Dust Lower
20	62684-31300	• . Collar, Lower
21	62311-14501	Bolt, Upper (10x58)
22	09103-10126	Bolt, Lower (10x48)
23	09159-10058	Nut

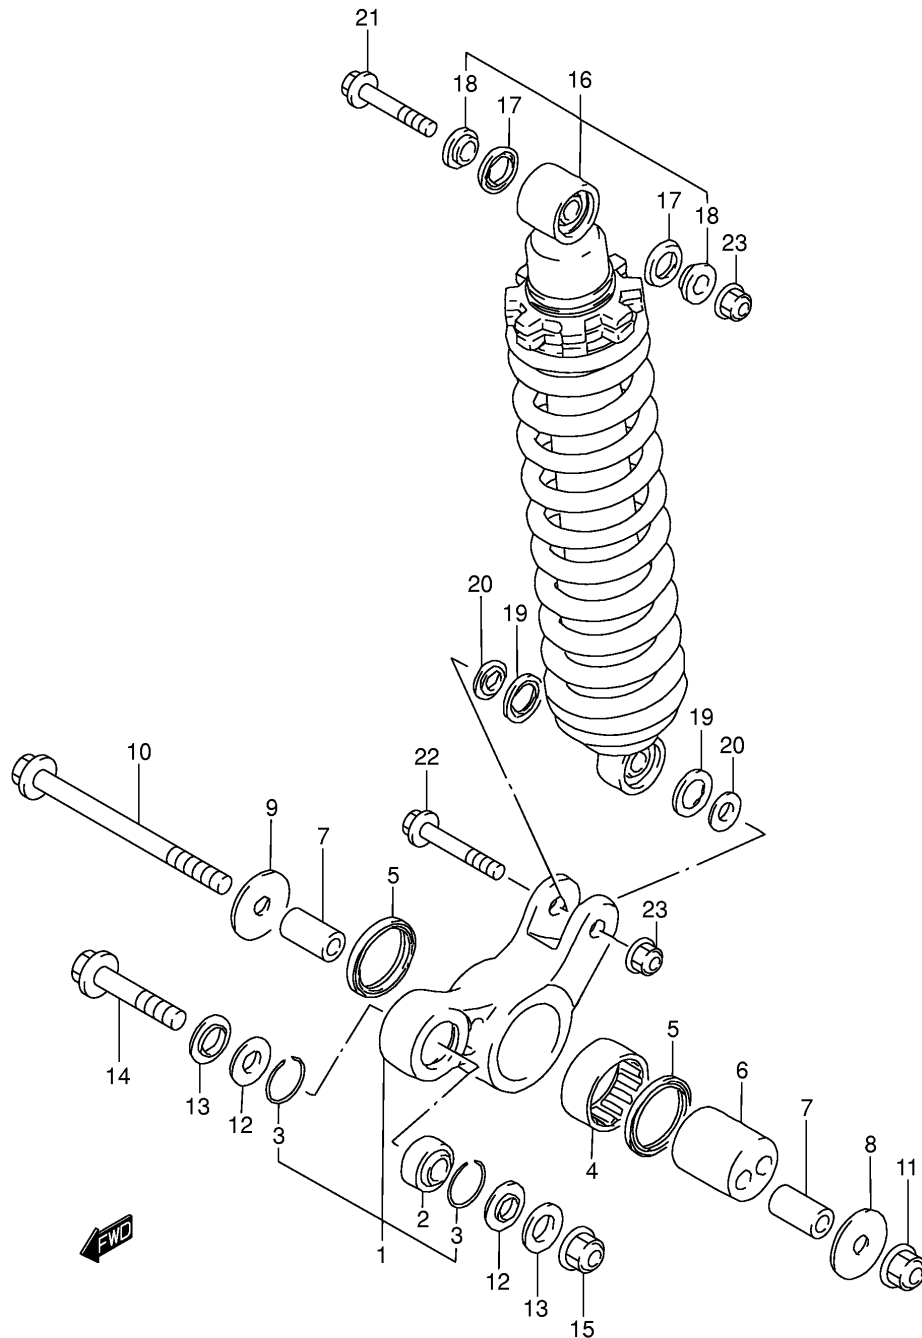 

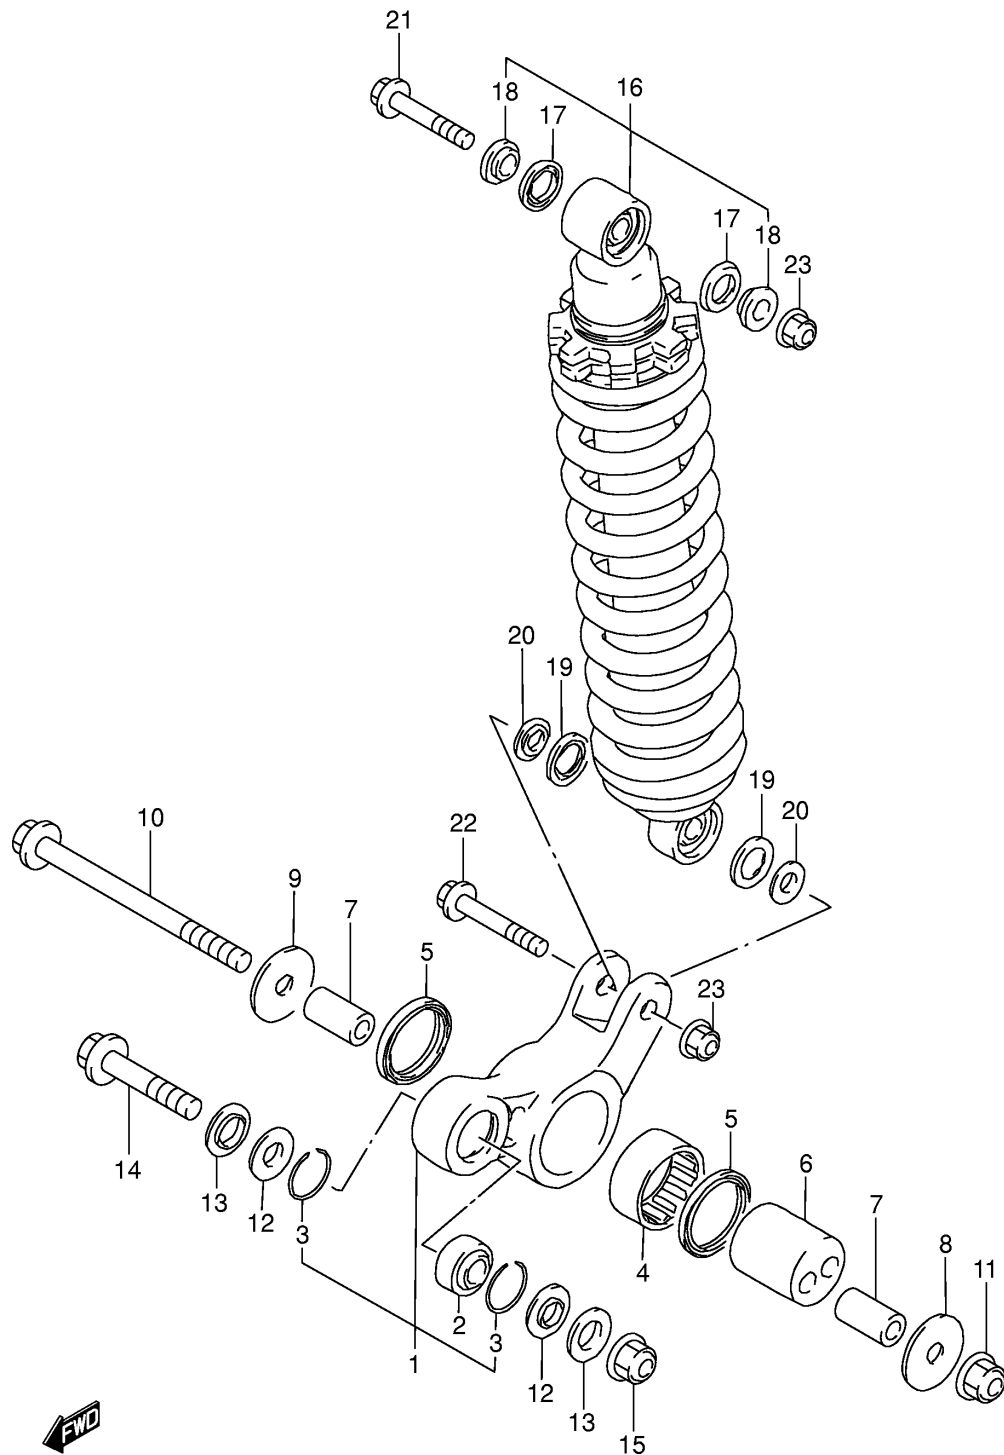 

Ref No	Part No	Description
1	62600-42812	Lever Set, Rear Cushion
2	09269-12006	• . Bearing (12x26x16)
3	62277-27C20	• . Ring, Bearing Stopper
4	09263-37003	• . Bearing (37x47x20)
5	62624-42A00	Seal, Dust
6	62623-42A11	Spacer, Rear Suspension Eccentric
7	62646-42A11	Spacer, Cushion Lever Shaft
8	62628-42AA0	Washer, Rear Cushion Lever Center Lh
9	62625-42AA0	Washer, Rear Cushion Lever Center Rh
10	62621-42AA0	Shaft, Rear Cushion Lever Center
11	08319-21128	Nut
12	62647-05A00	Seal, Dust Rear Cushion Front
13	62316-05A01	Spacer, Rear Cushion Front
14	62668-42A02	Bolt, Cushion Lever Front
15	08319-31128	Nut
16	62100-44AB2-163	Absorber Assy, Rear Shock (yellow)
16	62100-44AB2-28W	Absorber Assy, Rear Shock (white)
16	62100-44AC0-163	Absorber Assy, Rear Shock (yellow)
16	62100-44AC0-28W	Absorber Assy, Rear Shock (white)
17	62226-20900	• . Seal, Dust
18	62684-20900	• . Spacer
19	62226-02B00	• . Seal, Dust Lower
20	62684-31300	• . Collar, Lower
21	62311-14501	Bolt, Upper (10x58)
22	09103-10126	Bolt, Lower (10x48)
23	09159-10058	Nut



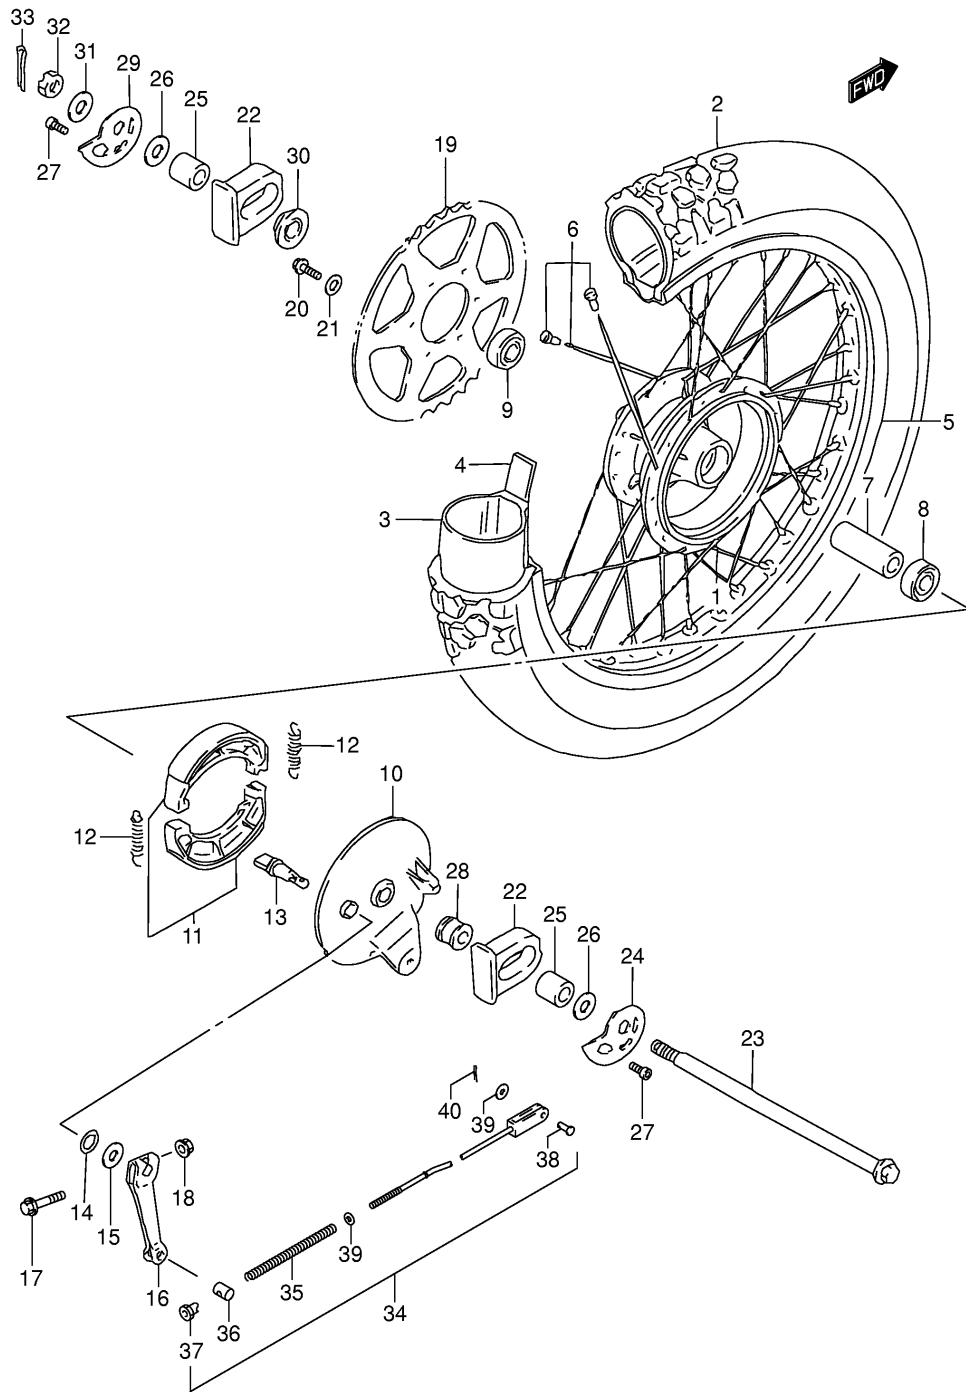 

Ref No	Part No	Description
1	64110-44A10	Hub, Rear Wheel (silver)
2	65110-42AA0	Tire, Rear (100/90-18 56p) (bridgestone)
3	65200-42AA0	Tube Assy, Wheel Inner
4	65261-33030	Protector, Wheel Inner Tube
5	65311-42AA0	Rim, Rear Wheel (18x2.15)
6	65320-42AA0	Spoke Assy, Rear Wheel
7	09180-15013	Spacer (15.3x21.7x107.50)
8	08143-62027	Bearing, Rh
9	08123-63027	Bearing, Lh
10	64210-44A00	Panel, Rear Brake Anchor
11	54400-07870	Shoe Set, Brake
12	09443-07001	Spring
13	54441-29305	Cam, Brake
14	09280-14011	O Ring (d:2.5,id:13.8)
15	09160-14055	Washer (14.5x22x1.6)
16	64451-30501	Lever, Rear Brake Cam
17	01550-06403	Bolt
18	08316-10063	Nut
19	64511-42A01	Sprocket, Rear (nt:45)
20	09103-08048	Bolt (8x30)
21	09164-08020	Washer
22	61470-42A00	Cap, Rear Swinging Arm
23	64711-44A11	Axle, Rear
24	61411-42A00	Adjuster, Chain Rh
25	61413-42A00	Spacer, Chain Adjuster
26	09160-15039	Washer (15.5x30x3.20)
27	61431-42A10	Bolt, Chain Adjuster
28	64741-42A00	Spacer, Axle Rh
29	61421-42A00	Adjuster, Chain Lh
30	64750-42A00	Spacer, Axle Lh
31	09160-14033	Washer (14.5x30x3.2)
32	08314-40143	Nut
33	04111-30308	Pin, Cotter
34	43300-42A02	Rod Assy, Rear Brake
35	09440-09004	• Spring
36	09209-13018	• Pin
37	09150-06014	• Nut
38	09200-06013	• Pin
39	08322-01063	• Washer
40	04111-20208	• Cotter Pin

Ref No	Part No	Description
1	99104-32020	Thread Lock Super (1361a)
1	99104-32030	Thread Lock Super (1363a)
1	99000-32050	Thread Lock Super (1342)
1	99000-32100	Thread Lock Super (1305)
1	99000-32130	Thread Lock Super (1360)
2	99000-32040	Thread Lock Cement
3	99000-31110	Suzuki Bond (1215)
3	99000-31140	Suzuki Bond (1207b) Black
4	99000-25030	Suzuki Super Grease
5	99000-25140	Suzuki Moly Paste
6	99000-25110	Grease, Brake Pad (pbc)

